



# Cafetera térmica de 8 tazas

## 8-Cup Thermal Coffeemaker



**IMPORTANTE / IMPORTANT**

LAVE LA JARRA ANTES DEL PRIMER USO

WASH CARAFE BEFORE FIRST USE!

### Customer Care Line:

Mexico

01-800 714-2503

USA

1-800-231-9786

Accesorios/Partes (EE.UU)

Accessories/Parts (USA)

1-800-738-0245


**Modelo  
Model**

**DE791B**




Este producto puede variar ligeramente del que aparece ilustrado

## PANEL DE CONTROL

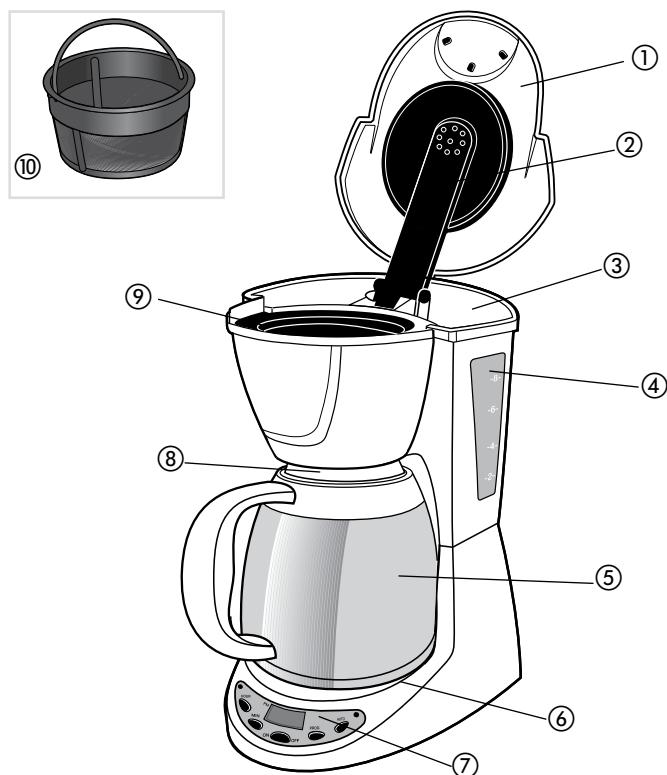

1. Tapa enteriza
2. Rociador de agua
3. Tanque de agua
4. Indicador del nivel de llenado
5. Jarra térmica de 8 tazas/1301 ml (44 oz)
6. Plato de la jarra
7. Panel de control
8. Tapa de colado
9. Cesto de colar removible
10. Filtro permanente dorado

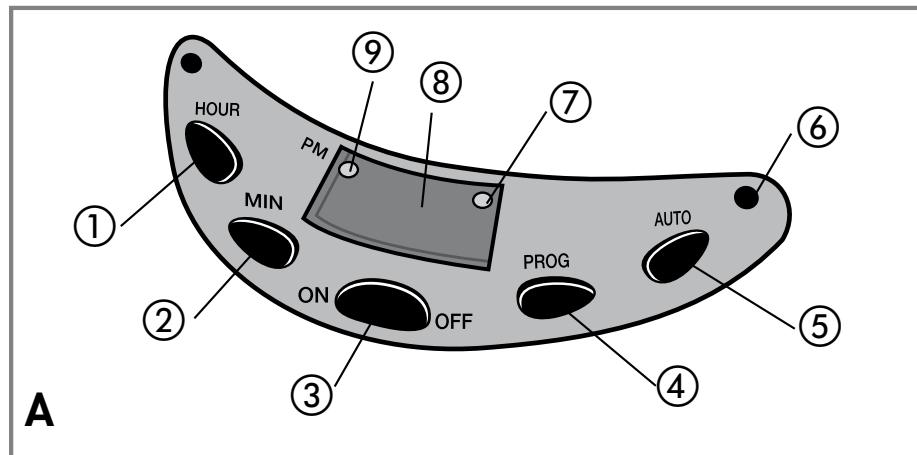

1. Botón de hora (HOUR)
2. Botón de minutos (MIN)
3. Botón de encendido y apagado(ON/OFF)
4. Botón de programación (PROG)
5. Botón de colado automático (AUTO)
6. Luz indicadora del ciclo de colado
7. Luz indicadora del ciclo de colado automática
8. Visor digital
9. P.M. Luz indicadora





Please Read and Save this Use and Care Book.

## IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- ❑ Read all instructions.
- ❑ Do not touch hot surfaces. Use handle or knobs.
- ❑ To protect against electric shock, do not place cord, plug or appliance in water or other liquids.
- ❑ Close supervision is necessary when any appliance is used by or near children.
- ❑ Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts and before cleaning the appliance.
- ❑ Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return the appliance to the nearest authorized service facility for examination, repair, or adjustment. Or, call the appropriate toll-free number on the cover of this manual.
- ❑ The use of an accessory not evaluated for use with this appliance may cause injuries.
- ❑ Do not use outdoors.
- ❑ Do not let cord hang over the edge of table or counter, or touch hot surfaces.
- ❑ Do not place on or near a hot gas or electric burner or in a heated oven.
- ❑ Do not use appliance for other than intended use.
- ❑ Keep the lid on the carafe when in use.
- ❑ Scalding may occur if the lid is removed during the brewing cycles.
- ❑ The carafe is designed for use with the appliance. It must never be used on a range top.
- ❑ Do not set a hot carafe down on a wet or cold surface.
- ❑ Do not use the carafe if the glass is cracked or has a loose or weakened handle.
- ❑ Do not clean the carafe with abrasive cleansers, steel wool, or other abrasive material.

## SAVE THESE INSTRUCTIONS.

This product is for household use only.

### POLARIZED PLUG (120V Models Only)

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

### TAMPER-RESISTANT SCREW


**Warning:** This appliance is equipped with a tamper-resistant screw to prevent removal of the outer cover. To reduce the risk of fire or electric shock, do not attempt to remove the outer cover. There are no user-serviceable parts inside. Repair should be done only by authorized service personnel.

### ELECTRICAL CORD

- a) A short power-supply cord (or detachable power-supply cord) is to be provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.
- b) Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.
- c) If a long detachable power-supply cord or extension cord is used,
  - 1) The marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance,
  - 2) If the appliance is of the grounded type, the extension cord should be a grounding-type 3-wire cord, and
  - 3) The longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over.


**Note:** If the power supply cord is damaged, it should be replaced by qualified personnel; in Latin America, by an authorized service center.

Product may vary slightly from what is illustrated.

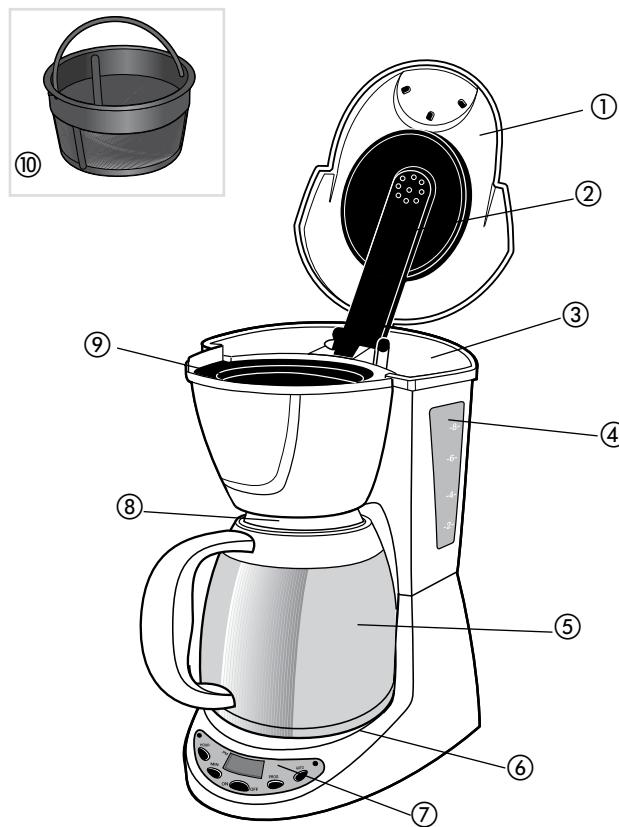

1. One piece cover
2. Water showerhead
3. Water reservoir
4. Water level window
5. 8-cup (44 oz./1301 ml) thermal carafe with lid
6. Carafe plate
7. Control panel
8. Brew-thru lid
9. Removable brew basket
10. Permanent gold-tone filter

## CONTROL PANEL

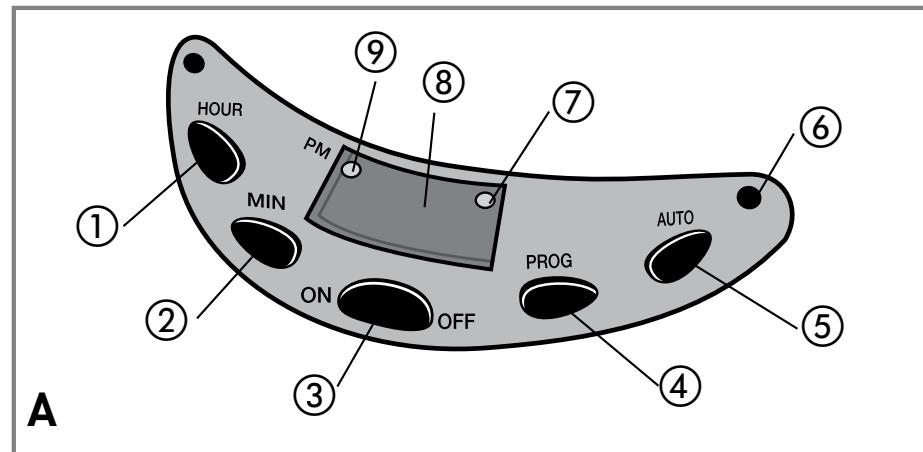

1. Hour button
2. Min button
3. On/Off button
4. Prog (program) button
5. Auto button
6. Brewing indicator light
7. Auto-Brew indicator light
8. Digital display
9. P.M. indicator light



- When the clock returns to the current time, press "AUTO" button to reactivate the timer.
- The auto-brew indicator light on the upper right hand corner of the digital display lights up (**see fig. A**).
- To automatically brew coffee again at the same pre-set auto-brew time, prepare coffeemaker for brewing and press the "AUTO" button.
- If you want to change the time of the auto-brew just follow steps 1-3.


**Note:** The auto-brew function can be canceled at any time by pressing the "AUTO" button a second time. The coffeemaker and the auto brew indicator light automatically shut off.

**Important:** If the coffeemaker is unplugged or a power failure occurs, the clock/timer and auto-brew have to be programmed again in order to automatically brew your coffee.

## Care and Cleaning

This product contains no use serviceable parts. Refer service to qualified service personnel. **Important:** Do not use abrasive cleansers or scouring pads. Never immerse the coffeemaker in water. Do not place the thermal carafe in the dishwasher.

### Cleaning

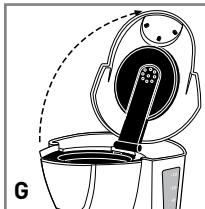


- Make sure the unit is shut off and cool.
- Open the cover and remove the brew basket and discard the paper filter and grounds (**G**).
- The brew basket may be hand washed with warm sudsy water or place on the top rack of the dishwasher.
- Dry the brew basket and put back in place.
- The coffeemaker's exterior, control panel area and carafe plate may be clean with a soft damp cloth.
- To clean the thermal carafe, open the brew-thru lid by turning it counterclockwise.
- Wash the thermal carafe by hand with warm sudsy water (**H**).
- Dry the thermal carafe.
- To insert brew-thru lid into thermal carafe, align the brew-thru lid arrow with the "Insert and Align" arrow on the thermal carafe and twist clockwise (**see fig B**).
- Turn the lid clockwise until it is in the "Close" position (**see fig C**).
- Place the thermal carafe back on the carafe plate.

### Mineral Deposits and Clogging

 Mineral deposits left by hard water can clog your coffeemaker. Cleaning is recommended every 3 months. Excessive steaming or a prolonged brewing cycle is a sign that a cleaning is needed. The frequency of flushing out deposits is affected by your usage and water hardness. During cleaning, more steaming occurs than when brewing coffee and may emit spurts of steam.

- Pour white vinegar into water reservoir up to 4-cup level on water level window. Add water up to 8-cup line.
- Put a basket style paper filter in the brew basket and close the one piece water reservoir and brew basket lid. Set empty thermal carafe with the tightened lid in the coffeemaker carafe plate.
- Turn on coffeemaker and let half the cleaning solution brew into carafe (till water level goes down to around "4"). Turn off coffeemaker and let it soak for at least 15 minutes to soften the deposits.

- Turn on coffeemaker and brew remaining cleaning solution into carafe.
- Turn off coffeemaker, empty carafe and discard soiled paper.
- Fill reservoir with water to 8-cup line, replace empty carafe, then turn on coffeemaker for a complete brew cycle to flush out remaining cleaning solution. You may have to repeat this to eliminate the vinegar smell/taste.
- Wash the brew basket and carafe as instructed in "CLEANING."



### WARNING

#### RISK OF FIRE OR ELECTRIC SHOCK. DO NOT OPEN.

The lightning symbol refers to "dangerous voltage"; the exclamation symbol refers to maintenance instructions. See below.

**WARNING:** To reduce the risk of fire or electric shock, do not remove the cover of the coffeemaker. There are no user-serviceable parts inside. Repair should be done by authorized service personnel only.

# NOTES/NOTAS

## ¿NECESITA AYUDA?

Para servicio, reparaciones o preguntas relacionadas al producto, por favor llame al número del centro de servicio que se indica para el país donde usted compró su producto.

NO devuélva el producto al fabricante. Llame o lleve el producto a un centro de servicio autorizado.

## DOS AÑOS DE GARANTÍA LIMITADA

(No aplica en México, Estados Unidos o Canadá)

### ¿Qué cubre la garantía?

- La garantía cubre cualquier defecto de materiales o de mano de obra que no haya sido generado por el uso incorrecto del producto.

### ¿Por cuánto tiempo es válida la garantía?

- Por dos años a partir de la fecha original de compra.

### ¿Cómo se obtiene el servicio necesario?

- Conserve el recibo original como comprobante de la fecha de compra, comuníquese con el centro de servicio de su país y haga efectiva su garantía si cumple lo indicado en el manual de instrucciones.

### ¿Cómo se puede obtener servicio?

- Conserve el recibo original de compra.
- Por favor llame al número del centro de servicio autorizado.

### ¿Qué aspectos no cubre esta garantía?

- Los productos que han sido utilizados en condiciones distintas a las normales.
- Los daños ocasionados por el mal uso, el abuso o negligencia.
- Los productos que han sido alterados de alguna manera.
- Los daños ocasionados por el uso comercial del producto.
- Los productos utilizados o reparados fuera del país original de compra.
- Las piezas de vidrio y demás accesorios empacados con el aparato.
- Los gastos de tramitación y embarque asociados al reemplazo del producto.
- Los daños y perjuicios indirectos o incidentales.

### ¿Qué relación tiene la ley estatal con esta garantía?

- Esta garantía le otorga derechos legales específicos y el consumidor podría tener otros derechos que varían de una región a otra.



Sello del Distribuidor:

Fecha de compra:

Modelo:

**Comercializado por:**  
Applica Manufacturing, S. de R. L. de C.V.  
Presidente Mazarik No111, 1er Piso  
Col. Chapultepec Morales, Mexico D.F.  
Deleg. Miguel Hidalgo  
CP 11570  
MEXICO  
**Servicio y Reparación**  
aArt. 123 No. 95  
Col. Centro, C.P. 06050  
Deleg. Cuauhtemoc  
**Servicio al Consumidor,**  
Venta de Refacciones y Accesorios  
01 800 714 2503

#### Código de fecha / Date Code

**900 W 120 V~ 60 Hz**  
**900 W 220 V ~ 50 Hz**  
**900 W 220 V ~ 60 Hz**

#### NEED HELP?

For service, repair or any questions regarding your appliance, call the appropriate 800 number on cover of this book. Please **DO NOT** return the product to the place of purchase. Also, please **DO NOT** mail product back to manufacturer, nor bring it to a service center. You may also want to consult the website listed on the cover of this manual.

#### Two-Year Limited Warranty

**(Applies only in the United States and Canada)**

#### What does it cover?

- Any defect in material or workmanship provided; however, Applica's liability will not exceed the purchase price of product.

#### For how long?

- Two years after date of purchase.

#### What will we do to help you?

- Provide you with a reasonably similar replacement product that is either new or factory refurbished.

#### How do you get service?

- Save your receipt as proof of date of sale.
- Visit the online service website at [www.prodprotect.com/applica](http://www.prodprotect.com/applica), or call toll-free 1-800-231-9786, for general warranty service.
- If you need parts or accessories, please call 1-800-738-0245.

#### What does your warranty not cover?

- Damage from commercial use
- Damage from misuse, abuse or neglect
- Products that have been modified in any way
- Products used or serviced outside the country of purchase
- Glass parts and other accessory items that are packed with the unit
- Shipping and handling costs associated with the replacement of the unit
- Consequential or incidental damages (Please note, however, that some states do not allow the exclusion or limitation of consequential or incidental damages, so this limitation may not apply to you.)

#### How does state law relate to this warranty?

- This warranty gives you specific legal rights. You may also have other rights that vary from state to state or province to province.

**BLACK&DECKER** es una marca registrada de The Black & Decker Corporation, Towson, Maryland, E.U.

**BLACK&DECKER** is a registered trademark of The Black & Decker Corporation, Towson, Maryland, USA



Copyright © 2009 Aplica Consumer Products, Inc.

Fabricado en la República Popular de China

Impreso en la República Popular de China

Made in People's Republic of China

Printed in People's Republic of China

**Importado por / Imported by:**

**APPLICA AMERICAS, INC.**

Av. Juan B Justo 637 Piso 10

(C1425FSA) Ciudad Autonoma de Buenos Aires

Argentina

**C.U.I.T No.** 30-69729892-0

**Importado por / Imported by:**

**APPLICA MANUFACTURING, S. DE R. L. DE C. V.**

Presidente Mazarik No111, 1er Piso

Col. Chapultepec Morales, Mexico D.F

Deleg. Miguel Hidalgo

CP 11570

MEXICO

Teléfono: (55) 5263-9900

**Del interior marque sin costo**

01 (800) 714 2503