


OPERATING INSTRUCTIONS

PRODUCT MAY VARY SLIGHTLY FROM ILLUSTRATION

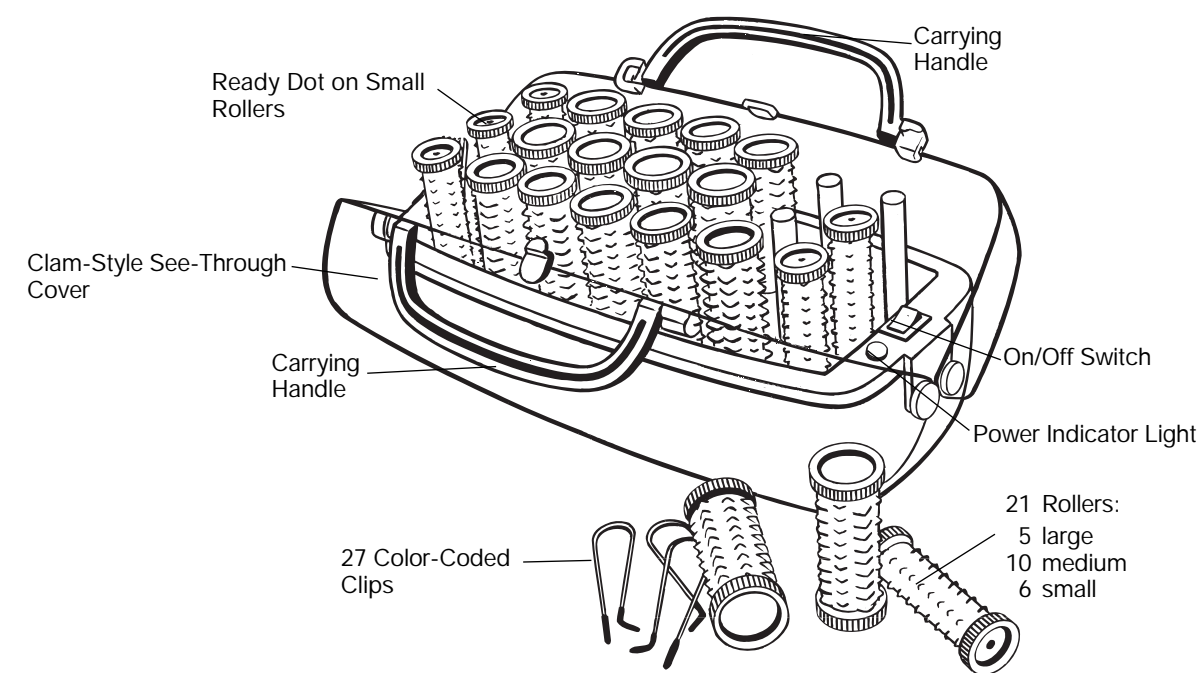

This appliance is intended for household use. It may be plugged into any AC outlet (ordinary household current). Do not use any other electrical outlet.

LINE CORD SAFETY TIPS

1. Never pull or yank on cord or the appliance.
2. To insert plug, grasp it firmly and guide it into outlet.
3. To disconnect appliance, grasp plug and remove it from outlet.
4. Before each use, inspect the line cord for cuts and/or abrasion marks. If any are found, this indicates that the appliance should be serviced and the line cord replaced. Please return it to our Service Department or to an authorized service representative.
5. Never wrap the cord tightly around the appliance, as this could place undue stress on the cord where it enters the appliance and cause it to fray and break.

DO NOT OPERATE APPLIANCE IF THE LINE CORD SHOWS ANY DAMAGE, OR IF APPLIANCE WORKS INTERMITTENTLY OR STOPS WORKING ENTIRELY.

IMPORTANT:

During the first few minutes of initial use, there may be smoke and a slight odor. This is normal and will quickly disappear.

HOW TO USE HAIRSETTER:

PRE-HEAT: Place hairsetter on a smooth, flat surface where it cannot fall into water, and plug in.

To turn the unit on, open the cover COMPLETELY and turn the power switch to "On." Close cover and allow rollers to heat. When ready dots on the small rollers turn dark, all rollers are ready for use.

BEFORE SETTING: Hair should be clean, dry or slightly damp (never wet) and free of hair sprays or hair creams. (However, setter can be used for quick touch-ups any time.)

Use the large rollers for building body and for loose waves; medium rollers for large curls; small rollers for short hair and tight curls. Remove rollers one at a time. Slide the roller off the heating post by gripping the cool rim, being careful not to touch the heating posts.

Section hair as you normally would for a roller set, taking one section of hair at a time, combing smooth and then rolling in the desired direction.

After winding the curl, fasten it with the appropriate-size clip by placing the clip crosswise over the roller.

Leave the rollers in hair for 5 minutes or more, depending on how tight you want the curl and according to whether hair is easy or hard to curl.

When hair has the desired curl, remove the clips and rollers gently without pulling. Allow curls to cool completely before brushing.

When setting is completed, unplug the unit and allow it to cool before storing.

SPECIAL ATTENTION:

If hairstyle is going to take more than the 21 rollers provided, be sure to place rollers back on the heating posts after removing from hair so rollers will always be hot and ready to use.

WARNING: Do not place unit on glass or mirrored surface while in use.

MAINTENANCE INSTRUCTIONS

This hairsetter needs little maintenance; it contains no user serviceable parts. Do not try to repair it yourself; refer it to qualified service personnel if servicing is needed.

TO CLEAN: Unplug the unit and allow it to cool completely. Wipe the case, heating posts and rollers with a damp cloth. NEVER immerse the case, heating posts and rollers in any liquid. Clips may also be cleaned with a damp cloth.

TO STORE: Unplug the hairsetter and allow to cool. Store rollers on the heating posts and put clips in their case. Close case cover. Never wrap cord tightly around appliance. Keep it loosely coiled. Do not put any stress on cord where it enters hairsetter, as this could cause the cord to fray and break. Store the appliance in a safe, dry place where it will not be damaged.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING.

KEEP AWAY FROM WATER.

DANGER - As with most electrical appliances, electrical parts are electrically live even when the switch is off.

To reduce the risk of death by electrical shock:

1. Always "unplug it" immediately after using.
2. Do not use while bathing.
3. Do not place or store appliance where it can fall or be pulled into tub or sink.
4. Do not place in or drop into water or other liquid.
5. If an appliance falls into water, "unplug it" immediately. Do not reach into the water.

WARNING - To reduce the risk of burns, electrocution, fire, or injury to persons:

1. Do not leave appliance unattended while it is operating or is plugged in.
2. Close supervision is necessary when this appliance is used by, on, or near children or invalids.
3. Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.

4. Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged in any manner or dropped into water. Take appliance to the nearest service facility for examination and repair or mechanical adjustment.
5. Keep the cord away from hot or heated surfaces. Do not wrap the cord around the appliance.
6. Never use while sleeping or while drowsy.
7. Never drop or insert any object into any opening.
8. Do not use outdoors or operate where aerosol (spray) products are being used. Do not operate where oxygen is being administered.
9. Place hairsetter on a level surface to use. Do not use on a bed or any soft surface where unit could tip over easily or be covered up.
10. Unit is hot when in use. To avoid burn hazard, do not touch the posts that hold the rollers. They are hot.
11. Do not use an extension cord with this appliance.

SAVE THESE INSTRUCTIONS

21-ROLLER EURO-STYLE HAIRSETTER

USE AND CARE BOOK

Printed in Hong Kong

2000/5-25-71

HHS-21 (UL/SPE)

