



# THE **Juiceman II**


Automatic  
Juice Extractor


Instruction  
Booklet

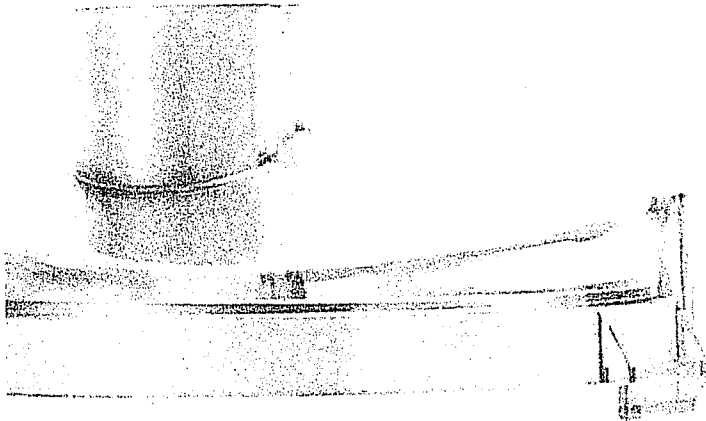

 THE  **Juiceman II**  
by Trilium

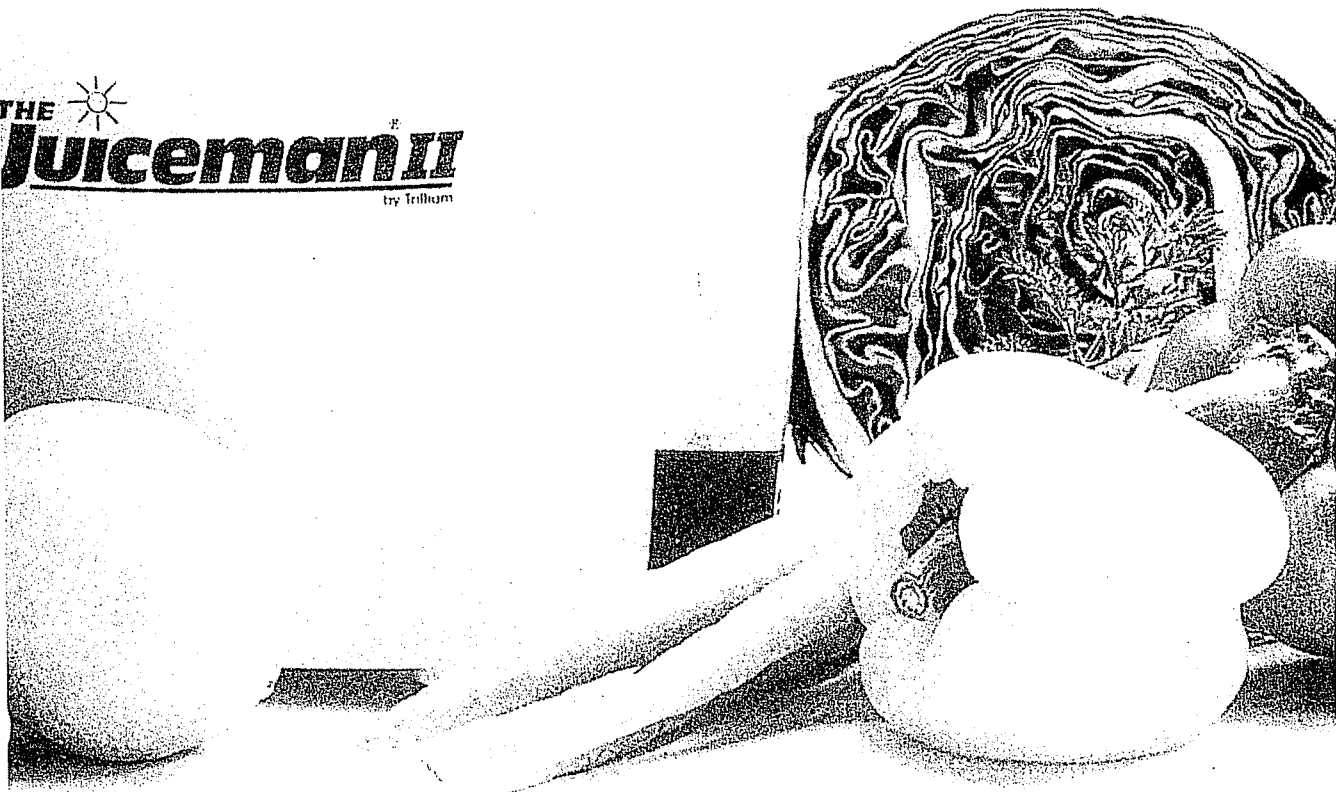



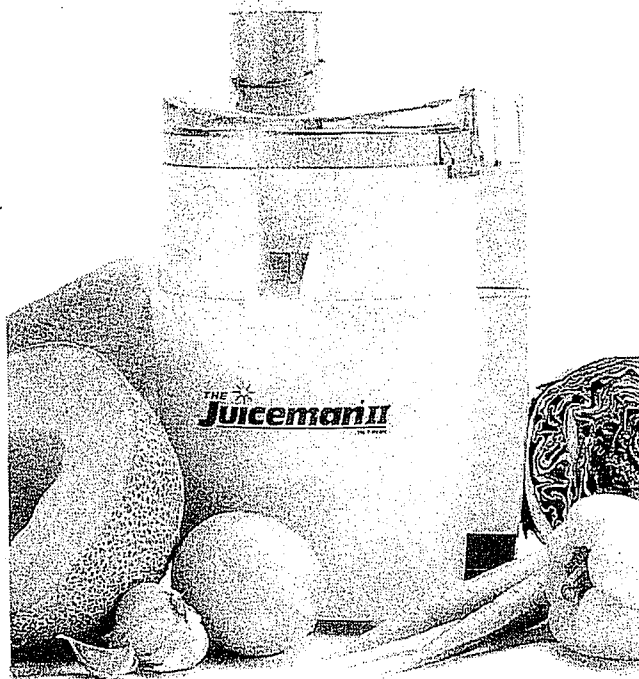


## TABLE OF CONTENTS

|                                |    |
|--------------------------------|----|
| Safeguards .....               | 2  |
| Spare Parts List .....         | 3  |
| Introduction .....             | 4  |
| Disassembly Instructions ..... | 5  |
| Assembly Instructions .....    | 7  |
| The Power Of Your Juicer ..... | 10 |
| Cleaning Your Juicer .....     | 11 |
| Warranty Information .....     | 12 |

### More Information

*If after reading this manual you still have questions  
about the use of your juicer, please write or call:*

**Juiceman Health Products, Customer Service Department**  
550 Business Center Dr. • Mt. Prospect, IL 60056  
**1-800-233-9054**

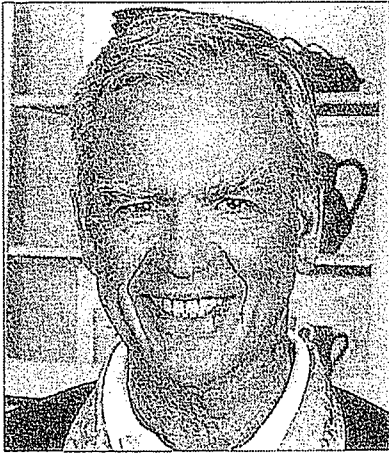

Jay Kordich, The Juiceman  
*"It's not the food in your life,  
but the life in your food."*

## CONGRATULATIONS!

*...on the purchase of your new Juiceman II® Juice Extractor. Over \$500,000 has been invested in the research and development of this machine, resulting in the finest automatic juice extractor available today. It is designed to work efficiently and conveniently while giving you delicious, healthful fresh juices.*

## IMPORTANT SAFEGUARDS


- Read all instructions.
- To protect against risk of electrical shock, do not put the motor base in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use, before assembling or disassembling and before cleaning.
- Avoid contacting moving parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or electrical or mechanical adjustment.
- The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock, or injury.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter.
- Always make sure juicer cover is fastened securely in place before motor is turned on. Do not unfasten while juicer is in operation.
- Be sure to turn switch to off position after each use of your juicer. Make sure the motor stops completely before disassembling.
- Do not put your fingers or other objects into the juicer openings, while it is in operation. If food becomes lodged in feed tube, use food pusher or another piece of fruit or vegetable to push it down. When this method is not possible, turn the motor off and disassemble juicer to remove the remaining food.

## SAVE THESE INSTRUCTIONS


## SPARE PARTS LIST




**Item #70072**  
**FOOD PLUNGER**  
**\$ 4.95**

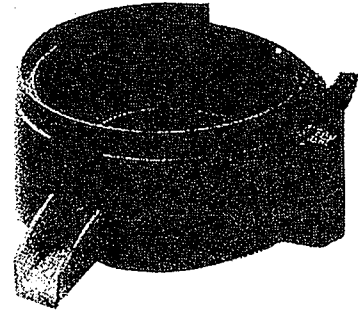

**Item #70075**  
**JUICE BOWL**  
**\$ 21.95**

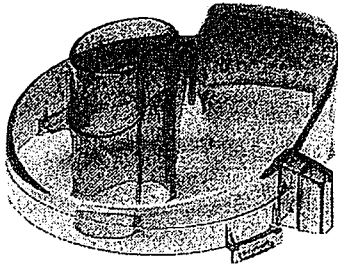


**Item #70073**  
**COVER**  
**\$ 16.95**

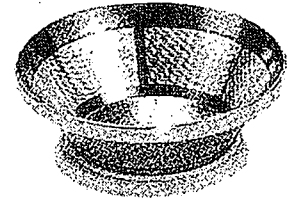

**Item #70074**  
**STAINLESS STEEL**  
**BLADE/BASKET**  
**\$ 29.95**

**Item #70077**  
**MOTOR BASE**  
**\$ 209.95**

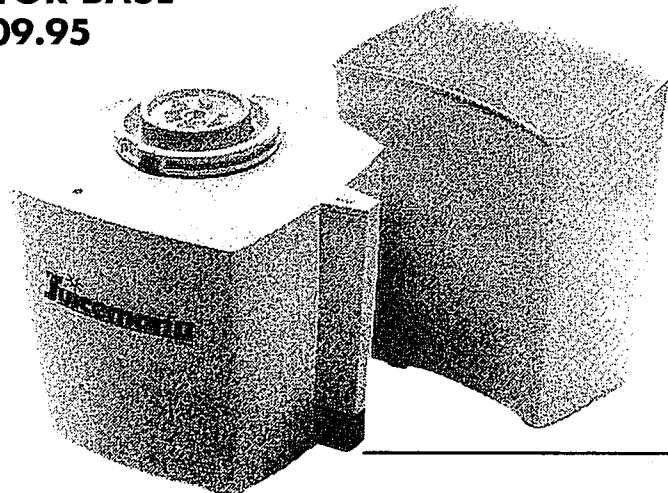

**Item #70076**  
**PULP BASKET**  
**\$ 14.95**

(On/Off Switch)

## INTRODUCTION

The Juiceman II® Juicer comes almost completely assembled in the box. We suggest taking it apart and washing the removable parts in warm water with a biodegradable, non-abrasive liquid detergent before the first use. This will eliminate any traces of dust or residue from manufacturing or shipping.

**NEVER SUBMERGE THE MOTOR BASE  
IN WATER OR OTHER LIQUID.**

Please see pages 4 through 8 for complete instructions on disassembly and assembly.

After washing and reassembly is complete, your new juicer is ready to go to work! Before starting, make sure pulp basket is at the rear of the juicer to receive pulp. The pulp from your juicer is useful in many different applications such as breads, muffins, cakes, soup stocks, compressed facial packs and garden compost material.

Refer to the "*Fresh Juice Recipes & Menu Planner*" for tips on buying, cleaning and storing produce, juice recipes, and sample diets.

PATENTS PENDING

**FOR HOUSEHOLD USE ONLY.**


**Your Juiceman II is equipped with a thermal safety switch. In the unlikely event of over-heating, it will shut down automatically. If this should happen, turn off the switch, unplug the machine and let the juicer cool down before resuming juicing.**

## DISASSEMBLY

ALWAYS MAKE SURE JUICER IS UNPLUGGED  
BEFORE STARTING DISASSEMBLY.




1. Remove food plunger.

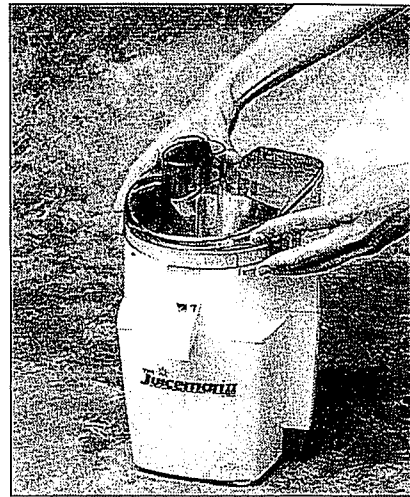

2. Place hands on each side of  
the cover, and...



3....gently turn the cover clock-  
wise (clockwise when looking  
down on top of the juicer).

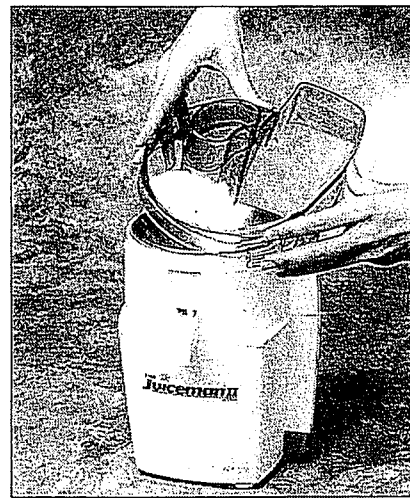

4. Turn the cover about two  
inches, then gently lift off.

## DISASSEMBLY (CONTINUED)




5. Remove the remaining two pieces as one unit. To do this, place your hands on each side of the juice bowl and...



6. ...gently turn the juice bowl clockwise (clockwise when looking down on top of juicer) a full quarter turn. This will automatically cause the blade/basket to lift off the motor hub.



7. Lift up on the juice bowl, which will pick up both the blade/basket and the juice bowl as one piece.

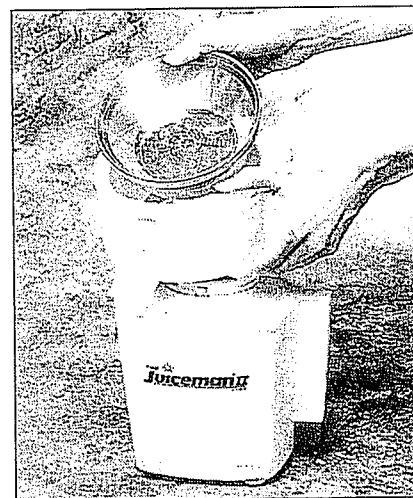

8. The blade/basket and juice bowl then easily come apart for cleaning. See page 10 for specific cleaning instructions.




## ASSEMBLY


ALWAYS MAKE SURE JUICER IS UNPLUGGED  
BEFORE STARTING ASSEMBLY.




1. Place juice bowl on hub (center section) of the motor base, making sure the small plastic tabs on the inside of the juice bowl fit into slots on the motor hub. The juice spout should be above the 'Ju' of the Juiceman II® logo on the front of the motor base.

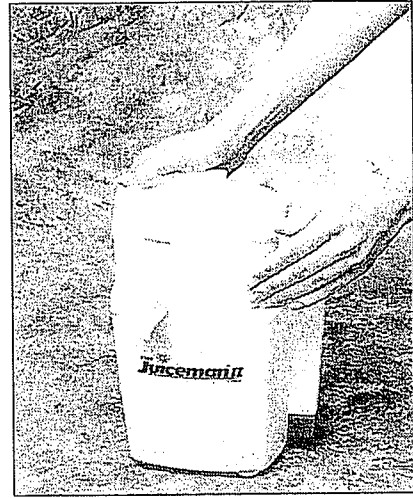

2. Place one hand on each side of the juice bowl and turn the juice bowl counter-clockwise (counter-clockwise looking down on juicer) until you can turn it no further and the juice spout is facing straight out over the Juiceman II® logo.

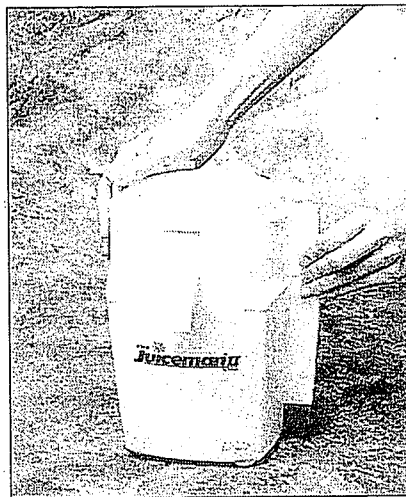


3. The column section on the side of the juice bowl will align completely with the switch column section on the motor base.

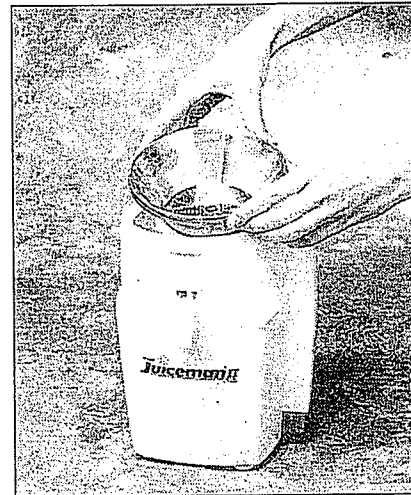


4. Place the blade/basket gently on the motor hub inside the juice bowl.

## ASSEMBLY (CONTINUED)

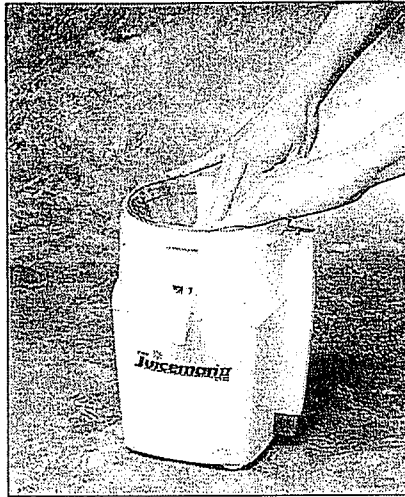

5. Push down firmly on the cutting blade (not on cutting teeth) while turning slightly clockwise until blade/basket clicks into place. The top of the blade/basket *cannot* be above the top of the juice bowl or it is not fully inserted and the juicer will not operate properly and the cutter blade may grind against the feeder tube on the juicer

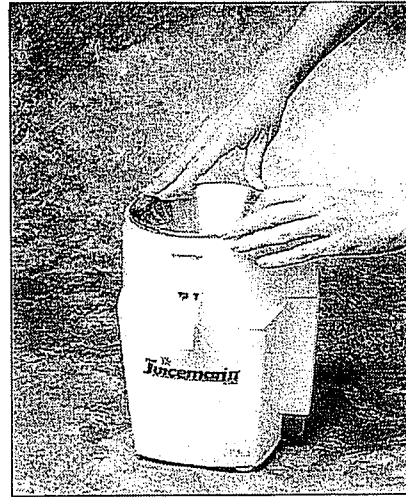

6. With fingers on blade/basket, gently turn back and forth to make sure it rotates freely without rubbing.




7. Place juicer cover on top of juice bowl with the small column section of the juicer cover turned clockwise approximately 1 to 2 inches away from the switch column of the motor base and juice bowl.




8. Placing hands on each side of the cover, gently turn the lid counter-clockwise while watching the cutting blade teeth. Continue turning until the column section clicks into place and aligns completely with the motor base switch column and juice bowl column.

## ASSEMBLY (CONTINUED)

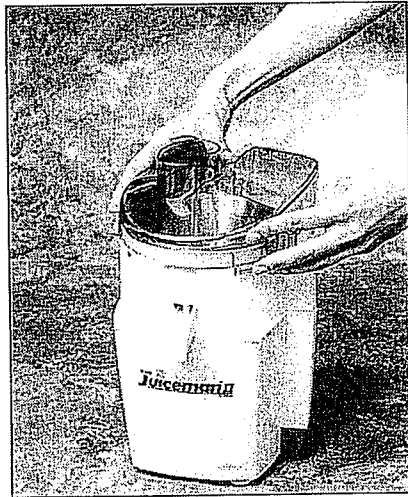

9. At this point you should not be able to turn the clear cover any further in the counter-clockwise direction. **Do not proceed until the lid, juice bowl and blade/basket have been reassembled and properly seated.\***

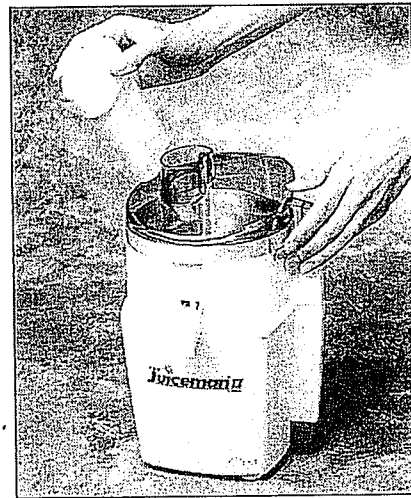

10. Place food plunger in opening.



11. Check to see that the small horizontal tabs on the juice bowl have slipped into slots provided on the juicer cover, and the cover and juice bowl are fitted snugly to the motor base with all column sections locked into place and fully aligned. Only then is the juicer assembled properly and the safety switch mechanism engaged so the juicer can be turned on.



12. Make sure the pulp basket is at the rear of the juicer to receive pulp. Your juicer is now ready to operate.

**\*(Note: if the blade/basket turns when the lid is turned, the blade/basket is not completely inserted.)**

## Polarized Plug

This appliance has a polarized plug (one blade is wider than the other), as a safety feature. This plug will fit in a polarized outlet only one way. If the plug does not fully fit in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the Plug in any way.

# IMPORTANT NOTICE

If any parts are missing or defective **DO NOT** return this product.

Please call our Customer Service Department for assistance.

**800-233-9054**

Monday - Friday  
9am - 5pm CST

*Thank You*

## CLEANING YOUR JUICER

**DO NOT IMMERSE THE MOTOR BASE IN WATER OR SPRAY IT WITH WATER. IT MUST BE CLEANED SIMPLY BY WIPING WITH A DAMP SPONGE, RAG, OR PAPER TOWEL. USE ANY DISH LIQUID WASHING DETERGENT BUT DO NOT USE ANY PRODUCTS CONTAINING AMMONIA, BLEACH, OR SCOURING POWDERS. THESE PRODUCTS WILL DULL, SCRATCH OR MAR THE PLASTIC SURFACE.**

- All parts (except the motor base) are washable in warm, soapy water. Disassemble according to instructions on page 5. To clean the cover and juice bowl we recommend using a fruit and vegetable brush with natural fibers. Do **not** use a metal brush or pad.
- When cleaning the blade/basket use the brush to make sure the tiny holes in the basket are not clogged. This can be accomplished by holding the blade/basket under a running faucet while brushing the basket holes from both inside and outside the blade/basket.
- **NOTE:** Occasionally, the juice bowl, cover, food plunger and blade/basket may be washed in a dishwasher, **ONLY IF** they are placed on the **TOPSHELF** of the dishwasher. However, washing with ordinary **WARM**, (not hot) tap water on a daily basis should be sufficient.

***Juicer should be AIR-DRIED only!***

- Sponge off the motor base and legs underneath the motor base if any juice has spilled under the juicer. Use a damp toothbrush, rag or paper towel to clean juice from inside the hub on top of the motor base.

**CLEAN YOUR JUICER THOROUGHLY BEFORE RETIRING FOR THE DAY.**

Due to the powerful staining properties of the carotenoids that are found in many vegetables, we suggest the following cleaning procedure if your juicer parts should become discolored. Soak overnight in any of these solutions: (1) ½ water and ½ cider vinegar, (2) ½ small box baking soda in enough water to cover juicer parts, (3) Any biodegradable soap in enough water to cover juicer parts.

- Never use bleach, ammonia, strong household cleaners or abrasives.
- Lightly scrub with brush and liquid detergent after soaking.

**ANY OTHER SERVICING SHOULD BE PERFORMED BY  
AUTHORIZED PERSONNEL ONLY.**

## LIMITED WARRANTY

Machines distributed by **Juiceman Health Products** are warranted for one year from date of purchase against defects in workmanship and material. During that period these defects will be repaired or the product will be replaced at **Juiceman Health Products** option without charge. This warranty covers normal consumer usage and does not cover damage which occurs in shipment or failure which results from alteration, accident, misuse, abuse, neglect, installation commercial use or improper maintenance. This warranty is effective only if the product is purchased and operated in the USA and does not extend to any units which have been used in violation of written instructions furnished by **Juiceman Health Products** or to units which have been altered or modified without authorization of **Juiceman Health Products**, or to damage to products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.

## Service and Repair

Do not attempt to repair your **Juiceman II Juicer**. Should the appliance malfunction, you should first call toll free 1-800-233-9054 between the hours of 9:00 a.m. and 5:00 p.m. Central Standard Time and ask for CONSUMER CUSTOMER SERVICE stating that you are a consumer with a problem. If the problem cannot be resolved, you will be asked to return the machine to the factory for repair. Under no circumstances should you attempt to open the housing and repair the machine. Should you do this, your warranty will be voided.

## To Return for Service

1. Securely package and return the product: PREPAID to: **The Juiceman**, Repair Department, 550 Buisness Center Drive, Mt. Prospect, IL 60056
2. Be sure to enclose:
  - a. Your name, address and phone number.
  - b. the date of purchase (or receipt as a gift).
  - c. An explanation of the malfunction or reason for return.
  - d. Ten dollars (\$10.00) Check or Money Order payable to Salton/MAXIM Housewares Group for return postage and handling.
  - e. To insure prompt 'In-Warranty' service, be sure to include proof of date of purchase.

We recommend you take the necessary precaution of insuring the parcel.

3. Toll Free Number: 1-800-233-9054.

# IMPORTANTES MESURES DE SÉCURITÉ

Appliquez les mesures de sécurité élémentaires suivantes lorsque vous utilisez un appareil électrique:

1. Lisez toutes les instructions.
2. Pour éviter les chocs électriques, ne plongez pas le cordon, la fiche ou l'appareil portatif (indiquer au besoin d'autres pièces similaires) dans l'eau ou un autre liquide.
3. Appareils portatifs. Débranchez l'appareil de la prise de courant quand vous ne l'utilisez pas, avant d'enlever ou d'installer des pièces et avant de le nettoyer. Laissez l'appareil refroidir avant de le manipuler.
4. Appareils portatifs. Ne faites pas fonctionner l'appareil si le cordon ou la fiche sont endommagés, si l'appareil ne fonctionne pas correctement, s'il est tombé ou s'il a été endommagé. Confiez au service de réparation recommandé le plus proche tout examen, réparation ou réglage électrique ou mécanique de l'appareil.
5. L'utilisation d'accessoires non recommandés par le fabricant de l'appareil peut causer des blessures.
6. N'utilisez pas l'appareil à l'extérieur (cette consigne peut être omise si le produit est destiné à être utilisé à l'extérieur).
7. Ne laissez pas le cordon pendre par-dessus le bord d'une table ou d'un comptoir et assurez-vous que le cordon n'est pas en contact avec des surfaces chaudes.
8. Ne placez pas l'appareil près d'un brûleur à gaz allumé ou d'un élément électrique ou tension ou dans un four allumé.
9. Le cas échéant, branchez toujours la fiche à l'appareil et assurez-vous que l'interrupteur de celui-ci est à la position ARRÊT (OFF) avant de brancher la fiche dans la prise. Pour débrancher l'appareil, placez l'interrupteur à ARRÊT (OFF) puis retirez la fiche de la prise de courant.
10. N'utilisez l'appareil que pour la fonction à laquelle il est destiné.
11. Évitez de toucher les pièces mobiles.
12. Toujours soyez certain que le couvercle du presse-fruits est serré solidement en position avant que le moteur va fonctionner. Ne pas défaire les crampons pendant que le presse-fruits va fonctionner.
13. Soyez certain de tourner l'interrupteur à la position arrête après chaque utilisation de votre presse-fruits. Soyez certain que le moteur arrête complètement avant de démonter.
14. Ne pas mettre vos doigts ou des autres objets dans l'ouverture du presse-fruits pendant qu'il fonctionne. Si la nourriture devient logée dans l'ouverture, utiliser le poussoir de la nourriture ou un autre morceau de fruit ou légume pour le pousser en bas. Quand cette méthode n'est pas possible, éteindre le moteur et démonter le presse-fruits pour enlever la nourriture restante.
15. Conservez ces instructions

**THE**  
***Juiceman<sup>®</sup> II***

---

**Salton/Maxim Housewares, Inc.**  
**550 Business Center Drive**  
**Mt. Prospect, IL 60056**  
**1-800-233-9054**

**Monday - Friday 9am - 5pm CST**

**or visit our website:**  
**<http://www.juiceman.com>**

