



PowerXLTM

LUMINEXTM LIGHT FRYER



Owner's Manual

Save These Instructions - For Household Use Only

MODELS: AF3052 Series

When using electrical appliances, basic safety precautions should always be followed. Do not use the **PowerXLTM LuminexTM Light Fryer** until you have read this manual thoroughly.





Table of Contents

IMPORTANT SAFEGUARDS 3

Parts & Accessories..... 7

Using the Control Panel 8

Instructions for Use..... 10

General Cooking Guidelines 12

Troubleshooting 14

Frequently Asked Questions..... 16

Cleaning & Storage 17

Money-Back Guarantee 18

Appliance Specifications

Model Numbers	AF3052-0BPTV, AF3052-1BPTV, AF3052-2BPTV
Wattage	1500W
Temperature Range	180° F-400° F
Exterior Dimensions	11.82"x 17.8"x10.82"
Power Cord Length	35.43" (90 cm)
Plug Type	2-prong



IMPORTANT SAFEGUARDS

WARNING

PREVENT INJURIES! CAREFULLY READ ALL INSTRUCTIONS BEFORE USE!

When using electrical appliances, basic safety precautions should be followed, including the following:

1. READ ALL INSTRUCTIONS.

2. This appliance is not intended for use by people (including children) with reduced physical, sensory, or mental capabilities or lack of experience and knowledge unless they are given supervision or instruction concerning use of the appliance by a person responsible for their safety.

3. Close supervision is necessary when any appliance is used by or near children.

4. DO NOT place on or near a hot gas or electric burner or in a heated oven.

5. DO NOT place your appliance on a cooktop even if the cooktop is cool because you could accidentally turn the cooktop on, causing a fire, damaging the appliance, your cooktop, and your home.



6. DO NOT place or use this appliance near water.

7. When cooking, **DO NOT** place the appliance against a wall or within 5 inches of other appliances. **DO NOT** place anything on top of the appliance.

8. A fire may occur if this appliance is covered by or touching flammable material, including curtains, draperies, walls, and the like, when in operation.

9. DO NOT use outdoors.

10. DO NOT place the appliance in any container or small confined space while the appliance is heated or in operation.

11. ALWAYS operate the appliance on a horizontal surface that is level, stable, and noncombustible with adequate space for airflow.

12. Before using your appliance on any countertop surface or other fragile surface, such as a glass tabletop, check with your countertop manufacturer or installer for recommendations about using appliances on your surfaces. Some manufacturers and installers may recommend protecting your surface by placing a hot pad or trivet under the appliance for heat protection. Your manufacturer or installer may recommend that hot pans, pots, or electrical appliances should not be used directly on top of the countertop. If you are unsure, place a trivet or hot pad under the appliance before using it.

13. DO NOT operate any appliance if it has a damaged cord or plug, if it is not working properly, or if it has been damaged or dropped. Return the appliance to an authorized service facility for examination, repair, or adjustment.

14. This appliance should be serviced only by qualified service technicians. Contact Customer Service using the information located on the back of this manual.

15. NEVER immerse the main unit housing in water. If the appliance falls or accidentally becomes immersed in water, unplug the appliance from the electrical outlet immediately. Do not reach into liquid if the appliance is plugged in and immersed.

16. To protect against electrical shock, **DO NOT** immerse the cord or plugs or expose the electrical components to water or other liquid.



IMPORTANT SAFEGUARDS

17. **DO NOT** plug in the power cord or operate the appliance controls with wet hands.
18. **ALWAYS** make sure the plug is attached to the appliance first and then plug the cord into the electrical outlet. To disconnect, press the Power Button to turn the appliance off and then remove the plug from the electrical outlet.
19. **MAKE SURE** the appliance is properly plugged into a dedicated electrical outlet without any other appliances on the same outlet.
20. Keep the appliance and its power cord out of the reach of children when it is in operation or in the cooling down process.
21. **NEVER** plug the appliance into an outlet below the surface where the appliance is placed.
22. **DO NOT** let the power cord hang over the edge of a table or counter or touch hot surfaces.
23. **DO NOT** clean with metal scouring pads. Pieces can break off the pad and touch electrical parts, creating risks of electric shock.
24. Should the appliance emit smoke, **UNPLUG IMMEDIATELY** and wait for smoking to stop before handling the appliance. Allow the appliance to cool and wipe excess oil and grease from the appliance.
25. Cooking appliances should be positioned in a stable location with the handles (if any) positioned to avoid the spillage of hot liquids.
26. **NEVER** operate the appliance unattended.
27. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
28. Avoid touching moving parts.
29. Unplug the appliance from the electrical outlet when not in use and before cleaning. **ALLOW** 30 minutes to cool before handling, putting on or taking off parts, cleaning, or storing.
30. **DO NOT** cover the Air Intake Vent or Hot Air Outlet Vent while the appliance is operating. Doing so will prevent even cooking and may overheat or damage the appliance.
31. When in operation, hot air and steam are released through the Hot Air Outlet Vent. **KEEP YOUR HANDS AND FACE** at a safe distance from the Hot Air Outlet Vent and **KEEP** the Vent clear of obstructions.
32. While cooking, the internal temperature of the appliance reaches several hundred degrees Fahrenheit. To avoid personal injury, **NEVER** place your hands inside the appliance unless it is thoroughly cooled.
33. The appliance's outer surfaces and accessories may become hot during use. **WEAR OVEN MITTS** when handling the appliance during and after use and to protect against hot steam and air released when opening the appliance.
34. **DO NOT** touch hot surfaces. Use handles or knobs.
35. **EXTREME CAUTION MUST BE USED** when moving an appliance containing hot oil or other hot liquids or when removing accessories or disposing of hot grease. This appliance is not intended for deep-frying foods.
36. Oversized foods, metal foil packages, or utensils **MUST NOT** be inserted in the appliance as they may involve a risk of fire or electric shock. **DO NOT** overfill the appliance.



IMPORTANT SAFEGUARDS

- 
- 37. **DO NOT** store any materials other than manufacturer-recommended accessories in this appliance when not in use.
 - 38. **DO NOT** place any of the following materials in the appliance: paper, cardboard, or plastic.
 - 39. **NEVER** pour oil into the appliance or accessories. Fire and personal injury could result.
 - 40. **DO NOT** use aerosol cooking sprays. These sprays will build up on cookware and become difficult to remove while reducing the nonstick cooking performance.
 - 41. **DO NOT** expose the appliance to corrosive chemicals or vapors.
 - 42. **DO NOT** use sharp utensils with the appliance. These implements can damage the appliance's protective nonstick coating.
 - 43. This appliance is for home use only. If the appliance is used improperly or for professional or semi-professional purposes or if it is not used according to the instructions in the user manual, the guarantee becomes invalid and Empower Brands, LLC will not be held liable for damages. **DO NOT** use this appliance for anything other than its intended use.



CAUTION

- **NEVER** connect this appliance to an external timer switch or separate remote-control system.
 - When ready to start, plug the hardwired cord into a electrical outlet. To disconnect, press the Power Button to turn the appliance off and then remove the plug from the electrical outlet.
 - **NEVER** rest anything on the Fry Basket while it is open.
 - **DO NOT** leave the Fry Basket open for an extended period.
 - **ALWAYS** ensure that nothing is protruding out of the appliance before closing the Fry Basket.
 - **ALWAYS** close the Fry Basket gently; **NEVER** slam the Fry Basket closed. **ALWAYS** use the handle when opening and closing the Fry Basket.
 - **NEVER** operate the appliance with the Fry Basket open.
 - When the cooking time has completed, cooking will stop and the fan will continue to run for 10-20 seconds to cool down the appliance.
 - The appliance is equipped with an internal microswitch that automatically shuts down the fan and heating element when the Fry Basket is removed.
- 

**SAVE THESE INSTRUCTIONS -
FOR HOUSEHOLD USE ONLY**



IMPORTANT SAFEGUARDS

POLARIZED PLUG

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

- 1.** A short power supply cord is provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.
- 2.** Longer detachable power supply cords or extension cords are available and may be used if care is exercised in their use.
- 3.** If a longer detachable power supply cord or extension cord is used:
 - a.** The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance;
 - b.** The cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.

Electric Power

This appliance should be operated on a dedicated electrical outlet. If the electrical outlet is overloaded with other appliances, your new appliance may not operate properly.

Automatic Shut-Off

The appliance has a built-in shut-off device that will automatically shut off the appliance when the cooking time has completed. You can manually switch off the appliance by pressing the Power Button. The fan will continue running for 10–20 seconds to cool down the appliance.

Overheating Protection


Should the inner temperature control system fail, the overheating protection system will be activated and the appliance will not function. Should this happen, unplug the appliance. Allow time for the appliance to cool completely before restarting or storing.

Electromagnetic Fields

This appliance complies with all standards regarding electromagnetic fields. If handled properly and according to the instructions in the user manual, the appliance is safe to use based on scientific evidence available today.


Parts & Accessories

1. FRY TRAY
2. SILICONE BUMPERS*
3. FRY BASKET
4. HANDLE
5. CONTROL PANEL
6. AIR INLET VENT
7. MAIN UNIT HOUSING
8. HOT AIR OUTLET VENT
9. POWER CORD
10. GRILL PLATE*
11. EGG COOKER*
12. MESH RACK*
13. REHEAT DISH*

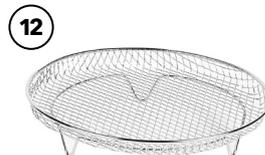

* Some accessories may be sold separately.

Using the Control Panel

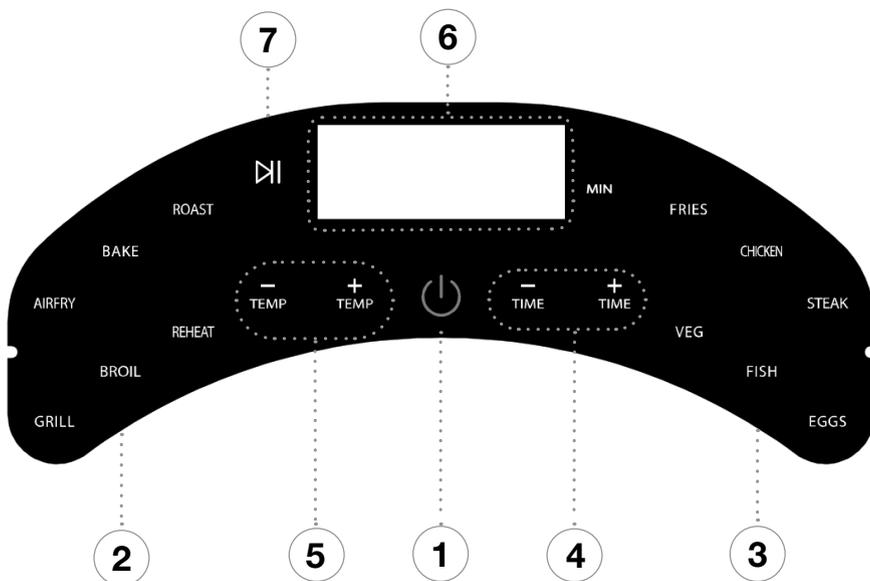

- 1. Power Button:** Press the Power Button to turn the appliance on and illuminate the control panel. Pressing the Power Button during the cooking cycle will turn the appliance off.
- 2. Cooking Functions:** Press the Cooking Function Buttons to choose from six cooking functions. See the Function Chart for the cooking times and temperatures associated with each function.
- 3. Cooking Presets:** Press the Cooking Preset Buttons to choose from six cooking presets. See the Preset Chart for the cooking times and temperatures associated with each preset.
- 4. Timer Control Buttons:** The + and – symbols enable you to increase or decrease cooking time 1 minute at a time. Keeping the Button held down will rapidly change the time. Time control range: 1–60 minutes.
- 5. Temperature Control Buttons:** The + and – symbols enable you to increase or decrease cooking temperature 5° F at a time. Keeping a button held down will rapidly change the temperature. Temperature control range: 180° F–400° F
- 6. Time and Temperature Display:** This display will keep track of the temperature and remaining cook time.
Shake Indicator: The Shake Indicator will illuminate when the cooking cycle has reached its halfway point. This halfway timer gives you the opportunity to shake or flip your food in the appliance, which helps ensure even cooking (see the “Shaking” section).
- 7. Start/Pause Button:** Once a cooking time and temperature have been selected, press the Start/Pause Button to begin the cooking process. Press the Start/Pause Button again at any point during the cooking process to pause the cooking cycle.

Using the Control Panel

Function Chart

The Cooking Function Buttons set the appliance to a cooking time and temperature that is generally appropriate for the selected type of cooking. As you become more familiar with the appliance, you can use the Time and Temperature Control Buttons to adjust the set cooking time and temperature as needed.

Function Name	Temperature	Time	Shake*
Air Fry	400° F	18 mins.	Yes
Bake	320° F	20 mins.	No
Roast	400° F	10 mins.	Yes
Grill	390° F	20 mins.	Yes
Broil	400° F	10 mins.	Yes
Reheat	350° F	4 mins.	No

Preset Chart

The Cooking Preset Buttons set the appliance to a cooking time and temperature that should cook the selected type of food consistently every time. These cooking presets should require minimal adjustments for ideal results.

Preset Name	Temperature	Time	Shake*
Fries	400° F	22 mins.	Yes
Chicken	380° F	20 mins.	Yes
Steak	400° F	10 mins.	Yes
Veg	360° F	10 mins.	Yes
Fish	380° F	10 mins.	Yes
Eggs	300° F	18 mins.	Yes

***Shake Function Programming:** Halfway through the cooking cycle, the appliance will beep five times, indicating that food can be shaken or flipped over (see “Shaking” in the “Instructions for Use” section).



Instructions for Use

Before First Use

1. Read all material, warning stickers, and labels.
2. Remove all packing materials, stickers, and labels from the appliance.
3. Please go to www.prodprotect.com/powerxl to register your warranty
4. Before initial use, wipe the inside and outside of the appliance with a warm, moist cloth and mild detergent. Handwash all cooking accessories.
5. Place appliance on a heat-resistant surface or use heat protection. Do not place the appliance on a surface that is not heat resistant. Ensure that the appliance is used in an area with adequate air circulation. Do not place on the stove top.
6. Before cooking food, preheat the appliance for a few minutes to allow the appliance to burn off the manufacturer's protective coating of oil. Wipe the appliance with warm, soapy water and a dishcloth after this burn-in cycle.

Shaking

To ensure even cooking, some foods require shaking or flipping during the cooking process. Some of this appliance's functions and presets include a halfway timer, which is a timer that will beep and the Shake Icon on the Control Panel will blink when the cooking cycle has reached

its halfway point. At the halfway point in the cycle, carefully use oven mitts to remove the hot Fry Basket from the appliance. Gently shake the food.

NOTE: If you do not remove the Fry Basket and shake the food, the Shake light on the Control Panel will remain illuminated.

Tips

- Foods that are smaller in size usually require a slightly shorter cooking time than larger foods.
- Shaking smaller-sized foods halfway through the cooking process ensures that all the pieces are fried evenly.
- Adding a bit of vegetable oil to breaded items is suggested for a crispier result. When adding oil, do so just before cooking and add only a small amount onto the breaded items.
- Snacks normally cooked in an oven can also be cooked in an air fryer.
- Use premade dough to prepare filled snacks quickly and easily. Premade dough also requires a shorter cooking time than homemade dough.
- You can use the appliance to reheat foods. Simply set the temperature and time to however warm you want your food.

Instructions for Use

Using the Appliance

1. Plug the appliance into a dedicated electrical outlet.
2. Pull the Fry Basket out of the appliance. Ensure the Fry Tray has been placed in the Fry Basket. Place the ingredients inside the Fry Basket (see Fig. A). If you are using an accessory, such as the Grill Plate, place the accessory on the Fry Tray before adding ingredients.
3. Use the Handle to push the Fry Basket into the appliance (see Fig. B).
4. Press the Power Button on the Control Panel. Use either a Cooking Function Button, a Cooking Preset Button, or the Time and Temperature Control Buttons to set the appropriate time and temperature for your recipe (see Fig. C). Press the Start/Pause Button to begin the cooking process.
5. When the timer beeps five times, either the set cooking time has elapsed or the appliance is reminding you to shake your food (see "Shaking" in "Instructions for Use"). Pull the Fry Basket out of the appliance and place it on a heat-resistant surface.
6. When removing food from the Fry Basket, avoid contact with hot excess oil or any hot cooking accessories. To avoid being burned, use silicone-tipped tongs or carefully tip the food out of the Fry Basket (see Fig. D). The Fry Tray is not secured and can fall out.
7. If the food is not fully cooked, simply use the Handle to slide the Fry Basket back into the appliance and add a few minutes to the cooking time.
8. The appliance is instantly ready for preparing another batch.



Fig. A



Fig. B



Fig. C



Fig. D

General Cooking Guidelines

NOTE: Keep in mind that these settings are guidelines. Since ingredients differ in origin, size, shape, and brand, we cannot guarantee the best settings for your ingredients.

Food	Size	Temperature	Cook Time	Preheat	Shake or Flip	Spray with Oil
FROZEN FOOD						
French fries		400° F	22 mins.		✓	
Sweet potato fries		400° F	22 mins.		✓	
Chicken nuggets		400° F	14 mins.		✓	
CHICKEN						
Breaded cutlets	6 oz	400° F	10 mins.	✓	✓	✓
Wings		400° F	25 mins.	✓	✓	
Chicken breast	6 oz	400° F	8 mins.	✓		
BEEF						
Burgers	6 oz	400° F	10 mins.	✓	✓	
Hot dogs	8 pc	375° F	5 mins.	✓	✓	
NY strip steaks	8 oz	400° F	12 mins.	✓	✓	
Meatballs, 1 inch	1.5 lb	375° F	10 mins.	✓	✓	
PORK						
Pork chops		400° F	12 mins.	✓	✓	
Sausages		350° F	15 mins.	✓	✓	
FISH						
Salmon filets	6 oz	390° F	12 mins.	✓		
Shrimp (16-20 size)	12 oz	390° F	10 mins.	✓	✓	

General Cooking Guidelines

Food item	Size	Temperature	Cook Time	Preheat	Shake or Flip	Spray with Oil
VEGETABLES						
Asparagus	1 lb	380° F	8 min		✓	✓
Broccoli	8 oz	380° F	8 min		✓	✓
Corn on the cob	2 pc	380° F	8 min		✓	✓
PREPARED FOOD						
Hard-boiled eggs, shell on		250° F	18 min			
Cake		320° F	20 min			
Grilled cheese sandwich	1 pc	375° F	6 min	✓	✓	

Internal Temperature Meat Chart

Use this chart and a food thermometer to ensure that meat, poultry, seafood, and other cooked foods reach a safe minimum internal temperature.

*For maximum food safety, the U.S. Department of Agriculture recommends 165° F for all poultry; 160° F for ground beef, lamb, and pork; and 145° F, with a 3-minute resting period, for all other types of beef, lamb, and pork. Also review the USDA Food Safety Standards.

Food	Type	Internal Temp.*
	Ground	160° F
Beef & Veal	Steaks, roasts: medium	145° F
	Steaks, roasts: rare	125° F
Chicken & Turkey	Breasts	165° F
	Ground, stuffed	165° F
	Whole bird, legs, thighs, wings	165° F
Fish & Shellfish	Any type	145° F
Lamb	Ground	160° F
	Steaks, roasts: medium	140° F
	Steaks, roasts: rare	130° F
Pork	Chops, ground, ribs, roasts	160° F
	Fully cooked ham	140° F

Troubleshooting

Symptom	Possible Cause	Solution
The appliance does not work.	The appliance is not plugged in.	Plug the Power Cord into an electrical outlet.
	The appliance is plugged into an outlet that is shared with other devices.	Plug the appliance into a dedicated electrical outlet.
	The cooking time and temperature have not been set properly.	Press the Power Button. Select a time and temperature. Press the Start/Pause Button and cooking will begin.
	The appliance might have been turned off. If the Power Button is pressed while cooking, the Auto Shut-Off mode will be triggered.	Press the Power Button. Select a time and temperature. Press the Start/Pause Button and cooking will begin.
Food is not cooked.	The Fry Basket is overloaded.	Use smaller batches for more even frying.
	The temperature is set too low.	Raise temperature and continue cooking.
Food is not fried evenly.	Some foods need to be shaken during the cooking process.	See "Shaking" section in "Instructions for Use".
The Fry Basket will not slide into the appliance properly.	The Fry Basket is overloaded.	Do not fill the Fry Basket above the Maximum line.
	The Fry Tray is not placed in the Fry Basket correctly.	Gently push the Fry Tray into the Fry Basket.

Troubleshooting

Symptom	Possible Cause	Solution
Smoke coming from appliance	Too much oil is being used.	Wipe down to remove excess oil.
	The Fry Basket has grease residue from the previous operation.	Clean the Fry Basket after each use.
French fries are not fried evenly	Potatoes are not prepared properly.	Consult a recipe for potato type and preparation.
	Fries are not cut evenly.	Cut fries thinner or reshape fries.
	Fries are too crowded.	Spread fries out or cook a smaller batch.
	Potatoes are not rinsed properly during preparation.	Pat dry to remove excess starch.
Fries are not crispy	Raw fries have too much water.	Dry potato sticks properly before misting oil.
		Cut sticks smaller.
		Add a bit more oil.
Error code displayed on Control Panel	E1 - Broken circuit of the thermal sensor	Call Customer Service
	E2 - Short circuit of the thermal sensor	



Frequently Asked Questions

1. Can I prepare foods other than fried dishes with my appliance?

You can prepare a variety of dishes, including steaks, chops, burgers, and baked goods. See the recipe guide.

2. Is the appliance good for making or reheating soups and sauces?

Never cook or reheat liquids in the appliance.

3. Is it possible to shut off the appliance at any time?

Yes. Press the Power Button once or remove the Basket.

4. What do I do if the appliance shuts off while cooking?

As a safety feature, the appliance has an Auto Shut-Off device that prevents damage from overheating. Remove the Fry Basket and set it on a heat-resistant surface. Unplug the Power Cord from the outlet. Allow the appliance to cool down. Once cool, plug the Power Cord into the outlet. Restart by pressing the Power Button

5. Does the appliance need time to heat up?

Most recipes do not require preheating. If you are cooking from a cold start and your recipe requires preheating, add 3 minutes to the cooking time to compensate.

6. Can I check the food during the cooking process?

You can see your food through the glass window on top of the appliance. You can also remove the Fry Basket at any time while cooking is in progress. During this time, you can shake the contents in the Fry Basket if needed to ensure even cooking.

7. Is the appliance dishwasher safe?

Only the Fry Tray is dishwasher safe. The appliance itself, which contains the heating coil and electronics, should never be submerged in liquid of any kind or cleaned with anything more than a warm, moist cloth or nonabrasive sponge with a small amount of mild detergent.

8. What happens if the appliance still does not work after I have tried all the troubleshooting suggestions?

Never attempt a home repair. Contact customer service and follow the procedures set forth by the guarantee. Failure to do so could render your warranty null and void.



Cleaning & Storage

Cleaning

Clean the appliance after each use. The Fry Basket and Fry Tray are coated with a special nonstick surface. Never use abrasive cleaning materials or utensils on these surfaces.

1. Unplug the Power Cord from the electrical outlet and be certain the appliance is thoroughly cooled before cleaning.
2. Wipe the outside of the appliance, including the glass on top of the appliance, with a warm, moist cloth and mild detergent.
3. Clean the glass inside the appliance with a warm, moist cloth and mild detergent. Use hand protection in case the inside of the appliance is still hot.
4. Clean the Fry Basket and Fry Tray, with hot water, a mild detergent, and a nonabrasive sponge. The Fry Tray is dishwasher safe, but hand-washing is recommended. For difficult-to-remove food, soak in hot, soapy water for 10 minutes.
5. If the Silicone Bumpers on the Fry Tray need to be cleaned, they can be removed and reattached. To remove the bumpers, locate the capped end of the bumper and push the capped end off of the Fry Tray. There will be some resistance, but keep pushing until the bumper slide off of the Fry Tray. To reattach the bumper, slide each bumper onto the slot on the Fry Tray.
6. Clean the inside of the appliance with hot water, a mild detergent, and a nonabrasive sponge.
7. Rinse the appliance with a clean, damp cloth. Use a clean, dry cloth to dry the appliance interior. Do not leave standing water in the appliance.
8. If any other service needs to be performed, contact Customer Service.

Storage

Place the cooled, dry appliance in a clean, dry place. Do not stack objects on top of the appliance.



PowerXL™

LUMINEX™ LIGHT FRYER

90-Day Money-Back Guarantee

The PowerXL™ Luminex™ Light Fryer is covered by a 90-day money-back guarantee. If you are not 100% satisfied with your product, return the product and request a replacement product or refund. Proof of purchase is required. Refunds will include the purchase price, less processing and handling. Follow the instructions in the Return Policy below to request a replacement or refund.

Replacement Guarantee Policy

Our products, when purchased from an authorized retailer, include a one-year replacement guarantee if your product or component part does not perform as expected, the guarantee extends only to the original purchaser and is not transferable. If you experience an issue with one of our products within one year of purchase, return the product or the component part for replacement with a functionally equivalent new product or part. The original proof of purchase is required, and you are responsible to pay to return the appliance to us. In the event a replacement appliance is issued, the guarantee coverage ends six months following the receipt date of the replacement appliance or the remainder of the existing guarantee, whichever is later. Empower Brands, LLC reserves the right to replace the appliance with one of equal or greater value.

Return Policy

If, for any reason, you would like to replace or return the product under the money-back guarantee, your order number can be used as the return merchandise authorization number (RMA). If the product was purchased in a retail store, return the product to the store or use "RETAIL" as the RMA. Return your product to the address provided below for a replacement, which will incur no additional processing and handling fees, or for the refund of your purchase price, less processing and handling. You are responsible for the cost of returning the product. You can locate your order number at www.customerstatus.com. You can call customer service at 973-287-5106 for any additional questions.



PowerXL™

LUMINEX™ LIGHT FRYER

Pack the product carefully and include in the package a note with (1) your name, (2) mailing address, (3) phone number, (4) email address, (5) reason for return, and (6) proof of purchase or order number, and (7) specify on the note whether you are requesting a refund or replacement. Write the RMA on the outside of the package.

Send the product to the following return address:

PowerXL Luminex Light Fryer
Vivitech/Fosdick Returns
15392 Cobalt St.
Sylmar, CA 91342

If the replacement or refund request has not been acknowledged after two weeks, please contact Customer Service at 973-287-5106.

Refund

Refunds requested within the money-back guarantee timeframe will be issued to the payment method used at purchase if the item was purchased directly from Empower Brands, LLC. If the item was purchased from an authorized retailer, proof of purchase is required, and a check will be issued for the item and sales tax amount. Processing and handling fees are non-refundable.



PowerXL[™]

LUMINEX[™] LIGHT FRYER

Distributed by: Empower Brands, LLC
Middleton, WI 53562
[™] Trademark of Empower Brands, LLC

© 2023 Empower Brands, LLC, all rights reserved.
7/2023 29751

Made in China

T22-9003496-A
E