

This product is for household use only.

SAVE THESE INSTRUCTIONS.

- Do not use appliance for other than intended use.
- When blending hot liquids, remove center piece of two-piece cover.
- Always operate blender with cover in place.
- blades on base without jar properly attached.
- To reduce the risk of injury, never place cutter-assembly
- Blades are sharp. Handle carefully.
- the blender is not running.
- blender. A scraper may be used, but must be used only when
- Keep hands and utensils out of container while blending to
- Do not let cord hang over edge of table or counter.
- Do not use outdoors.
- shock or injury.
- recommended by the manufacturer may cause fire, electric
- The use of attachments, including canning jars, not
- electrical or mechanical adjustment.
- number on the front of this sheet for examination, repair or
- authorized service facility or call the appropriate toll-free
- damaged in any manner. Return appliance to the nearest
- plug or after the appliance malfunctions, or is dropped or
- Do not operate any appliance with a damaged cord or
- Avoid contacting moving parts.
- taking off parts, and before cleaning.
- Unplug from outlet when not in use, before putting on or
- by or near children.
- Close supervision is necessary when any appliance is used
- cord, plugs or appliance in water or other liquid.
- To protect against risk of electrical shock do not immerse
- Read all instructions.

When using electrical appliances, basic safety precautions should always be followed including the following:

IMPORTANT SAFEGUARDS

Please Read and Save this Use and Care Book.



 
10-SPEED BLENDER MÉLANGEUR DE 10 VITESSES

Customer Care Line:	Service line à la clientèle :
USA 1-800-231-9786	Canada 1-800-231-9786
Accessories/Parts (USA)	Accessoires/Pièces (Canada)
1-800-738-0245	1-800-738-0245
For online customer service and to register your product, go to www.prodprotect.com/applia	Pour accéder au service à la clientèle en ligne ou pour inscrire votre produit en ligne, rendez-vous à www.prodprotect.com/applia



MODELS / MODÈLES

- BL2010BGC
- BL2010WGC



Note: If the power supply cord is damaged, it should be replaced by qualified personnel, in Latin America by an authorized service center.

pulled on by children or tripped over.

- The longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be used.
- If the appliance is of the grounded type, the extension cord should be a grounding-type 3-wire cord, and the electrical rating of the appliance, supply cord or extension cord should be at least as great as the marked electrical rating of the detachable power-supply cord or extension cord.
- Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use. If a long detachable power-supply cord or extension cord is used, the marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the marked electrical rating of the appliance.

a) A short power-supply cord (or detachable power-supply cord) is to be provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.

ELECTRICAL CORD

Warning: This appliance is equipped with a tamper-resistant screw to prevent removal of the outer cover. To reduce the risk of fire or electric shock, do not attempt to remove the outer cover. There are no user-serviceable parts inside. Repair should be done only by authorized service personnel.

TAMPER-RESISTANT SCREW

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

- Measuring cup lid insert (Part # BL2010WG-01)
- Lid
- White BL2010WGC (Part # BL2010WG-02)
- Black BL2010BGC (Part # BL2010BG-02)
- Blending jar:
- BL2010WG: Glass, 42 oz. / 5 cups (Part # BL2010WG-03)
- Handle
- Blender base
- Control panel
- Jar base (not shown)
- White BL2010WGC (Part # BL2010WG-08)
- Black BL2010BGC (Part # BL2010BG-08)
- Gasket (Part # BL2010WG-05) (not shown)
- Blade assembly (Part # BL2010WG-07) (not shown)
- Note: † indicates consumer replaceable/removable parts



 
Product may vary slightly from what is illustrated.

Care and Cleaning

This product contains no user serviceable parts. Refer service to qualified service personnel.

CLEANING

- Before cleaning, turn off (0) and unplug appliance.
- Lift blending jar by handle off power base.
- Remove jar base by turning counterclockwise until loose.
- Remove gasket and blade assembly.



- Remove lid and measuring cup lid insert.
- Wash removable parts by hand or in your dishwasher. Place jar on bottom rack and rest of parts on top-rack only.

Important:

- **Do not place jar parts in boiling liquids.**
- **Do not immerse base in liquid. Wipe base with damp cloth and dry thoroughly.**
- **Remove stubborn spots by rubbing with damp cloth and nonabrasive cleaner.**

Note: If liquids spill onto base, wipe with damp cloth and dry thoroughly. do not use rough scouring pads or cleansers on parts or finish.

QUICK CLEANING

For quick cleanup, combine 1 cup hot water and a drop of liquid dish soap in the blending jar. Cover and clean on (5) for about 30 seconds. discard liquid and rinse jar thoroughly.

STORAGE

For convenient storage, wrap the cord around the supports on the bottom of the blender base.

jar from the base.

9. When finished, press the pulse/off (P/0) button. Make sure blades have completely stopped before attempting to remove the blending jar from the base.

Important: Do not remove the lid while the blender is running.

- When blending thick mixtures, such as smoothies, power drinks and milkshakes press the pulse (P) button several times to begin the blending process. Press the pulse (P) button for no more than 5 seconds at a time. This helps break up the ice and distribute the ingredients.
- open the lid cap to add ingredients while the blender is running and drop ingredients through the opening.
- When blending jar is running and power drinks are being blended, make sure the lid is properly attached.
- Place lid on jar; make sure measuring cup lid insert is in place.
- Place foods to be blended into jar, liquid first.
- Make sure appliance is off.
- Blender is now ready for use.
- at the top of the base.
- Place jar assembly on base, making sure it is press firmly into place. (Jar base should not extend more than 1/8-inch above the rim
- Do not plug in the cord.
- Uncoil power cord from storage area under the base.
- Place lid with lid cap onto blending jar.
- Turn assembled jar right side up.
- Place jar base onto jar and rotate clockwise until it is tight.
- Put gasket on top of blade assembly. Place blade assembly with gasket into bottom opening of the jar with blades facing down.
- Turn blending jar upside down and place flat on countertop or work surface.
- Place jar base on top of blade assembly. Place blade assembly with gasket into bottom opening of the jar with blades facing down.
- Turn assembled jar right side up.
- Place lid with lid cap onto blending jar.
- Uncoil power cord from storage area under the base.
- Make sure appliance is off.
- Place foods to be blended into jar, liquid first.
- Place lid on jar; make sure measuring cup lid insert is in place.
- When in use, do not leave blender unattended. When using hard foods, such as ice, cheese, nuts and coffee beans, keep one hand on the lid to keep blender in place.

USING YOUR BLENDER

- Blender is now ready for use.
- at the top of the base.
- Place jar assembly on base, making sure it is press firmly into place. (Jar base should not extend more than 1/8-inch above the rim
- Do not plug in the cord.
- Uncoil power cord from storage area under the base.
- Place lid with lid cap onto blending jar.
- Turn assembled jar right side up.
- Place jar base onto jar and rotate clockwise until it is tight.
- Put gasket on top of blade assembly. Place blade assembly with gasket into bottom opening of the jar with blades facing down.
- Turn blending jar upside down and place flat on countertop or work surface.
- Place jar base on top of blade assembly. Place blade assembly with gasket into bottom opening of the jar with blades facing down.
- Turn assembled jar right side up.
- Place lid with lid cap onto blending jar.
- Uncoil power cord from storage area under the base.
- Make sure appliance is off.
- Place foods to be blended into jar, liquid first.
- Place lid on jar; make sure measuring cup lid insert is in place.
- When in use, do not leave blender unattended. When using hard foods, such as ice, cheese, nuts and coffee beans, keep one hand on the lid to keep blender in place.

BLENDER JAR ASSEMBLY

- Wipe outside of appliance with a damp cloth; dry thoroughly.
- section of this manual.
- Wash all removable parts as instructed in CARE AND CLEANING

GETTING STARTED

This product is for household use only.

How to Use

- To remove the jar, grasp the handle and lift straight up. do not twist the jar.
- Remove lid to pour.
- Always unplug the appliance when not in use.
- When blending hot liquids always let them cool at least 5 minutes before blending. Before beginning to blend, remove the measuring cup lid and put it back with the opened side tilted away from you. Cover lid with a cloth to avoid splattering and only use lowest speed (1). do not blend more than 2½ to 3 cups at a time.

SPEED CHART
Pulse/Off (P/0): Use for thick mixtures
Fast Clean (1): Combine drop of dishwashing liquid and hot water to clean blender
Stir (2): Liquefy frozen juices, drink mixes and condensed soups <ul style="list-style-type: none">• Prepare salad dressings • Puree hot liquids
Blend (3): Prepare sauces • Remove lumps from gravies
Grate (4): Grate hard cheeses and coconut • Make superfine sugar <ul style="list-style-type: none">• Make cookie, cereal and bread crumbs • Grind coffee beans, spices and chocolate
Beat (5): Beat eggs for omelets and custards
Puree (6): Blend protein drinks • Puree baby foods – fruits and vegetables
Crumb (7): Make cookie, cereal and bread crumbs
Chop (8): Chop fruits and vegetables • Chop cooked meats <ul style="list-style-type: none">• Chop nuts, coarse- to-fine
Liquefy (9): Liquefy frozen drinks
Smoothies/Ice Crush(10): Crush ice • Prepare smoothies and milkshakes

DO NOT place any of the following in the blender: large pieces of frozen foods; tough foods such as raw turnips, sweet potatoes and potatoes; bones; hard salami, pepperoni and hard sausages; boiling liquids (cool for 5 minutes before placing in blending jar)

DO NOT:

Operate blender without the lid on the blending jar. Store foods in the blending jar. Overfill the blender. (The blender is more efficient with less rather than more.) Use pulse (P) for more than 5 seconds at a time. Release the pulse (P) button; allow the blender to rest briefly, then continue. Run blender for longer than 30 seconds when using dry foods and 2 minutes when blending liquids. Scrape down sides on blending jar, if necessary and continue blending. Use if blender jar is chipped or cracked.

Tasks not recommended for the blender: Whipping cream; beating egg whites; mixing dough; mashing potatoes; grinding meats; extracting juice from fruits and vegetables



© 2011 Applica Consumer Products, Inc.

