



QUICKPRESS® IRON

PLANCHA QUICKPRESS®

Customer Care Line:

USA 1-800-231-9786
Accessories/Parts (USA)
 1-800-738-0245
 For **online customer service** and to **register** your product, go to **www.prodprotect.com/applika**

Servicio para el cliente:

México 01-800 714-2503
Accesorios/Partes (EE.UU)
 1-800-738-0245
 Para **servicio al cliente** y para **registrar** su garantía, visite **www.prodprotect.com/applika**



When using your iron for the first time, you may notice water residue inside the unit. This is normal.

Quando use su plancha por primera vez, notará que hay agua adentro de la plancha. Esto es normal.

MODELS/MODELS

- F975
- F976

IMPORTANT SAFEGUARDS

Please Read and Save this Use and Care Book.

When using electrical appliances, basic safety precautions should always be followed, including the following:

- To protect against a risk of electric shock, do not immerse the iron in water or other liquid.
- Use iron only for its intended use.
- Read all instructions before using.

- The iron should always be turned off [0] (refer to HOW TO USE section) before plugging into or unplugging from an outlet. Never yank cord to disconnect from outlet; instead grasp plug and pull to disconnect.
- Do not allow cord to touch hot surfaces. Let iron cool completely before putting away. Loop cord loosely around iron when storing.
- Always disconnect iron from electrical outlet when filling with or emptying of water and when not in use.
- Do not operate iron with a damaged cord or if the iron has been dropped or damaged. To avoid the risk of electric shock, do not disassemble the iron, take it to a qualified serviceman for examination and repair. Incorrect reassembly can cause a risk of electric shock when the iron is used.
- Close supervision is necessary for any appliance being used by or near children. Do not leave iron unattended while connected or on an ironing board.
- Burns can occur from touching hot metal parts, hot water, or steam. Use caution when you turn a steam iron upside down or use the surge of steam—there may be hot water in the water tank. Avoid rapid movement of iron to minimize hot water spillage.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- The iron must be used and rested on a stable surface.
- When placing the iron on its stand, ensure that the surface on which the stand is placed is stable.
- The iron is not to be used if it has been dropped, if there are visible signs of damage or if it is leaking.

SPECIAL INSTRUCTIONS

○ To avoid a circuit overload, do not operate another high-wattage appliance on the same circuit.

- If an extension cord is absolutely necessary, a 15-ampere cord should be used. Cords rated for less amperage may overheat. Care should be taken to arrange the cord so that it cannot be pulled or tripped over.
- To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.
- This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, the extension cord should be used. Cords rated for less amperage may overheat. Care should be taken to arrange the cord so that it cannot be pulled or tripped over.

- **POLARIZED PLUG**
This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, the extension cord should be used. Cords rated for less amperage may overheat. Care should be taken to arrange the cord so that it cannot be pulled or tripped over.
- **TAMPER-RESISTANT SCREW**
Warning: This appliance is equipped with a tamper-resistant screw to prevent removal of the outer cover. To reduce the risk of fire or electric shock, do not attempt to remove the outer cover. There are no user-serviceable parts inside. Repair should be done only by authorized service personnel.
- **ELECTRICAL CORD**
a) A short power-supply cord (or detachable power-supply cord) is to be provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.
b) Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.
c) If a long detachable power-supply cord or extension cord is used, the marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance.
2) If the appliance is of the grounded type, the extension cord should be a grounding-type 3-wire cord, and
3) The longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over.
- **Note:** If the power supply cord is damaged, it should be replaced by qualified personnel; in Latin America, by an authorized service center.

SAVE THESE INSTRUCTIONS.

This product is for household use only.



Product may vary slightly from what is illustrated.

NEED HELP?

For service, repair or any questions regarding your appliance, call the appropriate 800 number on the cover of this book. Please **DO NOT** return the product to the place of purchase. Also, please **DO NOT** mail product back to manufacturer, nor bring it to a service center. You may also want to consult the website listed on the cover of this manual.

TWO-YEAR LIMITED WARRANTY

(Applies only in the United States and Canada)

What does it cover?

- Any defect in material or workmanship provided; however, Applicas liability will not exceed the purchase price of product.

For how long?

- Two years from the date of original purchase with proof of such purchase.

What will we do to help you?

- Provide you with a reasonably similar replacement product that is either new or factory refurbished.

How do you get service?

- Save your receipt as proof of date of sale.
- Visit the online service website at www.prodprotect.com/applika, or call toll-free 1-800-231-9786, for general warranty service.
- If you need parts or accessories, please call 1-800-738-0245.

What does your warranty not cover?

- Damage from commercial use
- Damage from misuse, abuse or neglect
- Products that have been modified in any way
- Products used or serviced outside the country of purchase
- Glass parts and other accessory items that are packed with the unit
- Shipping and handling costs associated with the replacement of the unit
- Consequential or incidental damages (Please note, however, that some states do not allow the exclusion or limitation of consequential or incidental damages, so this limitation may not apply to you.)

How does state law relate to this warranty?

- This warranty gives you specific legal rights. You may also have other rights that vary from state to state or province to province.

1. Be sure the water tank is filled to the MAX mark.
2. Hang the garment to be steamed on a clothes hanger. (Curtains or drapes can be steamed once they are hung.)

Vertical Steam

not in use.

Important: Always stand the iron on its heel rest when powered on but not in use.

4. When finished ironing, turn the fabric select dial to 0 and unplug the iron.
3. For best performance, press the steam button at 5-second intervals, between settings 0 and 3.
2. Be sure there is water in the tank. Steam is automatically turned off fabric type.
1. With the water tank filled to the MAX mark, set fabric select dial to appropriate setting (between 4 and 6) for your fabric. See fabric guide under the heel rest and read the garment's label to help you determine fabric type.

Surge of Steam

The Smart Steam® system automatically generates the right amount of steam for the fabric type selected. Once you select the temperature, the Smart Steam® technology detects the temperature and adjusts the steam power accordingly.

Smart Steam® Technology

IRONING WITH STEAM

- As soon as you pick up the iron, it will start heating again. Wait for iron to reheat completely before resuming operation.
- Once the iron reaches appropriate temperature, it will turn off after 30 seconds of inactivity if left on its soleplate or tipped over on its side. If left vertically on its heel rest, it will shut off after 8 minutes.

AUTOMATIC SHUTOFF IN 3 POSITIONS

2. Plug the iron.
1. Tilt the iron and using a clean measuring cup, pour water into water-fill opening until water reaches the MAX mark on the water tank. Refill as needed.

FILLING WATER TANK

Important: For optimum performance, before you start ironing, plug iron into electrical outlet and let it stand for 90 seconds.

Note: Use ordinary tap water for ironing. Do not use water processed through a home softening system.
Tip: If unsure of a garment's fiber, test a small area (on an inside seam or hem) before ironing.

Important: For optimum performance, let the iron stand for 90 seconds before beginning to iron.

Note: Use ordinary tap water for ironing. Do not use water processed through a home softening system.

Remove any labels, stickers or tags attached to the body or soleplate of the iron.

How to Use

This product is for household use only.

GETTING STARTED

3. Turn the fabric select dial to appropriate setting (between 4 and 6) for your fabric.
4. Hold the iron close to (but not touching) the fabric.
5. Pull the fabric tight in your free hand and pump the steam button as you move the iron over the fabric.

Important: Always stand the iron on its heel rest when powered on, but not in use.

USING SPRAY

Use to dampen tough wrinkles at any setting.

1. Be sure the iron is filled with water.
2. On first use, pump the spray button several times.

ANTI DRIP SYSTEM

The anti drip system prevents water spotting at low temperatures.

DRY IRONING

1. Turn the fabric select dial to setting 1, 2 or 3 (DRY) to iron without steam. The Smart Steam® system will automatically turn steam off.
2. To dry iron at higher settings, empty the water from the tank to prevent steaming.

Care and Cleaning

This product contains no user serviceable parts. Refer service to qualified service personnel.

CLEANING OUTSIDE SURFACES

- Make sure iron is unplugged and has cooled completely.
- Wipe soleplate and outer surfaces with a soft cloth dampened with water. Add mild household detergent. Never use abrasives, heavy-duty cleansers, vinegar or scouring pads that may scratch or discolor the iron.
- After cleaning, steam iron over an old cloth to remove any residue from the steam vents.

STORING YOUR IRON

1. Unplug iron and allow it to cool.
2. Check that fabric select dial is set to 0.
3. Store vertically on its heel to prevent water leaking from the soleplate.

BLACK & DECKER is a registered trademark of The Black & Decker Corporation, Towson, Maryland, USA

Made and Printed in People's Republic of China



© 2011 Applica Consumer Products, Inc.

Importado por / Imported by:

RAYOVAC ARGENTINA S.R.L.
 Humboldt 2495 Piso# 3
 (C1425FUG) C.A.B.A. Argentina.
C.U.I.T No. 30-70706168-1

Importado por / Imported by:

Rayovac de México SA de C.V
 KM. 14.5 Carretera Puente de Vigas.
 Col. Lechería, Tultitlán.
 Estado de México.
 C.P. 54940
 México
 Tel: (52) 5831-7070

Del interior marque sin costo
 01 (800) 714 2503

2011/7-5-10E/S

