

**Please Read and Save this Use and Care Book.**

## IMPORTANT SAFEGUARDS.

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions.
- To protect against risk of electrical shock do not immerse cord, plugs or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use, before putting on or taking off parts and before cleaning.
- Avoid contacting moving parts.
- Do not operate appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner. Contact Consumer Support at the toll-free number listed in the warranty section. This appliance has important markings on the plug blade. The attachment plug or entire cordset (if plug is molded onto cord) is not suitable for replacement. If damaged, the appliance must be replaced.
- The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock or injury.
- Do not use outdoors.
- Do not let cord hang over the edge of table or counter, or touch hot surfaces.
- Keep hands and utensils away from moving blade or disc while processing food to reduce the risk of severe injury to persons or damage to the food processor. A scraper may be used, but must be used only when the food processor is not running.
- To avoid product malfunction, do not fill the work bowl past the “Max Liquid Level” mark.

- Blade is sharp. Handle carefully.
- To reduce the risk of injury, never place cutting blade or discs on base without first putting bowl properly in place.
- Be certain cover is securely locked in place before operating appliance.
- Never feed food by hand. Always use food pusher.
- Do not attempt to defeat the cover interlock mechanism.
- Do not use this appliance for other than intended use.
- Do not place on or near a hot gas or electric burner or in a heated oven.
- Always attach plug to appliance and check to make sure that the control is OFF before plugging cord into wall outlet. To disconnect, turn the control to off, then remove plug from wall outlet
- Do not chop frozen food
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

## SAVE THESE INSTRUCTIONS.

**This product is for household use only.**

**Note:** The maximum rating is based on the chopping blade.

Other attachments may draw significantly less power.

##### POLARIZED PLUG (120V MODELS ONLY)

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

##### GROUNDLED PLUG (220V MODELS ONLY)

As a safety feature, this product is equipped with a grounded plug, which will only fit into a three-prong outlet. Do not attempt to defeat this safety feature. Improper connection of the grounding conductor may result in the risk of electric shock. Consult a qualified electrician if you are in doubt as to whether the outlet is properly grounded.

##### TAMPER-RESISTANT SCREW

**Warning:** This appliance is equipped with a tamper-resistant screw to prevent removal of the outer cover. To reduce the risk of fire or electric shock, do not attempt to remove the outer cover. There are no user-serviceable parts inside. Repair should be done only by authorized service personnel.

##### ELECTRICAL CORD

a) A short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord.

b) Extension cords are available and may be used if care is exercised in their use.

c) If an extension cord is used:

- The marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance;
- If the appliance is of the grounded type, the extension cord should be a grounding-type 3-wire cord; and
- The cord should be arranged so that it will not drape over the counter top or tabletop where it can be pulled on by children or tripped over.

**Note:** If the power cord is damaged, please contact the warranty department listed in these instructions.

##### CONTROL PANEL

The controls are located on the front of the base (A). Press OFF/PULSE (O/P) or ON (I) to select a function (see directions below).

##### OFF/PULSE CONTROL

- Processor should be stored in OFF position and unplugged when not in use.
- Use PULSE for short processing tasks. This lets you control the size and uniformity of foods being chopped.
- The OFF/PULSE button must be pressed and held for the appliance to operate in PULSE mode. When released, the appliance will stop.
- The motor of the processor will run as long as the OFF/PULSE button is held down. Press the button and then release to allow the blade to stop running and the food to fall to the bottom of the workbowl.
- Pulsing gives better control when chopping, mincing, mixing and blending foods. You can control the size of the foods, from coarse to fine.

##### ON CONTROL

When the ON control is selected, the processor will run continuously until the OFF/PULSE button is pressed.

##### HOW TO USE

This product is for household use only.

##### GETTING STARTED

- Remove all packing material, any stickers, and the plastic band around the power plug.
- Please go to www.prodprotect.com/blackanddecker to register your warranty.
- Important:** Handle chopping blade and slicing and shredding disk carefully. They are very sharp.
- Wash all removable parts as instructed in CARE AND CLEANING section of this manual.
- Select a level, dry countertop where the appliance is to be used, allowing air space on all sides to provide proper ventilation for the motor.

##### ASSEMBLING THE PROCESSOR

- Place center shaft on base.
- Place bowl over shaft onto base

- Rotate bowl clockwise towards the lock symbol until it clicks into place
- Place chopping blade or slicing/shredding disc onto post.
- Caution** **chopping blade and slicing and shredding disk are very sharp. Use caution when handling and storing.**
- Place cover on work bowl with the small latch to the right of the work bowl’s handle, as shown in figure (G).
- Rotate clockwise until cover locks into place. (NOTE: MUST SECURE WORK BOWL TO THE BASE BEFORE ATTACHING COVER)
- Insert the food pusher into the feed chute. (If slicing/shredding, use feed chute and food pusher to insert food into the slicing/shredding disk).
- Select your desired speed (On or PULSE)
- Press the OFF/PULSE button and allow the blade/disk to come to a complete stop before removing cover by twisting cover toward . At this time, carefully remove the slicing/shredding disk .
- Remove work bowl by turning it counterclockwise and lift off the base(NOTE: Must unlock cover before unlocking work bowl from base).
- Carefully remove Chopping Blade if chopping. Unplug appliance when not in use. (NOTE: Remove work bowl from appliance before removing the chopping blade to prevent food from leaking through the center opening of the work bowl).

**HOW TO LOCK THE PROCESS OR WORKBOWL IN POSITION**
**IMPORTANT:** Press the OFF/PULSE button before placing the workbowl on the base of the processor.

- Attach center post to base. Place the workbowl on the base with handle turned to the right of the locking mechanism (B) over the unlock symbol .
- Hold handle and rotate workbowl clockwise toward the lock symbol  until it clicks firmly into place (C).

**Note:** Be sure to lock the workbowl in place before attaching the chopping blade or the slicing and shredding disk and the cover.

##### HOW TO CHOP IN THE PROCESSING WORKBOWL

The chopping blade is used to coarsely or finely chop, mince, mix, and puree foods to a smooth consistency.

- Lock workbowl into position (see Illustrations B and C).
- Place chopper blade on center shaft, twist toward lock symbol  (D).

**Caution:** The chopping blade is very sharp. Use caution when handling and working.

- Place food in workbowl.
- Place cover on workbowl and lock into place by rotating clockwise (see Illustration G).

- Place the food pusher in place.

**Important:** Never use your fingers to direct food through the feed chute.

6. Select your desired speed (PULSE or ON).

**Note:** Process foods for no more than a few seconds at a time. Pulsing produces excellent results and offers greater control.

**Important:** Make sure the chopping blade has completely stopped spinning before removing cover from processing bowl.

7. Press the OFF/PULSE button and allow the chopping blade to stop revolving before removing cover. Twist cover toward  (counterclockwise) to remove.

**Important:** Unlock lid first before removing workbowl.

- Unlock workbowl by turning it counterclockwise and lift off base.

**Note:** Remove workbowl from appliance before removing the chopping blade to prevent food from leaking through the center opening of the workbowl.

- Twist center shaft toward unlock to remove.
- Unplug appliance when not in use.

##### HOW TO SLICE OR SHRED IN THE WORKBOWL

- Lock workbowl into position (see Illustrations B and C).
- Carefully place slicing and shredding disk on top of center shaft with appropriate side up (depending on work to be done) (E).

**Caution:** The slicing and shredding disk is very sharp. Use caution when handling and storing.

- Place cover on workbowl and lock into place by rotating cover clockwise (see Illustration G).

4. Fill feed chute with food. Position food pusher over food (F).

- Select the PULSE or ON control; press firmly on food pusher to guide food through feed chute, but do not force it.

**Note:** Heavy pressure on the pusher does not speed the work; use the pusher only as a guide. Let the processor do the work.

6. When finished, press OFF/PULSE and wait for disk to stop rotating before removing cover. Twist cover toward  counterclockwise to remove.

**Important:** Make sure the slicing and shredding disk has completely stopped spinning before removing cover from processing bowl.

**Important:** Unlock lid first before removing workbowl.

7. Carefully remove the slicing and shredding disk. Unlock workbowl by turning it counterclockwise and lifting it off the base.

- Unplug appliance when not in use.

##### HOW TO LOCK THE COVER

- Place cover over workbowl with the small latch to the right of the workbowl’s handle (G).

2. Hold feed chute of workbowl cover and rotate cover clockwise until cover locks into place.

**Important:** For your protection this appliance has an interlock system. The processor will not operate unless the processing workbowl and cover are properly locked in place.

- Insert the food pusher into the feed chute.

**Note:** The food pusher is used to guide foods through the feed chute and can be removed when adding liquid or additional foods while the processor is running.

##### HELPFUL TIPS

##### HELPFUL TIPS FOR CHOPPING

- Watch carefully to avoid over-processing foods.
- The PULSE button offers the best control.
- For best results, process foods that are about the same size.
- Do not overload the workbowl, past the “Max Liquid Level” mark (H).
- Never walk away from the processor while it is on.
- You may use hot but not boiling liquids.
- Do not process more 3 cups of liquid in the workbowl at any given time.
- To process meat, use no more than 2 cups of ¾-inch cubes. Process using PULSE in 5 second intervals.
- Insert a funnel into the feed chute when adding ingredients such as, oil, flour and sugar.

##### HELPFUL TIPS WHEN SLICING AND SHREDDING

- Before slicing fruits and vegetables in the processor, cut a thin slice from the bottom of the food to make it flat.
- Place the food cut side down in feed chute.
- Remove seeds and pits before processing such as cabbage.
- Remove the core from hard vegetables such as cabbage.
- When slicing thinner vegetables, cut them just short of the length of the feed chute and stand them vertically in feed chute so they are solidly packed and cannot turn or tilt.
- Shred hard cheeses at room temperature.
- Chill soft and semi-hard cheeses before shredding.

##### CARE AND CLEANING

This product contains no user serviceable parts. Refer service to qualified service personnel.

**Note:** Do not attempt to sharpen the cutting edges of the chopping blade or slicing and shredding disk. They are permanently sharpened at the factory and will be ruined if sharpened.

##### CLEANING

**Note:** Before cleaning, be sure unit is turned off and cord is unplugged.

- Completely disassemble processor parts before washing.
- Rinse parts immediately after processing for easy cleanup.
- Caution:** **The slicing and shredding disk is very sharp. Use caution when handling and storing.**
- Wipe base and feet with a damp cloth and dry thoroughly. Stubborn spots can be removed by rubbing with a damp cloth and a mild, nonabrasive cleaner. Do not immerse base in liquid.
- All removable parts can be washed by hand in hot water and dish soap or in a dishwasher. Hand washing of plastic parts will help to maintain the food processor’s appearance.

- If washing in a dishwasher, place removable parts on top rack only—not in or near utensil basket.
- Clean the internal shaft of the chopping blade; use a baby bottle brush to remove any clogged food particles.

##### STORAGE

Place stem and blade into bowl. Invert lid and place disk on top.

##### NEED HELP?

For service, repair or any questions regarding your appliance, call the appropriate 800 number on cover of this book. Please DO NOT return the product to the place of purchase. Also, please DO NOT mail product back to manufacturer, nor bring it to a service center. You may also want to consult the website listed on the cover of this manual.

##### TWO-YEAR LIMITED WARRANTY

(Applies only in the United States and Canada)

##### What does it cover?

- Any defect in material or workmanship provided; however, Spectrum Brands, Inc’s liability will not exceed the purchase price of product.

##### For how long?

- Two years from the date of original purchase with proof of such purchase.

##### What will we do to help you?

- Provide you with a reasonably similar replacement product that is either new or factory refurbished.

##### How do you get service?

- Save your receipt as proof of date of sale.
- Visit the online service website at www.prodprotect.com/blackanddecker, or call toll-free 1-800-465-6070, for general warranty service.
- If you need parts or accessories, please call 1-800-738-0245.

##### What does your warranty not cover?

- Damage from commercial use
- Damage from misuse, abuse or neglect
- Products that have been modified in any way
- Products used or serviced outside the country of purchase
- Glass parts and other accessory items that are packed with the unit
- Shipping and handling costs associated with the replacement of the unit
- Consequential or incidental damages (Please note, however, that some states do not allow the exclusion or limitation of consequential or incidental damages, so this limitation may not apply to you.)

##### How does state law relate to this warranty?

- This warranty gives you specific legal rights. You may also have other rights that vary from state to state or province to province.

##### Are there additional warranty exclusions?

- This warranty shall not be valid where it is contrary to U.S. and other applicable laws, or where the warranty would be prohibited under any economic sanctions, export control laws, embargos, or other restrictive trade measures enforced by the United States or other applicable jurisdictions. This includes, without limitation, any warranty claims implicating parties from, or otherwise located in, Cuba, Iran, North Korea, Syria and the disputed Crimea region.**

## Por favor lea este instructivo antes de usar el producto INSTRUCCIONES IMPORTANTES DE SEGURIDAD.

- Por favor lea todas las instrucciones.
- A fin de protegerse contra el riesgo de un choque electrico, no sumerja el cable, los enchufes ni el aparato en agua ni en ningun otro liquido.
- Todo aparato electrico usado en la presencia de los ninos o por ellos mismos requiere la supervision de un adulto.
- Desconecte el aparato del tomacorrientes cuando no este en uso, antes de instalarlo o retirarle piezas y antes de limpiarlo.
- Evite el contacto con las piezas moviles.
- No opere el aparato con un cable o enchufe dañado, o después de presentar problemas de funcionamiento o si se ha dejado caer o se ha dañado de manera alguna. Comuníquese con el departamento de Servicio al Cliente, al número gratis que aparece en la sección de garantía. Este aparato contiene marcas importantes en el contacto del enchufe. Ni el enchufe de accesorio ni el enchufe conector (si el enchufe está moledado en el cable) es apto para ser reemplazado. Si se daña, el aparato debe ser reemplazado.
- El uso de accesorios no recomendados por el fabricante del aparato puede ocasionar incendio, choque electrico o lesiones.
- No use este aparato a la intemperie.
- No permita que el cable cuelgue del borde de la mesa o del mostrador ni que entre en contacto con las superficies calientes.
- Para reducir el riesgo de lesiones severas a las personas o dano al procesador de alimentos, mantenga las manos y utensilios alejados de las cuchillas o discos mientras el aparato esta en uso. Se puede usar un raspador siempre y cuando el procesador no este en funcionamiento.
- Para evitar mal funcionamiento del producto, no llene el recipiente pasado de la marca “Max Liquid Level” (nivel máximo de líquido).
- Las cuchillas tienen filo. Manejelas con cuidado.
- Para reducir el riesgo de lesiones, nunca instale la cuchilla de cortar ni los discos en la base sin antes colocar el recipiente debidamente en su lugar.

- Verifique que la tapa este bien asegurada antes de operar el aparato.
- Nunca empuje los alimentos con la mano. Siempre use el empujador de alimentos.
- No trate de anular el mecanismo de enclavamiento de la tapa.
- No utilice el electrodoméstico para otro uso distinto con el que fue diseñado.
- No coloque el aparato sobre ni cerca de las hornillas de gas o eléctricas ni adentro de un horno caliente.
- Siempre conecte el enchufe en el aparato y verifique que el control está en posición de apagado (OFF) antes de enchufar el cable al tomacorriente. Para desconectar, gire el control a la posición de apagado y luego retire el enchufe del tomacorriente.
- No cortar alimentos congelados
- Este aparato no está diseñado para ser usado por personas (incluido niños) con capacidad limitada física, mental o sensoriales disminuidas y falta de experiencia o conocimiento que les impida utilizar el aparato con toda seguridad sin supervisión o instrucción.
- Se debe asegurar la supervisión de los niños para evitar que usen el aparato como juguete.

## CONSERVE ESTAS INSTRUCCIONES.

### Este aparato electrico es para uso domestico unicamente.

**Note:** La calificación eléctrica es basada en la cuchilla para picar y otros accesorios pueden extraer menos potencia.

##### ENCHUFE POLARIZADO (SOLAMENTE PARA LOS MODELOS DE 120V)

Este aparato cuenta con un enchufe polarizado (un contacto es más ancho que el otro). A fin de reducir el riesgo de un choque eléctrico, este enchufe encaja en un tomacorriente polarizado en un solo sentido. Si el enchufe no entra en el tomacorriente, inviértalo y si aun así no encaja, consulte con un electricista. Por favor no trate de alterar esta medida de seguridad.

##### ENCHUFE DE TIERRA (SOLAMENTE PARA LOS MODELOS DE 220V)

Como medida de seguridad, este producto está equipado con un enchufe de tierra que se conecta a un tomacorriente de tres patas. No

trate de alterar esta medida de seguridad. La conexión impropia del conductor de tierra puede resultar en el riesgo de descarga eléctrica. Consulte a un electricista calificado si tiene alguna duda en cuanto a si la salida es correcta a tierra.

##### TORNILLO DE SEGURIDAD

**Advertencia:** Este aparato cuenta con un tornillo de seguridad para evitar la remoción de la cubierta exterior del mismo. A fin de reducir el riesgo de incendio o de choque eléctrico, por favor no trate de remover la cubierta exterior. Este producto no contiene piezas reparables por el consumidor. Toda reparación se debe llevar a cabo únicamente por personal de servicio autorizado.

##### CABLE ELÉCTRICO

- a) Un cable de alimentación corto es provisto para reducir los riesgos de enredarse o tropezar con un cable más largo.
- b) Existen cables de extensión disponibles y estos pueden ser utilizados si se toma el cuidado debido en su uso.
- c) Si se utiliza un cable de extensión:
  - 1) La clasificación eléctrica marcada del cable de extensión debe ser, como mínimo, igual a la clasificación eléctrica del aparato;
  - 2) Si el aparato es del tipo de conexión a tierra, el cable de extensión debe ser un cable de tres alambres de conexión a tierra; y
  - 3) El cable debe ser acomodado de manera que no cuelgue del mostrador o de la mesa para evitar que un niño tire del mismo o que alguien se tropiece sin darse cuenta.

**Note:** Si el cable de alimentación está dañado, por favor llame al número del departamento de garantía que aparece en estar instrucciones.

##### PANEL DE CONTROL

El control está en la parte delantera de la base (A). Presione PULSE (O/P) o ON (I) para escoger una función (ver las instrucciones abajo).

##### CONTROL DE APAGADO/PULSO (OFF/PULSE)

El aparato debe de permanecer en la posición de apagado (OFF) y desenchufado siempre que no esté en uso.

- El dispositivo de pulsación (PULSE) se recomienda para las funciones cortas; permite supervisar y controlar mejor la uniformidad y textura de los alimentos.
- Presione y sostenga el botón de apagado/pulso (OFF/PULSE). Cuando se suelta, el aparato para.

- El motor del procesador funciona mientras uno presiona el botón de apagado/pulso (OFF/PULSE). Presione el botón y luego súeltelo para permitir que las cuchillas dejen de girar y lo alimentos puedan caer al fondo del recipiente.

• Esta función permite mejor control al cortar, picar, mezclar y combinar alimentos. Usted puede controlar el tamaño de los alimentos, de gruesos a finos.

##### CONTROL DE ENCENDER (ON)

Con el control de encender (ON), el procesador funciona continuamente hasta que uno presione el control de apagado (OFF).

##### COMO USAR

Este aparato es solamente para uso doméstico.

##### PRIMEROS PASOS

- Retiere todo material de empaque, etiquetas y la tira plástica alrededor del enchufe.
- Por favor, visite www.prodprotect.com/blackanddecker para registrar su garantía.

**Importante:** En vista del filo agudo que traen la cuchilla para picar y el disco para rebanar y rallar, manéjelos con mucho cuidado.

- Lave todas las piezas removibles según las instrucciones en la sección de Cuidado y limpieza en este manual.

• Antes de usar este aparato, asegúrese de colocarlo sobre una superficie plana, seca y limpia con suficiente ventilación para el motor.

##### ENSAMBLAJE DEL PROCESADOR DE ALIMENTOS

- Coloque el eje central de la base.
- Coloque un tazón sobre el eje en la base
- Gire el recipiente hacia el símbolo de cierre hasta que encaje en su lugar.
- Coloque la cuchilla de picar o disco de corte / trituración sobre el poste.
- Precaución: La cuchilla de picar y el disco tienen mucho filo. Proceda con cuidado al manipularlos y almacenarlos.**
- Coloque la tapa sobre el recipiente con la palanca del mecanismo de seguro orientada hacia la derecha del asa del recipiente, según se muestra en la ilustración H.
- Gire el recipiente hacia la derecha hasta que la tapa se cierre y quede asegurada en su lugar. (NOTA: EL RECIPIENTE DEBE ESTAR BIEN ASEGURADO A LA BASE ANTES DE COLOCAR LA TAPA).
- Coloque el empujador de alimentos en el tubo de alimentación. (Si desea rebanar o desmenuzar, use el tubo de alimentación y el empujador de alimentos para colocar los ingredientes en el disco de rebanar y desmenuzar).
- Seleccione la velocidad deseada (encendido (On) o pulso (PULSE).
- Presione el botón de apagado (OFF)/pulso (PULSE) y espere a que el disco pare de funcionar completamente, luego gire la tapa hacia el símbolo de abrir para retirarla.  Después de retirar la tapa, retire el disco con mucho cuidado.
- Para retirar el recipiente, gírelo hacia la izquierda y sáquelo de la base. (Nota: Primero debe abrir la tapa antes de liberar el recipiente de la base).
- Si utilizó la cuchilla de picar, retírela con mucho cuidado. Desenchufe el procesador de alimentos cuando no esté en uso. (Nota: Primero retire el recipiente antes de retirar la cuchilla de picar para prevenir que los alimentos se salgan a través del orificio localizado en el centro del recipiente).

##### COMO ASEGURAR EL RECIPIENTE EN SU LUGAR

**Importante:** Presione el botón de apagado/pulso (OFF/PULSE) antes de colocar el recipiente en la base.

- Coloque el recipiente sobre el vástago central de la base, con el asa orientada hacia la derecha del mecanismo de cierre (B)

sobre del símbolo de abrir .

2. Sujete el asa y gire el recipiente hacia el símbolo de cierre  hasta encajar firmemente en su lugar (C).

**Note:** Asegure bien el recipiente antes de insertar la cuchilla para picar o el disco para rebanar y rallar, y colocar la tapa.

##### COMO PICAR EN EL RECIPIENTE

Esta cuchilla se usa para picar texturas gruesas o finas, para mezclar y deshaçar los alimentos a consistencia suave.

- Coloque el recipiente en la posición correcta (ver ilustración B y C).
- Coloque la cuchilla para picar sobre la guía central, gírela hacia el símbolo de cierre  (D).
- Advertencia:** La cuchilla para picar tienen mucho filo. Tenga cuidado al manejarla o guardarla.
- Coloque los alimentos en el recipiente.
- Coloque la tapa arriba del recipiente y cierre hasta que encaje en su lugar, girándolo a la izquierda (ver Ilustración G).
- Coloque el empujador, en su lugar.
- Importante:** Nunca use sus dedos para guiar los alimentos a través del conducto de alimentos.
- Use el control de pulso (PULSE), o el control de encender (ON) para procesar los alimentos.

**Note:** Se recomienda procesar los alimentos en incrementos de segundos a la vez. La función de pulsación permite mejor control y resultados excelentes.

7. Presione el botón de apagado/pulso (OFF/PULSE) y espere a que las cuchillas dejen de girar antes de quitar la tapa. Gire la tapa hacia la posición de abrir .

**Importante:** Verifique que las cuchillas hayan dejado de girar completamente antes de quitar la tapa del recipiente.

**Importante:** Abra la tapa antes de retirar el recipiente.

