

# FARBERWARE®

TIMELESS QUALITY • EVERYDAY EXCELLENCE

USA/Canada 1-800-231-9786

Accessories/Parts 1-800-738-0245

Register your product at [www.prodprotect.com/applica](http://www.prodprotect.com/applica)

## STAINLESS STEEL 36-CUP COFFEE URN

- † 1. Lid handle (Part #30411)
- † 2. Lid (Part #30410)
- 3. Lid lock tabs
- † 4. Handles (Part #30487)
- 5. Heating well
- 6. Ready indicator light
- 7. Spigot
- 8. Base
- 9. Cord with 3-prong plug
- 10. Washer
- †11. Percolator tube (Part #30421)
- †12. Coffee basket (Part #30423)
- 13. Water level markings (not shown)

**Note:** † indicates consumer replaceable/removable parts

**MODEL** ○ FSU236


Please Read and Save this Use and Care Book.

## IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to prevent the risk of fire, electric shock, burns, or injuries or damages.

- Read all instructions before use.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electrical shock and injury to persons do not immerse cord, plugs, or the appliance in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow it to cool before putting on or taking off parts and before cleaning the appliance.
- Do not operate appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner. Call our toll-free customer assistance number on examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock or injuries to persons.

Product may vary slightly from what is illustrated.

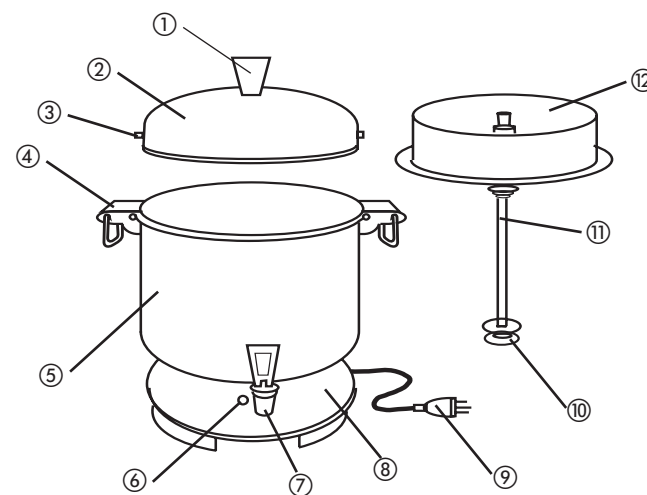

- Do not use outdoors or in a damp area.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, remove plug from wall outlet first, then remove cord from the appliance.
- Do not use this appliance for anything other than its intended use.
- Scalding may occur if the lid is removed during the brewing cycles.
- Do not clean container with cleaners, steel wool pads, or other abrasive material.
- To reduce the risk of fire or electric shock, do not remove the bottom cover on the appliance. No user serviceable parts inside. Call our toll-free customer assistance number for repair.
- Be certain the cover is securely in place during the brew cycle and when serving coffee.

## SAVE THESE INSTRUCTIONS.

**This appliance is for household use only.**

## ADDITIONAL SAFEGUARDS

DO NOT OPERATE APPLIANCE IF THE LINE CORD SHOWS ANY DAMAGE OR IF APPLIANCE WORKS INTERMITTENTLY OR STOPS WORKING ENTIRELY.

**Warning:** This appliance generates heat and escaping steam during use. Proper precautions must be taken to prevent the risks of burns, fires, or other injury to person or damage to property.

- All users of this appliance must read and understand this Use and Care Manual before operating or cleaning this appliance.
- The cord to this appliance should be plugged into a 120V AC electrical outlet only.
- Use water only in this appliance! Do not put any other liquids or food products in this appliance. Do not mix or add anything to the water placed in this appliance, except as instructed in the User Maintenance Instructions to clean the appliance.
- Do NOT attempt to move an appliance containing hot liquids. Allow appliance to cool completely before moving.
- Keep appliance at least 4 inches away from walls or other objects during operation. Do not place any objects on top of appliance while it is operating. Place appliance on a surface that is resistant to heat.
- If this appliance begins to malfunction during use, immediately unplug the cord. Do not use or attempt to repair the malfunctioning appliance.
- If this appliance falls or accidentally becomes immersed in water or any other liquid, unplug it immediately. Do not reach into the water! Do not use this appliance after it has fallen into or has become immersed in water. Contact Consumer Service for examination and repair.
- Do not leave this appliance unattended during use.
- The appliance must be left to cool down sufficiently before adding more water to avoid splattering.
- Always use fresh, cool water in your appliance. Warm water or other liquids, except as listed in cleaning section, may cause damage to the appliance.
- Do not plug the cord into outlet without water in the Urn.
- Caution: Always unplug when only 2 cups of coffee remain.
- Caution: Remove parts carefully. Coffee urn and parts will be hot.

### GROUNDING PLUG

As a safety feature, this product is equipped with a grounded plug, which will only fit into a three-prong outlet. Do not attempt to defeat this safety feature. Improper connection of the grounding conductor may result in the risk of electric shock. Consult a qualified electrician if you are in doubt as to whether the outlet is properly grounded.

### TAMPER-RESISTANT SCREW

**Warning:** This appliance is equipped with a tamper-resistant screw to prevent removal of the outer cover. To reduce the risk of fire or electric shock, do not attempt to remove the outer cover. There are no user-serviceable parts inside. Repair should be done only by authorized service personnel.

### ELECTRICAL CORD

- a) A short power-supply cord (or detachable power-supply cord) is to be provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.
- b) Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.
- c) If a long detachable power-supply cord or extension cord is used,
  - 1) The marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance,
  - 2) If the appliance is of the grounded type, the extension cord should be a grounding-type 3-wire cord, and
  - 3) The longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over.

**Note:** If the power supply cord is damaged, it should be replaced by qualified personnel; in Latin America, by an authorized service center.

## How to Use

This product is for household use only.

### GETTING STARTED

- Remove all plastic and paper from the box.
  - Remove and save use and care manual.
  - Register your warranty at [www.prodprotect.com/applica](http://www.prodprotect.com/applica).
1. Clean the coffee urn thoroughly before using for the first time (see CARE AND CLEANING).
  2. Remove lid and basket. Check to make sure the spigot is closed. Use cold, fresh tap water to fill water reservoir. Fill according to the water level markings on the inside of urn. Marks on inside of the urn show cup levels desired. Do not overfill or under fill.
  3. Wet the coffee basket to help keep small particles of coffee from sifting through. Add desired amount of regular or percolator grind coffee to basket.
  4. Place basket on the percolator tube (make sure the spring is on the percolator tube). The percolator tube must be resting in the heating well (if not, coffee urn may not percolate).
  5. Replace the lid and secure in position by turning lid clockwise until lid lock tabs fit into handle slots. To reduce coffee spills, make sure that the cover is completely locked into the handle slots.

The following chart suggests amount of coffee to use for medium brew; amounts can be varied to suit personal taste and particular coffees

#### STANDARD COFFEE MEASURES TO USE

CUPS TO BE BREWED	AMOUNT OF GROUND COFFEE TO USE*	CUPS TO BE BREWED	AMOUNT OF GROUND COFFEE TO USE*
10	1 cup	22	2¼ cups
12	1¼ cups	24	2½ cups
14	1½ cups	30	3 cups
18	1¾ cups	36	3½ cups

1 cup brewed coffee = 5 fluid ounces

\*Use standard measuring cups

6. Plug into a grounded, 3 prong plug, 120 V AC wall outlet. Do NOT plug the cord into outlet without water inside the urn. Coffee brewing begins within seconds and continues at a cup-a-minute speed.
7. When coffee brewing is complete, percolating will stop and the ready indicator light will illuminate. The urn automatically switches to “Keep Warm” setting to preserve fresh-tasting coffee at hot, ready-to-serve temperature. For best flavor, remove coffee basket and pump tube with oven mitt or pot holder when brewing is completed. Replace the cover making sure it is completely locked into the handle slots.

### REMOVE PARTS CAREFULLY: URN AND PARTS WILL BE HOT!

8. Unplug from wall outlet and allow the coffee urn to cool before washing.

**Caution: Remove Parts Carefully—coffee urn and parts will be hot! Always unplug the urn when only 2 cups of coffee remain.**

**Note: “KEEP WARM”** function continues operating until you unplug urn.

## Care and Cleaning

This product contains no user serviceable parts. Refer service to qualified service personnel.

Make sure your urn is unplugged and cool before cleaning.

1. Remove lid, coffee basket and percolator tube carefully—grounds and remaining coffee may still be warm.
2. Wash the inside of the coffee urn and the removable parts with warm, soapy water after every use. DO NOT immerse the base in water.
3. When washing the percolator tube make sure the washer on the bottom remains loose. If coffee grounds are trapped in this area, hold the percolator tube under running water or with a wooden toothpick to remove them.
4. Wipe outside of the coffee urn with a damp cloth and dry with a towel. Do not use abrasive metal scouring pads or cleansers on the outside of the coffee urn to avoid scratches.

### NEED HELP?

For service, repair or any questions regarding your appliance, call the appropriate 800 number on cover of this book. Please DO NOT return the product to the place of purchase. Also, please DO NOT mail product back to manufacturer, nor bring it to a service center. You may also want to consult the website listed on the cover of this manual.

### Three-Year Limited Warranty (Applies only in the United States and Canada)

#### What does it cover?

- Any defect in material or workmanship provided; however, Applica’s liability will not exceed the purchase price of product.

#### For how long?

- Three years from the date of original purchase with proof of such purchase.

#### What will we do to help you?

- Provide you with a reasonably similar replacement product that is either new or factory refurbished.

#### How do you get service?

- Save your receipt as proof of date of sale.
- Check our on-line service site at [www.prodprotect.com/applica](http://www.prodprotect.com/applica), or call our toll-free number, 1-800-231-9786, for general warranty service.
- If you need parts or accessories, please call 1-800-738-0245.

#### What does your warranty not cover?

- Damage from commercial use
- Damage from misuse, abuse or neglect
- Products that have been modified in any way
- Products used or serviced outside the country of purchase
- Glass parts and other accessory items that are packed with the unit
- Shipping and handling costs associated with the replacement of the unit
- Consequential or incidental damages (Please note, however, that some states do not allow the exclusion or limitation of consequential or incidental damages, so this limitation may not apply to you.)

#### How does state law relate to this warranty?

- This warranty gives you specific legal rights, and you may also have other rights that vary from state to state or province to province.

Made and Printed in People’s Republic of China



© 2011 Applica Consumer Products, Inc.

2010/12-1-14