

FARBERWARE®

SPECIAL SELECT



USE & CARE INSTRUCTIONS BELGIAN WAFFLE MAKER

FSWM400

IMPORTANT SAFEGUARDS

When using electrical appliance, basic safety precautions should always be followed, including the following:

1. Read all instructions
2. Do not touch hot surfaces. Use handles. Use oven mitts or potholders.
3. To protect against risk of electric shock, do not immerse cord, plugs, or appliance in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
6. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions, or has been damaged in any manner. Contact Consumer Service for examination, repair, or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
12. To disconnect, remove plug from wall outlet.
13. Do not use appliance for other than intended use.

SAVE THESE INSTRUCTIONS

This product is for household use only.

ADDITIONAL IMPORTANT SAFEGUARDS

CAUTION: HOT SURFACES: *This appliance is hot during operation and retains heat for some time after turning off. Always use oven mitts when handling hot materials and allow metal parts to cool before cleaning. Do not place anything on top of the Waffle Maker while it is operating or while it is hot.*

CAUTION: *This appliance generates heat and escaping steam during use. Proper precautions must be taken to prevent the risk of burns, fires or other damage to persons or property.*

1. All users of this appliance must read and understand this Owner's Manual before operating or cleaning this appliance.
2. The cord to this appliance should be plugged into a 120V AC electrical outlet only.
3. If this appliance begins to malfunction during use, immediately unplug the cord. Do not use or attempt to repair the malfunctioning appliance.
4. Avoid electric shock by unplugging the Waffle Maker before cleaning.

CAUTION: A short power-supply cord is provided to reduce the risk of personal injury resulting from becoming entangled in or tripping over a longer cord.

Extension cords are available from local hardware stores and may be used if care is exercised in their use.

If an extension cord is required, special care and caution is necessary. Also, (1) the marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance, and (2) the cord should be arranged so that it will not drape over the countertop or table-top where it can be pulled on by children or tripped over unintentionally.

POLARIZED PLUG

This appliance has a **polarized plug** (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

ELECTRIC POWER

If the electrical circuit is overloaded with other appliances, your appliance may not operate properly. It should be operated on a separate electrical circuit from other appliances.


PLASTICIZER WARNING

CAUTION: To prevent Plasticizers from migrating from the finish of the counter top or table top or other furniture, place **NON-PLASTIC** coasters or place mats between the appliance and the finish of the counter top or table top.

Failure to do so may cause the finish to darken, permanent blemishes may occur or stains can appear.

GETTING TO KNOW YOUR FARBERWARE® BELGIAN WAFFLE WAKER

PRODUCT MAY VARY SLIGHTLY FROM ILLUSTRATIONS

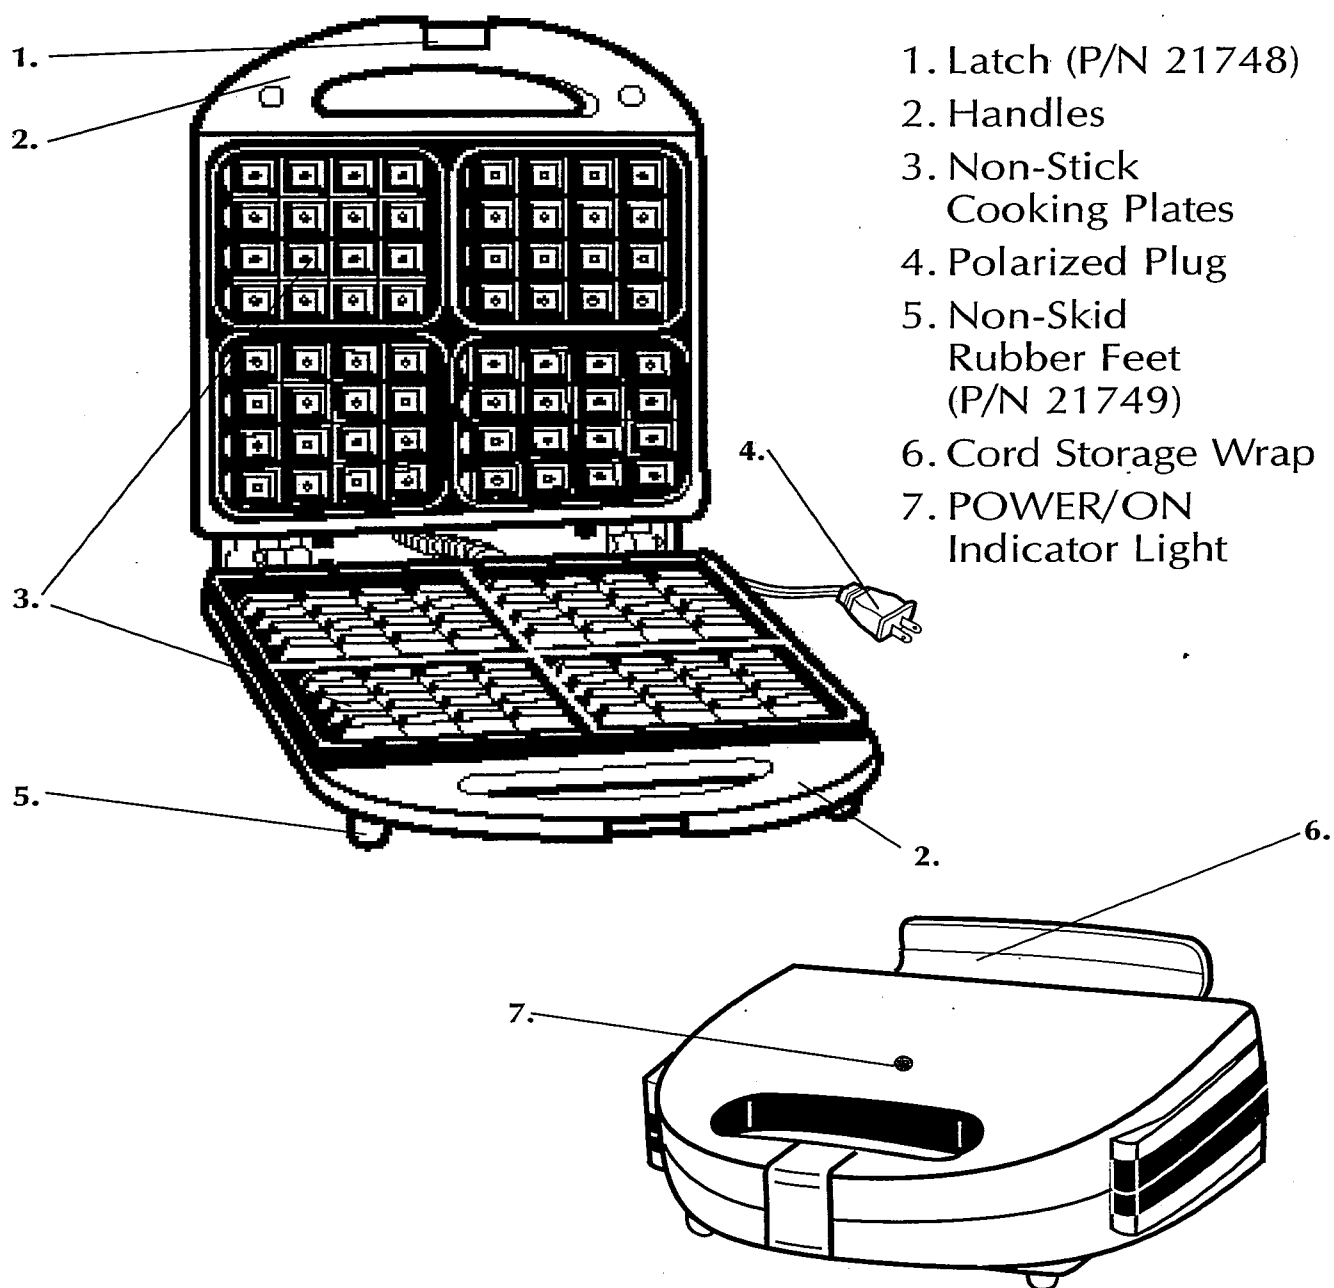

OPERATE ONLY IN THE CLOSED POSITION.

IMPORTANT: Before using, operate the appliance without batter in order to burn off residue on the Heating Elements.

CAUTION: To avoid burns, caution should be taken when handling the Waffle Maker. The sides of the Heating Plates are exposed and may be hot.

HELPFUL HINTS

- Sift all dry ingredients.
- Egg yolks should be separated from egg whites before mixing.
- Beating egg whites separately, and then folding into the batter, will create lighter and crispier waffles.
- Egg whites should be beaten until they form stiff peaks. Stir 1/4 of beaten egg whites into batter to lighten it, then gently fold the rest of the egg whites into the batter (there should be white streaks in the batter). ***Do not over-mix batter when adding egg whites.***
- Do not open the Waffle Maker during the first minute of baking, or waffles will separate. Completely bake waffles before removing them from the unit.
- When waffles are done, the Lid should lift open easily. Lift the Lid gently. If Lid pulls, wait another minute and try lifting it open again.
- Waffles can be made ahead of time, then refrigerated or frozen. When ready to eat, just heat waffles in oven or toaster. This is ideal when serving waffles to several people at once.

BEFORE FIRST USE

1. Carefully unpack Waffle Maker. Unlatch the Cover by pulling the bottom piece of the Latch towards you until it unsnaps and the top Cooking Plate easily lifts up.
2. Wipe all surfaces with a slightly damp, soft cloth. Never immerse in water.
3. Set the appliance on a dry, clean and flat countertop surface where it can be easily plugged into an electrical outlet.
4. Plug cord into a 120V AC electrical outlet. The Indicator Light will illuminate. You may notice smoke and a slight odor while residues burn off. Leave the unit plugged in without any batter or food for several minutes.
5. Allow the Waffle Maker to operate until smoke and odor dissipate; then unplug Waffle Maker and allow it to cool.
BE CAREFUL, THE COOKING PLATES WILL BE HOT!

OPERATING INSTRUCTIONS

1. Be sure the Cooking Plates are clean and free from dust. If necessary, wipe with a damp cloth.
2. Raise the Lid. When using the Waffle Maker for the first time, brush the Cooking Plates with oil, butter or margarine. Do not use spray-on oils, grease, or shortening as these can cause build-up on the Cooking Plates. This will help to protect and condition the non-stick cooking surfaces.
3. Close the Lid.
4. Plug appliance into standard electrical outlet. The Indicator Light will come on, indicating the unit has begun heating.
5. While preparing batter, allow appliance to pre-heat (about 5 minutes). The Indicator Light will turn off when unit has reached heating temperature.
6. Open Waffle Maker and pour batter evenly to cover the Cooking Plates. One large waffle can be separated into 4 individual waffles. Be careful not to pour too much batter, as excess batter will seep out of Cooking Plates.
7. Carefully close the Waffle Maker. Do not force shut. Steam will be released between the Cooking Plates. **CAUTION SHOULD BE TAKEN TO PREVENT HANDS FROM COMING INTO CONTACT WITH THE STEAM.**
8. Cooking time should take approximately 3-5 minutes. Exact cooking time will be a matter of your taste and will depend on type of batter and ingredients used. The Indicator Light turns on and off as the unit cycles to maintain ideal heating temperatures; this prevents overheating. Avoid opening your Waffle Maker before cooking is completed, as this may cause the waffle to stick or bake poorly.
9. When the waffles are cooked, open the Lid using the Handle — do not pull on the Latch. Remove waffles using a plastic or wooden spatula. Do not use metal tongs or knives, as these may damage the non-stick coating.
10. Keep the Lid closed to preserve the heat until ready for the next batch of waffles.
11. After use, immediately unplug from the electrical outlet.
12. If waffles are not to be consumed immediately, place the waffles on a paper napkin to absorb condensation. To keep hot, place on a rack in an ovenproof dish and warm in the oven at about 200°-250°F. Waffles will keep for about 20 minutes and then begin to dry out.

USER MAINTENANCE INSTRUCTIONS

This appliance requires little maintenance. It contains no user serviceable parts. Do not try to repair it yourself. Refer it to qualified personnel if servicing is needed.

TO CLEAN

To keep your Waffle Maker operating properly, clean regularly.

CAUTION: Do not immerse the Waffle Maker cord or plug in water or any other liquid.

1. Unplug the Waffle Maker and allow it to cool completely before cleaning.
2. Wipe the exterior with a clean, soft, damp cloth. Dry thoroughly.
3. To remove any residue on the Cooking Plates, wipe with a soft, damp cloth or absorbent paper towel. Dry thoroughly.
4. Do not use steel wool, scouring pads, or abrasive cleaners, as they will damage the finish.

TO STORE

1. Clean the Waffle Maker as instructed above.
2. Wrap power cord around Cord Storage Wrap on back of the Waffle Maker. Never wrap cord tightly around the appliance. Do not put any stress on cord where it enters unit, as this could cause it to fray and break.
3. Your Waffle Maker may be stored in a vertical position (Handles pointed up). Hold the Cooking Plates together, close the Latch, and loosely wind the cord around the Cord Storage Wrap at the base of the unit. Stand up for neat and compact storage.
4. Or, store the Waffle Maker in its original box, in a clean, dry location.

FARBERWARE®

ONE-YEAR LIMITED WARRANTY

Warranty: This Farberware® product is warranted by Salton, Inc. to be free from defects in materials or workmanship for a period of (1) year from the original purchase date. This product warranty covers only the original consumer purchaser of the product.

Warranty Coverage: This warranty is void if the product has been damaged by accident in shipment, unreasonable use, misuse, neglect, improper service, commercial use, repairs by unauthorized personnel, normal wear and tear, improper assembly, installation or maintenance abuse or other causes not arising out of defects in materials or workmanship. This warranty is effective only if the product is purchased and operated in the USA, and does not extend to any units which have been used in violation of written instructions furnished with the product or to units which have been altered or modified or to damage to products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.

Implied Warranties: ANY IMPLIED WARRANTIES WHICH THE PURCHASER MAY HAVE ARE LIMITED IN DURATION TO ONE (1) YEAR FROM THE DATE OF PURCHASE. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

Warranty Performance: During the above one-year warranty period, a product with a defect will be either repaired or replaced with a reconditioned comparable model (at our option) when the product is returned to the Repair Center, or the purchase price refunded. The repaired or replacement product will be in warranty for the balance of the one-year warranty period and an additional one-month period. No charge will be made for such repair or replacement.

Service and Repair: Should the appliance malfunction, you should first call toll-free 1 (888) 881-8101 between the hours of 9:00 am and 5:00 pm Central Standard Time and ask for CONSUMER SERVICE stating that you are a consumer with a problem. Please refer to model number FSWM400 when you call.

In-Warranty Service (USA): For an appliance covered under the warranty period, no charge is made for service or postage. Call for return authorization 1 (888) 881-8101.

Out-of Warranty Service: A flat rate charge by model is made for out-of-warranty service. Include \$8.00 (U.S.) for return shipping and handling. We will notify you by mail of the amount of the charge for service and require you to pay in advance for the repair or replacement.

For Products Purchased in the USA, but Used in Canada: You may return the product insured, packaged with sufficient protection, and postage and insurance prepaid to the USA address listed below. Please note that all customs duty / brokerage fees, if any, must be paid by you and we will require you to pay the cost of customs duty / brokerage fees to us in advance of our performing any service.

Risk During Shipment: We cannot assume responsibility for loss or damage during incoming shipment. For your protection, carefully package the product for shipment and insure it with the carrier. Be sure to enclose the following items with your appliance: any accessories related to your problem, your full return address and daytime phone number, a note describing the problem you experienced, a copy of your sales receipt or other proof of purchase to determine warranty status. C.O.D. shipments cannot be accepted.

To return the appliance, ship to:

ATTN: Repair Center
Salton, Inc.
708 South Missouri Street
Macon, MO 63552

To contact us, please write to, call, or email:

Salton, Inc.
P.O. Box 7366
Columbia, MO 65205-7366
1-888-881-8101
E-mail: Farberware-electric@Saltonusa.com

Limitation of Remedies: No representative or person is authorized to assume for Salton, Inc. any other liability in connection with the sale of our products. There shall be no claims for defects or failure of performance or product failure under any theory of tort, contract or commercial law including, but not limited to negligence, gross negligence, strict liability, breach of warranty and breach of contract. Repair, replacement or refund shall be the sole remedy of the purchaser under this warranty, and **in no event shall Salton be liable for any incidental or consequential damages, losses or expenses.** Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

Legal Rights: This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

©2002 Salton, Inc. All rights reserved.

FARBERWARE® is a registered trademark of Farberware Inc.®

Manufactured and sold pursuant to a license from Farberware Inc.®