

 **BLACK & DECKER®**

SAVE THIS USE AND CARE BOOK

Spatula Smart® Mixer

With Power Boost



M175W Shown



1-800-231-9786
QUESTIONS? Please call us TOLL FREE

MODELS M175/M175W

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:


- Read all instructions.
- To protect against a risk of electric shock, do not immerse mixer, cord, plug, or base unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
- Avoid contacting moving parts. Keep hands, hair, clothing, and handheld spatulas and other utensils away from beaters/whisks during operation to prevent injury and/or damage to the mixer.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return the appliance to an authorized service center for examination, repair, or adjustment.
- The use of attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over the edge of table or counter or touch hot surfaces.
- Remove beaters/whisks and spatula attachment from mixer before washing.
- Do not use appliance for other than intended use.
- Mixing flammable non-food substances may be hazardous.

- Do not operate in the presence of explosive and/or flammable fumes.
- This product is intended for household use only and not for commercial or industrial use.
- Do not abuse the cord. Never carry the mixer by the cord or yank the cord to disconnect it from an outlet; instead, grasp the plug and pull to disconnect.
- Do not attempt to repair the mixer yourself; instead take it to a Black & Decker (U.S.) Inc. Household Appliance Company-Owned or Authorized Service Center for repair. Call the toll-free “800” number listed on the cover of this book for the location of the Service Center nearest you.

SAVE THESE INSTRUCTIONS

POLARIZED PLUG

This appliance has a polarized plug—one blade is wider than the other. To reduce the risk of electric shock, this plug will fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse it. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature by modifying the plug in any way.

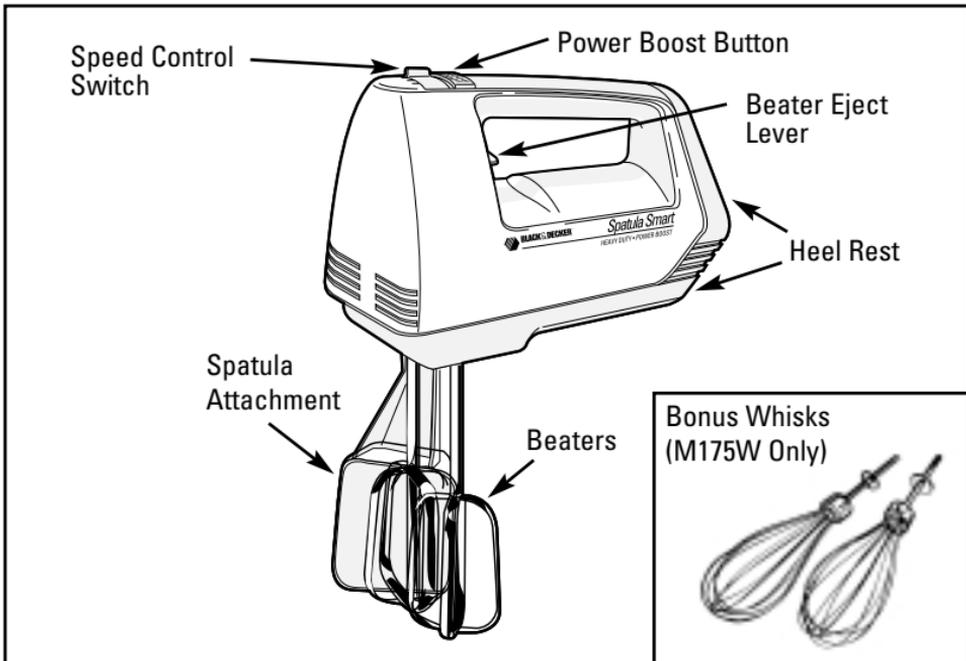

Convenience Features

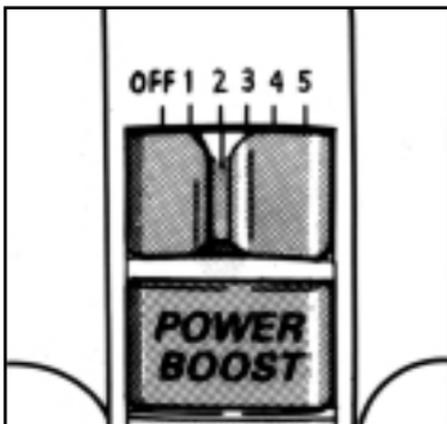


Figure A

POWER BOOST

The Power Boost feature works great on tough mixing tasks and has easy-access thumb control. (Figure A)

The Power Boost feature lets you increase the mixing speed to the maximum power level from any speed setting by depressing the Power Boost Button. When you feel the Mixer slowing down or straining in tough mixing tasks

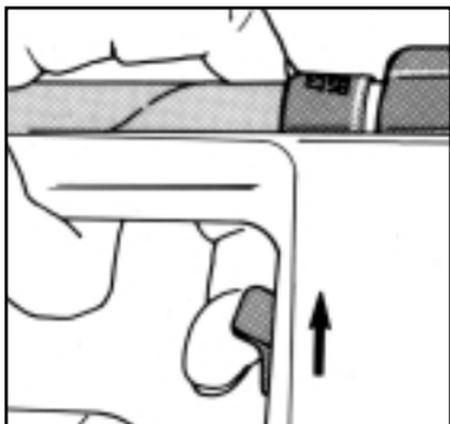


Figure B

(such as mixing cookie dough), just press the Power Boost Button to get the maximum mixing performance. As soon as the Power Boost Button is released, the Mixer will return to the speed setting you were previously using.

BEATER EJECT LEVER

The Spatula Smart® Mixer features a convenient Beater Eject Lever which is located below the handle. It allows for easy release of the Beaters/Whisks using the index finger. (Figure B)

LARGE BEATERS

The large Beaters help you get fast, thorough mixing results. The Beaters are dishwasher-safe for easy cleanup.

BONUS WHISKS (MODEL M175W ONLY)

The Whisks are perfect for whipping cream or eggs. They are especially useful when making meringue, omelets, fluffy angel food cake, or mousse. Like the Beaters, the Whisks are dishwasher-safe.

SPATULA ATTACHMENT

The Spatula Attachment is used with the Beaters and allows you to scrape dry ingredients and batter from the bowl sides continuously while mixing. It snaps off for easy dishwasher or soap and water cleaning.

How To Use

1. Before using the Beaters, be sure the Mixer is unplugged and the Speed Control Switch is in the OFF position. To insert a Beater, grasp the Mixer with one hand and the Beater stem with the other. Insert the Beater into the opening; you may have to rotate it slightly until it locks into place. Use the same method when inserting the Whisks (Model M175W only). Repeat for the other Beater/Whisk.
2. Plug the Cord into an outlet.
3. Place the ingredients into a bowl, grip the Mixer handle, and position the Beaters/Whisks in the center of the food to be mixed.
4. Select the appropriate speed setting for the task. See the "Mixing Guide" on page 9.
5. Guide the Beaters/Whisks continuously through the mixture for uniform mixing. Whenever you wish to scrape the sides and bottom of the bowl using a handheld utensil, be sure to turn the Speed

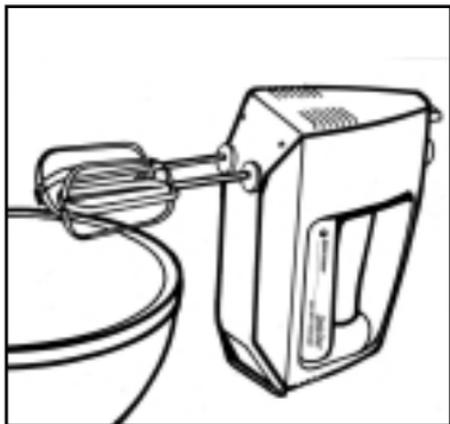


Figure C

USING THE SPATULA ATTACHMENT

Control Switch OFF. Place the Mixer on the Heel Rest so that batter can drain into the bowl. (Figure C)

6. To remove the Beaters/Whisk, push the Beater Eject Lever up with your index finger of one hand, then pull the Beater/Whisk out of the Mixer with the other hand.

Use the Spatula Attachment during mixing to scrape dry ingredients or batter from the bowl as you mix. It is designed for use when mixing thin (pudding, pancake batter) to medium batters (cake mixes, muffins, frosting) and for whipping mashed potatoes. It is not recommended when beating egg whites, whipping cream, or when mixing thick cookie dough. Do NOT use the Spatula Attachment with the Whisks (Model M175W only).

1. Insert the Beaters into the Mixer. Be sure the Mixer is unplugged and the speed control Switch is in the OFF position.



Figure D

2. Hold the Mixer by the handle with the Beaters facing forward. The Spatula attachment should be positioned so that the Spatula is to the right of the Beaters.

3. Weave the top of the Spatula Attachment under the left Beater shaft and over the right Beater shaft. The word "Front" on the Attachment should face out from the front of the Mixer. Snap the Attachment onto the Beater shafts. (Figure D)

4. As you mix, place the front edge of the Spatula Attachment against the side of the bowl and move it forward slowly along the side of bowl to scrape away buildup and blend ingredients or batter back into the Beaters. (Figure E)



Figure E

NOTE: If the Spatula Attachment detaches during use, be sure to turn OFF the Mixer before attempting to reattach the Spatula to the Beaters.

Mixing Guide

SPEED	FUNCTION	USE
1	Blend	To combine liquids, fold in dry ingredients, egg whites, and whipped cream.
2	Stir	To prepare sauces, puddings, muffins, and quick breads.
3	Mix	To prepare batters and mixes.
4	Beat	To cream butter or sugar, make cookie dough, cake mixes, and frostings.
5	Whip	To whip fluffy mixtures, whipped cream, eggs, and mashed potatoes.
Power Boost	Use at any speed setting	Maximum power for tough tasks.

Care and Cleaning

No other maintenance is required other than the care mentioned here. Repairs, if necessary, must be performed by a Black & Decker (U.S.) Inc. Household Appliance Company-Owned or Authorized Service Center. For the Service Center nearest you, call the toll-free "800" number on the cover of this book.

CLEANING

-
1. Be sure the Speed Control Switch is in the OFF position before cleaning any part of the Mixer. Unplug the cord and eject the Beaters/Whisks. Remove the Spatula Attachment, if used.
 2. The Beaters, Whisks (Model M175W only), and Spatula Attachment may be washed in hot, sudsy water or in a dishwasher. Be sure to dry all parts thoroughly before storing.
 3. Clean the Mixer or cord with a damp cloth. To remove stubborn spots, wipe surfaces with a cloth dampened in sudsy water or a mild, non-abrasive cleaner. Follow with a clean, damp cloth. Do not use abrasive cleaners on any part of the Mixer as they can damage the finish.
-
-

STORING THE MIXER

1. For longer life, avoid jerking the Power Cord or straining it at the plug connection. To store, coil the Cord in loops and secure it with a twist tie. **Do not wrap the cord around the Mixer.**
 2. Store the Beaters, Whisks (Model M175W only), and Spatula Attachment in a drawer or in the original packaging.
-

Mixing Tips

HOW TO BEAT EGG WHITES

- Beaters/Whisks and bowl must be clean.
- Be sure there is no egg yolk in the egg whites.
- For maximum volume, egg whites should be at room temperature.

- Beat at the highest speed (Whip #5) until egg whites are the desired consistency.
 - Beating time varies with the freshness of eggs.
-

NOTE: For best results when beating egg whites, do not use an aluminum or plastic bowl. Use a stainless steel, copper, or glass bowl.

HOW TO WHIP CREAM

- Chill the cream, Beaters, and bowl.
 - Start with the lowest setting (to minimize splatter) as the cream begins to thicken, gradually increase to WHIP (Setting #5).
 - Whipping time varies with fat content, age, and temperature of cream.
-

NOTE: The Spatula Attachment is NOT recommended for use when whipping cream as volume may be reduced.

SERVICE OR REPAIR

Service, if necessary, must be performed by a Black & Decker (U.S.) Inc., Household Appliance Company-Owned or Authorized Service Center. The Service Center nearest you can be found in the yellow pages of your phone book under "Appliances-Small-Repairing." For your convenience a listing of our Company-Owned Service Centers can be found on pages 12-15.

If shipping or mailing your Mixer, pack the unit carefully in a sturdy carton with enough packing material to prevent damage. The original carton is not suitable for mailing. Include a note describing the problem to our Service Center and be sure to give your return address. We also suggest that you insure the package for your protection.

Consumer replaceable parts and accessories are also available at Black & Decker (U.S.) Inc., Household Appliance Company-Owned or Authorized Service Centers.

BLACK AND DECKER COMPANY-OWNED SERVICE CENTERS

ALABAMA

BIRMINGHAM — 2412 Green Springs, Hwy., 35209

205-942-0538

MOBILE — 3831 Airport Blvd., 36608 205-343-6624

ALASKA

ANCHORAGE — 910 West International Airport Rd., 99518

907-563-4664

ARIZONA

MESA — 535 South Dobson Rd., Suite 7, 85202

602-461-1074

PHOENIX — 4501 N. 7th Ave., 85013 602-279-6414

TUCSON — 4845 E. Speedway Blvd., 85712

602-323-3388

ARKANSAS

LITTLE ROCK — 519 W. Seventh St., 72201

501-372-3040

CALIFORNIA

ANAHEIM — 540 South State College Blvd., 92806

714-772-4050

CHULA VISTA — 309 Broadway, 91911 619-420-6350

CONCORD — 1500 Monument Blvd., #C2, 94520

510-682-4880

FRESNO — 5412 North Blackstone Ave., 93710

209-435-0810

LONG BEACH — 2011 South St., 90805 **310-422-5825**
LOS ANGELES — 4820 South Eastern Ave., Suite "L" 90040
213-720-1834
RIVERSIDE — 6215 Magnolia Ave., Suite B, 92506
714-787-9700
SACRAMENTO — 2033 Fulton Ave., 95825 **916-972-9090**
SAN DIEGO — 9270 Clairmont Mesa Blvd., 92123
619-279-2011
SAN JOSE — 1185 South Bascom Ave., 95128
408-293-7350
SAN LEANDRO — 15206 East 14th St., 94578
510-276-1610
VAN NUYS — 14920 Victory Blvd., 91411 **818-787-5531**

COLORADO

DENVER — 1171 South Federal Blvd., Box 19220, 80219
303-922-8325

CONNECTICUT

HARTFORD — 662 Silas Deane Hwy., 06109
203-563-5800
ORANGE — 481 Boston Post Rd., 06477 **203-795-3583**

DISTRICT OF COLUMBIA

COLMAR MANOR, MD — 4153 Bladensburg Rd., 20710
301-779-3808
FALLS CHURCH, VA — 344 W. Broad St., 22046
703-533-7313

FLORIDA

FT. LAUDERDALE — 799 East Oakland Pk. Blvd., 33334
305-566-5102
FT. MYERS — 5224 Bank St., 33907 **813-278-1188**
JACKSONVILLE — 920 Cassat Ave., 32205
904-781-2253
MIAMI — 13345 North West Seventh Ave., 33168
305-681-6658
MIAMI — 12233 South Dixie Hwy., 33156 **305-232-9497**
ORLANDO — 3807 East Colonial Dr., 32803
407-894-7011
ST. PETERSBURG — 5635 49th St. North, 33709
813-525-0273
TAMPA — 3432 West Kennedy Blvd., 33609
813-872-8317
WEST PALM BEACH — 310 South Military Trail, 33415
407-689-3247

GEORGIA

ATLANTA (South) — 5330 Old National Hwy., 30349 **404-762-8844**

SMYRNA — 2550 Cobb Parkway South, 30080
404-956-0869
STONE MOUNTAIN — 5723 Memorial Dr., 30083
404-292-4714

HAWAII

HONOLULU — Unit No. 106, Sand Island Access Rd., 96819
808-847-7447

ILLINOIS

CHICAGO (Lincolnwood) — 6710 North Crawford Ave.,
60646 **708-673-0923**
DES PLAINES — 1277 South Elmhurst Rd., 60018
708-364-5220
LISLE — 2950 Ogden Ave., Unit H, 60532 **708-717-1075**
MOLINE — 4433 23rd Ave., 61265 **309-762-3000**
OAK LAWN — 6343 W. 95th St., 60453 **708-423-7212**
WAUKEGAN — 31 S. Greenbay Rd., 60085
703-249-4390

INDIANA

EVANSVILLE — 307 First Ave., Crescent Ctr., 47710
812-425-4269
HAMMOND — 7103 Kennedy Ave., 46323 **219-845-5100**
INDIANAPOLIS (Speedway) — 5999 Crawfordsville Rd.,
46224 **317-243-8308**

IOWA

DES MOINES — 3427 Merle Hay Rd., 50310
515-270-1340

KANSAS

WICHITA — 155 South West St., 67213 **316-943-1271**

KENTUCKY

LOUISVILLE — 5211 Preston Hwy., 40213 **502-968-7100**

LOUISIANA

BATON ROUGE — 11859 Florida Blvd., 70815
504-272-8111
HARVEY — 2500 Lapalco Blvd., 70058 **504-366-8676**
METAIRIE (New Orleans) — 3504 North Causeway Blvd.,
70002 **504-837-2550**
SHREVEPORT — 7710-7714 Jewella Rd., 71108
318-688-1553

MARYLAND

BALTIMORE — 4712 Erdman Ave., 21205 **410-485-5550**
BALTIMORE — 29-31 Cranbrook Rd., Cockeysville, 21030
410-666-5966
COLMAR MANOR (Wash. D.C.) — 4153 Bladensburg Rd.,
20722, **301-779-3808**
PASADENA — 8220 Ritchie Hwy., 21122 **410-647-8456**

MASSACHUSETTS

BRIGHTON (Boston) — 12 Market St., 02135
617-782-6264
SEEKONK — 120 Highland Ave., 02771 **508-336-6510**

MICHIGAN

GRAND RAPIDS — 3040 28th St., SE, 49512
616-949-8331
LANSING — 3205 W. Saginaw Hwy., 48917
517-323-4181
WARREN — 27035 Van Dyke Blvd., 48093 **313-756-6711**
WESTLAND — 8067 N. Wayne Rd., 48185 **313-427-1520**

MINNESOTA

BLOOMINGTON — 9517 Lyndale Ave., South, 55420 **612-884-9191**

MISSOURI

KANSAS CITY — 4324 Main St., 64111 **816-531-0629**
ST. ANN — 3637 North Lindbergh Blvd., 63074
314-739-4661
ST. LOUIS — 12852 Manchester Rd., 63131
314-821-8740

NEBRASKA

OMAHA — 4225 South 84th St., 68127 **402-592-5666**

NEVADA

LAS VEGAS — 3411 East Charleston Blvd., 89104
702-641-6555

NEW JERSEY

CHERRY HILL — 1444 East Marlton Pike (Rt. 70), 08034
609-429-2822
LITTLE FALLS — 1189 U.S. Hwy. 46, 07424
201-256-9373
SCOTCH PLAINS — 2520 Route #22 East, 07076
908-233-5665

NEW MEXICO

ALBUQUERQUE — 5617 Menaul Blvd., N.E., 87110
505-884-1002

NEW YORK

ALBANY (Latham) — 836 Troy-Schenectady Rd., 12110
518-785-1867
BUFFALO — 881 West Delavan Ave., 14209
716-884-6220
CENTEREACH I.I. — 2061-63 Middle Country Rd., 11720
516-737-4706
NEW YORK (Elmhurst) — 77-20 Queens Blvd., 11373
718-335-1042
NEW YORK (Manhattan) — 50 West 23rd St., 10010
212-929-6450
NEW YORK (Westbury, L.I.) — 1061 Old Country Rd., 11590
516-997-6140
ROCHESTER — 2969 W. Henrietta Rd., 14623
716-424-1310
SYRACUSE — 3485 Erie Blvd., East, 13214 **315-446-3086**

NORTH CAROLINA

CHARLOTTE — 3007 East Independence Blvd., 28205
704-374-1779
GREENSBORO — 3716 High Point Rd., 27407
919-852-1300
RALEIGH — 2930 Capital Blvd., 27604 **919-878-0357**

OHIO

CINCINNATI — 2310 East Sharon Rd., 45241
513-772-3111
COLUMBUS — 3975 East Livingston Ave., 43227
614-237-0461
DAYTON — 2898 South Dixie Drive, 45409 **513-298-1951**
MAYFIELD HEIGHTS — 5881 Mayfield Rd., 44124
216-449-2770
PARMA HEIGHTS (Cleveland) — 6483 Pearl Rd., 44130
216-842-9100
TOLEDO — 3231 Dorr St., 43607 **419-531-8921**

OKLAHOMA

OKLAHOMA CITY — 1318 Linwood Blvd., 73106
405-232-7515
TULSA — 3120 S. Sheridan Rd, 74145 **918-622-5666**

OREGON

PORTLAND — 1640 NW Johnson St., 97209
503-228-8631

PENNSYLVANIA

ALLENTOWN (Whitehall) — 2242 MacArthur Rd., 18052
215-435-9544

EVANS CITY — Cranberry Town Center Plaza, 20808 Rt. 19
N., 16033 412-779-9600

HARRISBURG — 6080 Allentown Blvd., 17112
717-545-0651

LANCASTER — 118 Keller Ave., 17601 717-393-5251

PHILADELPHIA — 9977-81 Bustleton Ave., 19115
215-464-7771

PHILADELPHIA — 333 North 20th St., 19103
215-564-5520

PITTSBURGH — 5437 Baum Blvd., 15232 412-362-2700

WILKES-BARRE — 759 Kidder St., 18702 717-824-5704

PUERTO RICO

GUAYNABO — "C" Street # 14, Rexco Industrial Park,
00922-1924 809-783-3535

RHODE ISLAND

SEEKONK, MA — 120 Highland Ave., 02771
508-336-6510

SOUTH CAROLINA

GREENVILLE — 1557 Laurens Rd., 29607 803-232-3038

TENNESSEE

CHATTANOOGA — Perimeter Place Shopping Ctr., Sp. E,
6231 Perimeter Dr., 37421 615-894-5957

KNOXVILLE — 4118 North Broadway, 37917
615-688-0921

MEMPHIS — 1085 East Brooks Rd., 38116 901-332-3444

NASHVILLE — 4811 Nolensville Rd., 37211 615-833-8277

TEXAS

AMARILLO — 3008 West 6th Ave., 79106 806-373-1531

AUSTIN — 6549 Burnet Rd., 78757 512-459-1133

DALLAS — 2257 Royal Lane, 75229 214-620-8655

EL PASO — 6822 Gateway East, 79915 915-778-9769

FORT WORTH — 721 North Beach St., 76111
817-831-3828

GARLAND — 78 West Centerville Rd., 75043
214-686-9302

HOUSTON — 536 East Tidwell Rd., 77022 713-692-7111

SAN ANTONIO — 500 Culebra Ave., 78201 210-732-1221

WEBSTER — 100 East Nasa Road One, Ste. 75, 77598 713-
338-4556

UTAH

SALT LAKE CITY — 1541 S. Third West St., 84115
801-486-5828

VIRGINIA

FALLS CHURCH — 344 W. Broad St., 22046 703-533-7313

HAMPTON — 3416 W. Mercury Blvd., 23666
804-826-9382

NORFOLK — 7631 Sewells Point Rd., 23513
804-480-3333

RICHMOND — 1424 Chamberlayne Ave., 23222
804-649-9245

WASHINGTON

SEATTLE — 421 S. Michigan, 98108 206-763-2010

SPOKANE — N. 7011 Division St., 99208 509-467-8190

TACOMA — 2602 S. 38th St., 98409 206-473-6040

WEST VIRGINIA

CHARLESTON — 1638 Sixth Ave., 25312 304-343-0289

WISCONSIN

MILWAUKEE (Wauwatosa) — 10424 W. Bluemound Rd.,
53226, 414-453-4240

REV: 9/94

**FULL
TWO-YEAR
WARRANTY**

Black & Decker (U.S.) Inc. warrants this product against any defects that are due to faulty material or workmanship for a two-year period after the original date of consumer purchase or receipt as a gift. This warranty does not include damage to the product resulting from accident or misuse.

If the product should become defective within the warranty period, we will repair it or elect to replace it free of charge. We will return your product, transportation charges prepaid, provided it is delivered prepaid to any Black & Decker (U.S.) Inc., Household Appliance Company-Owned or Authorized Service Center.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

Answers to any questions regarding warranty or service locations may be obtained by calling toll free, 1-800-231-9786, or by writing:

Consumer Assistance and Information
Black & Decker (U.S.) Inc.
626 Hanover Pike
Hampstead, MD 21074-0618



Listed by Underwriters Laboratories Inc.
Copyright © 1991 - 1995 Black & Decker
Pub. No. 168633-06-RV01
Printed in Hong Kong