


# OPERATING INSTRUCTIONS

PRODUCT MAY VARY SLIGHTLY FROM ILLUSTRATIONS

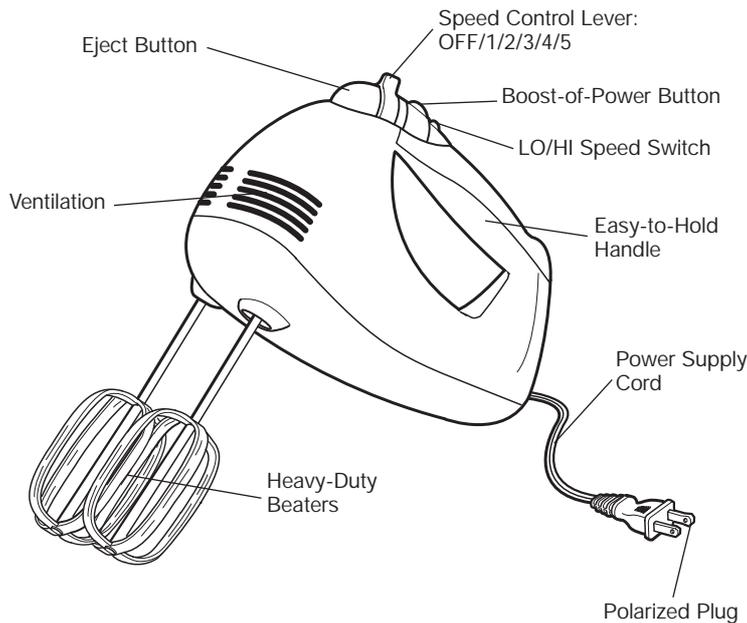


This appliance is for HOUSEHOLD USE ONLY. It may be plugged into any 120-volt AC electrical outlet (ordinary household current). Do not use any other type of outlet.


**BEFORE USING:** Before using the mixer for the first time, wash beaters, dough hooks and spatula attachment in warm, soapy water. Rinse and dry thoroughly.

Wipe mixer and storage stand with a soft, slightly damp cloth or sponge to remove any packaging dust. NEVER IMMERSE mixer, cord or plug, in water or any other liquid. Use only gentle liquid detergents to wash attachments. Do not use harsh detergents or abrasive cleaners to clean any part.


**HOW TO USE ATTACHMENTS:** This 10-Speed Hand Mixer is capable of blending several ingredients. Place beaters/dough hooks, etc. in container holding ingredients, and switch on. This versatile mixer can be used to make cakes, pies, whipped toppings, mashed potatoes and much more.

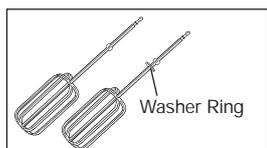


**HEAVY-DUTY BEATERS:** Designed for all-purpose mixing. Cut through thick or thin batters with ease.

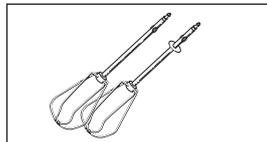


**WIRE BEATERS:** Spindly, thin wire beaters are ideal for whisking sauces or whipping light, fluffy ingredients.

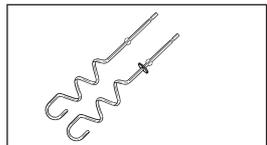


**DOUGH HOOKS:** Spiral dough hooks are designed to mix heavier batter. Hooks may also be used for gently mixing pastry dough.

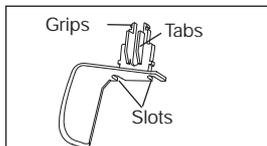

**SPATULA ATTACHMENT:** Designed to keep the bowl sides clean from splatters and dry ingredients when mixing. Not recommended for thick dough, whipping cream or egg whites.

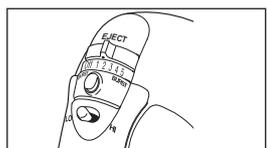





5 speeds at LO or HI for a total of 10 speeds, plus boost-of power at any speed.

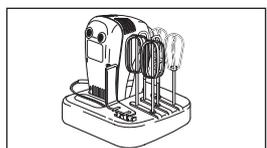

Storage Stand holds hand mixer and attachments.

**ATTACHING BEATERS/DOUGH HOOKS:** Be sure appliance is unplugged. One attachment from each pair of either beaters or dough hooks has a small metal washer-ring around the top of the stem; the other does not. The attachment with the washer-ring must be inserted into the larger of the two holes in the mixer. (Hole is located to the right if you are viewing the bottom of the mixer.) Align notches on the beater with the slots inside the hole. Push until attachment clicks to lock into place. Insert attachment without the washer-ring into the smaller hole, and push until it clicks to lock in place. Make sure that the attachments fit snugly into the receptacles. Gently tug on each attachment to ensure it is secured properly.

## SPATULA ATTACHMENT:

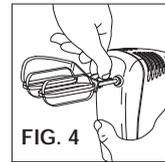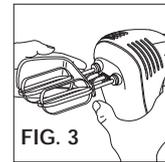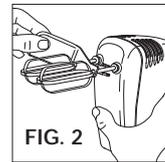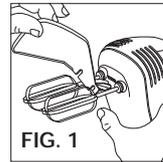

The plastic spatula attachment directs ingredients that cling to the sides of the bowl into the path of the beaters. It consists of a spatula blade, a grip with slots and two prongs extending from the handle.

**TO ATTACH SPATULA:** Attach beaters first. Stand mixer on a smooth, flat surface with ventilation pointing upward. Use one hand to hold mixer steady. Place spatula atop beater sticks so that prongs are pointing downward between the beaters (Fig. 1). Push down on spatula grip so that prongs extend beyond beaters and slots on grip are parallel with beaters (Fig. 2). Gently turn spatula so that beater sticks fit into slots. Prongs on spatula will now be parallel with beater sticks (Fig. 3). Grasp prongs from underneath with thumb and forefinger, and pinch them together slightly. Guide notched tabs at end of prongs into slot between beater holes on mixer and push until they click into place. Gently tug on the spatula to ensure that it is properly connected.

**TO DETACH SPATULA:** Grasp prongs from underneath and pinch them together slightly to release spatula (Fig. 4). Turn spatula so that prongs point downward, and lift spatula from beater sticks.

**TO USE:** Insert plug into any standard household outlet. Place beaters directly into container holding ingredients to be mixed.

With Speed Switch at LO, slide the Speed Control Lever to select low to medium speeds. With Speed Switch at HI, slide the Speed Control Lever to select medium to high speeds. Be sure to turn unit OFF before changing Speed Switch from LO to HI or vice-versa.

Use the chart below to help you determine the proper speed(s) for mixing.

With Speed Control Lever at	With Speed Switch at	
1-2	LO	Best for mixing dry ingredients and folding in liquid ingredients, egg whites and whipped cream.
3-4	LO	Ideal for creaming, stirring, making sauces, gravies, puddings and quick breads.
5	LO	All-purpose mixing.
1	HI	All-purpose mixing.
2-3	HI	Beats and creams butter and sugar for cake mixes and frostings. Great for thicker batters.
4-5	HI	Best for whipping cream, beating egg whites or mashing potatoes.

**NOTE:** BE SURE SPEED SELECTOR LEVER IS IN THE OFF POSITION BEFORE CHANGING LO/HI SPEED SWITCH FROM LO TO HI OR VICE-VERSA.

**CAUTION:** When using dough hooks in dough, use only with Speed Switch in HI position and Speed Control Lever on settings 3, 4 or 5. When kneading dough, use only with Speed Switch on HI and Speed Control Lever at 4 or 5. To avoid overheating, do not operate longer than 5 minutes.

**BOOST-OF-POWER:** The Boost-of-Power provides maximum speed to get through tough mixing tasks at any speed. Depress the boost-of-power button to obtain maximum mixing speed anytime an extra boost of power for thick, heavy batters is needed. Release the button and the mixing returns to the previously selected speed.

**CAUTION:** Do not use the boost-of-power in excess of two minutes at a time, as motor may overheat.

**REMOVING BEATERS/DOUGH HOOKS:** Slide speed control lever to the "OFF" position. Unplug appliance. Push down on the eject button to eject beaters/dough hooks.

## USER MAINTENANCE INSTRUCTIONS

This appliance requires little maintenance. It contains no user serviceable parts. Do not try to repair it yourself. Refer it to qualified personnel if servicing is needed.

**NEVER IMMERSE MOTOR HOUSING IN WATER.**

**TO CLEAN:** Be sure unit is unplugged. Remove spatula attachment and/or eject beaters or dough hooks from unit and wash normally. The attachments are dishwasher safe. Wipe mixer with a damp cloth or sponge.

**TO STORE:** Unplug unit; store in its box in a clean, dry place. Never store it while it is hot or still plugged in. **Never wrap cord tightly around the appliance.** Do not put any stress on the cord where it enters the unit, as it could cause the cord to fray and break.

# IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

1. **READ ALL INSTRUCTIONS.**
2. To protect against electrical shock, do not submerge the mixer or allow AC cord to come in contact with water or other liquids.
3. This appliance should not be used by children, and care should be taken when used near children.
4. Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
5. Avoid contact with moving parts.
6. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or electrical or mechanical adjustment.
7. The use of attachments not recommended or sold by the appliance manufacturer may cause fire, electric shock or injury.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter or touch hot surfaces, including the stove.
10. Keep hands, hair, clothing, as well as spatulas and other utensils, away from beaters during operation to reduce the risk of injury to persons and/or damage to the mixer.
11. Remove beaters from mixer before washing.

## SAVE THESE INSTRUCTIONS

### FULL ONE-YEAR WARRANTY

Applika warrants this product against any defects that are due to faulty material or workmanship for a one-year period after the original date of consumer purchase. This warranty does not include damage to the product resulting from accident or misuse. If the product should become defective within the warranty period, we will repair it or elect to replace it free of charge.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state or province to province. Answers to any questions regarding warranty or service locations may be obtained by calling Consumer Assistance and Information: 203-926-3230.

### POLARIZED PLUG:

This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug fits in a polarized outlet only one way. If the plug does not fit into the outlet, reverse the plug and try again. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

### LINE CORD SAFETY TIPS

1. Never pull or yank on the cord or the appliance.
2. To insert plug, grasp it firmly and guide it into outlet.
3. To disconnect appliance, grasp plug and remove it from outlet.
4. Before each use, inspect the line cord for cuts and/or abrasion marks. If any are found, this indicates that the appliance should be serviced and the line cord replaced. Please return it to our Service Department or to an authorized service representative.
5. Never wrap the cord tightly around the appliance, as this could place undue stress on the cord where it enters the appliance and cause it to fray and break.

**DO NOT OPERATE APPLIANCE IF THE LINE CORD SHOWS ANY DAMAGE, OR IF APPLIANCE WORKS INTERMITTENTLY OR STOPS WORKING ENTIRELY.**

***10-SPEED  
200-WATT  
HAND MIXER  
WITH STORAGE  
STAND***

***USE AND CARE BOOK***

***HOUSEHOLD  
USE ONLY***

Printed in Hong Kong

R297/11-14-87

MXD-10 (UL/SPE)



# Admiral®

# Admiral®