


# QUICK START GUIDE

TO3210SSD

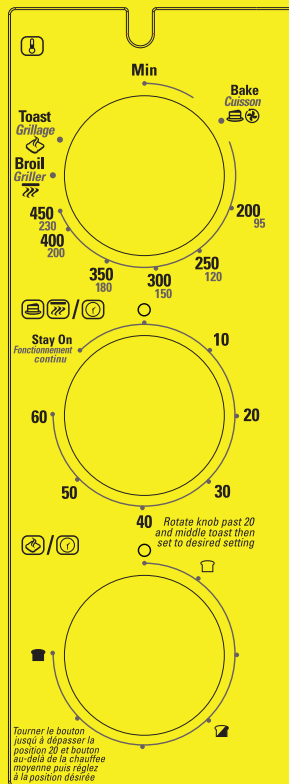

## TEMPERATURE



## BAKE / BROIL / 60-MINUTE TIMER

## LIGHT-TO-DARK TOAST TIMER

### TO TOAST

1. Turn TEMPERATURE knob to toast 
2. Turn LIGHT-TO-DARK TOAST/TIMER knob to the middle,  then desired toast shade

### TO BAKE

1. Turn TEMPERATURE knob to the desired temperature
2. Turn BAKE/BROIL 60-MINUTE TIMER knob to STAY ON - or - past 20 then to desired time

### TO BROIL

1. Turn TEMPERATURE knob to BROIL
2. Turn BAKE/BROIL 60-MINUTE TIMER knob to STAY ON - or - past 20 then to desired time

### Note:

Please read instruction booklet for all safety and functional information.

This oven has been designed to cook faster. Please inspect your items earlier than the prescribed cook time for a conventional oven to ensure that they do not get over cooked.


For best results, when baking or broiling, always preheat the oven for at least 10 minutes at the desired temperature setting.

# GUIDE DE DÉMARRAGE RAPIDE

## TEMPÉRATURE

## MINUTERIE DE 60 MINUTES POUR LA CUISSON/LE RÔTISSAGE

## GRILLAGE PÂLE À FONCÉ/DE LA MINUTERIE

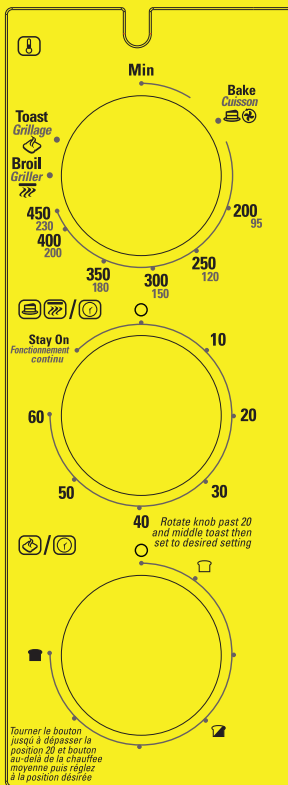

## POUR GRILLER ☞

1. Régler le bouton de TEMPÉRATURE à griller. ☞
2. Régler GRILLAGE PÂLE À FONCÉ/DE LA MINUTERIE à la position milieu ☞ et tourner ensuite dans le sens contraire jusqu'au degré de grillage désiré.

## POUR CUIRE ☞

1. Régler le bouton TEMPÉRATURE à température désirée.
2. Régler la MINUTERIE DE 60 MINUTES POUR LA CUISSON/LE RÔTISSAGE à la position 20 et revenir ensuite vers l'arrière ou avancer jusqu'au temps de cuisson désiré, ou fonctionnement continu (STAY ON).

## POUR RÔTIR ☞

1. Régler le bouton de TEMPÉRATURE à rôtir. ☞
2. Régler la MINUTERIE DE 60 MINUTES POUR LA CUISSON/LE RÔTISSAGE à la position 20 et revenir ensuite vers l'arrière ou avancer jusqu'au temps de cuisson désiré, ou fonctionnement continu (STAY ON).

TO3210SSD

## Remarque :

Veillez lire le guide pour obtenir les consignes de sécurité et d'utilisation

Ce four a été conçu pour accélérer la cuisson. Pour ne pas faire trop cuire vos aliments, veuillez les inspecter avant la fin de la durée de cuisson utilisée avec les fours ordinaires.

Pour obtenir de meilleurs résultats lors de la cuisson, toujours préchauffer le four au moins 10 minutes à la température désirée.