

OPERATING INSTRUCTIONS/INSTRUCCIONES DE FUNCIONAMIENTO

PRODUCT MAY VARY SLIGHTLY FROM ILLUSTRATIONS/ESTE PRODUCTO PUEDE VARIAR LIGERAMENTE DE LAS ILUSTRACIONES

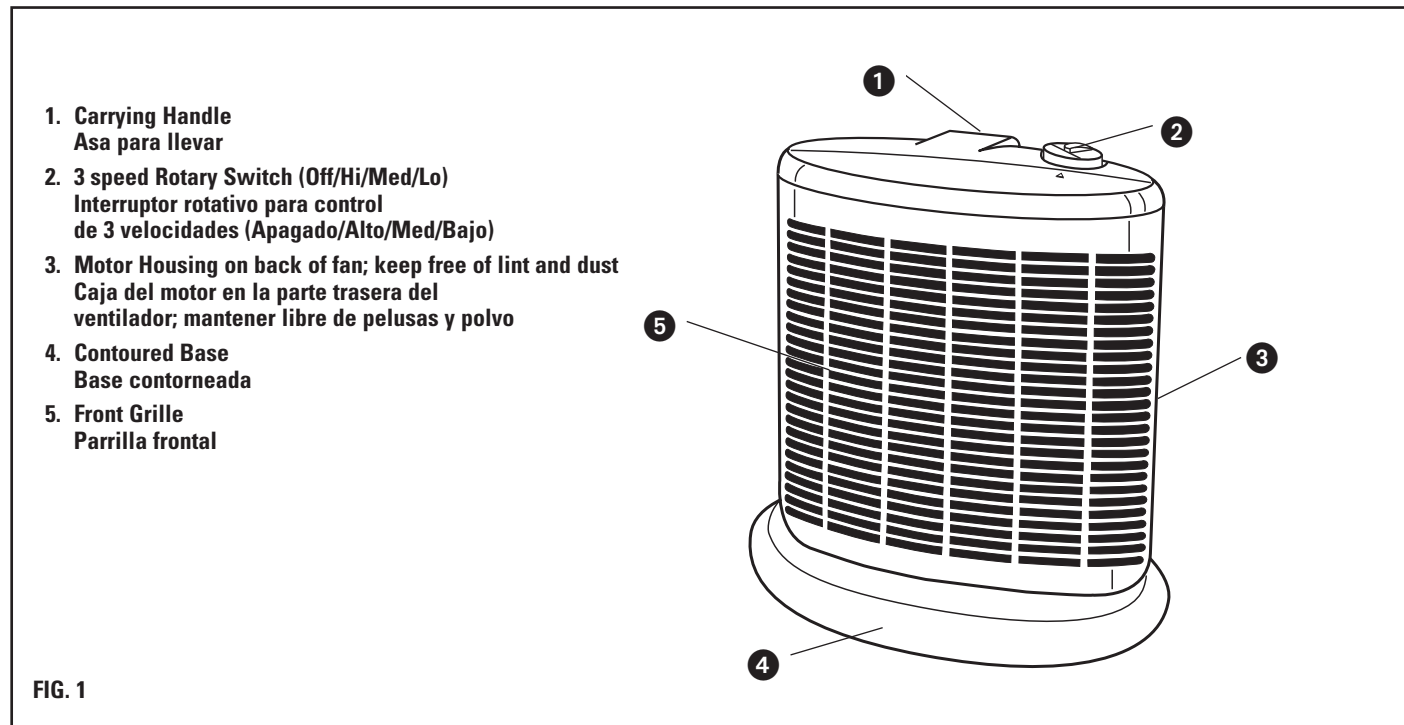


FIG. 1

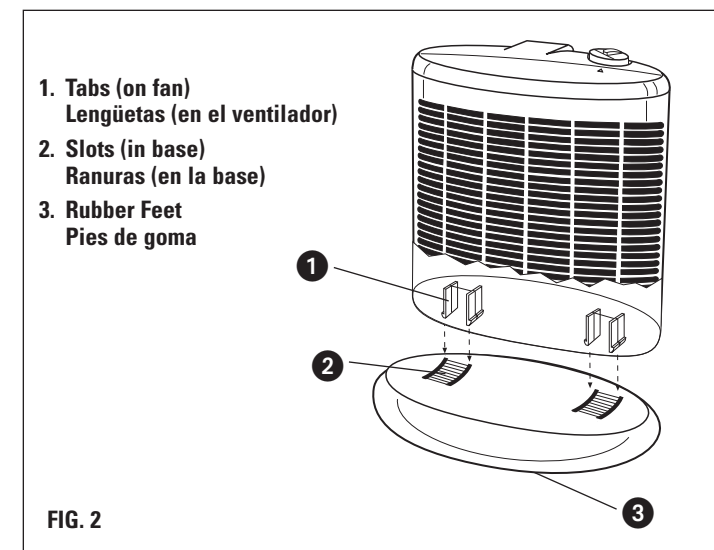


FIG. 2

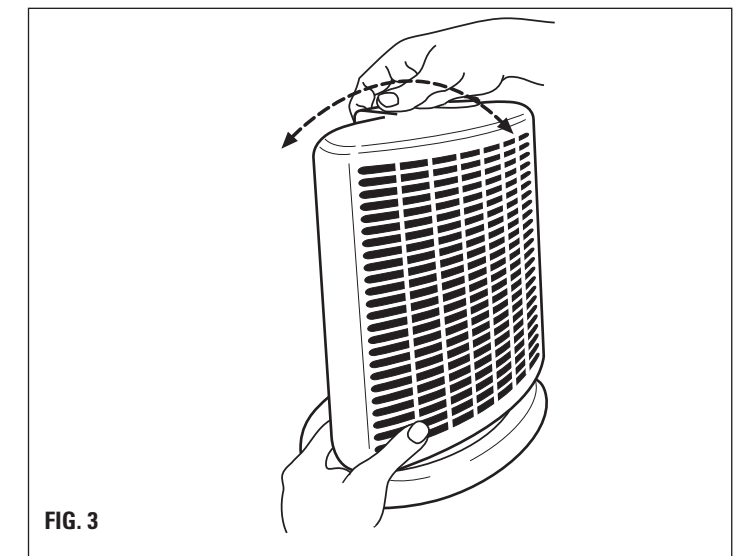


FIG. 3

LINE CORD SAFETY TIPS

1. Never pull or yank on the cord or the appliance.
2. To insert plug, grasp it firmly and guide it into outlet.
3. To disconnect appliance, grasp plug and remove it from outlet.
4. Before each use, inspect the line cord for cuts and/or abrasion marks. If any are found, this indicates that the appliance should be serviced and the line cord replaced. Please return it to our Service Department or to an authorized service representative.
5. Never wrap the cord tightly around the appliance, as this could place undue stress on the cord where it enters the appliance and cause it to fray and break.

DO NOT OPERATE APPLIANCE IF THE LINE CORD SHOWS ANY DAMAGE, OR IF APPLIANCE WORKS INTERMITTENTLY OR STOPS WORKING ENTIRELY.

HOW TO USE

This appliance is for household use and may be plugged into any 120V AC electrical outlet (ordinary household current). Do not use any other electrical outlet.

IMPORTANT:

During the first few minutes of initial use, there may be a slight odor. This is normal and will quickly disappear.

This fan has three speeds and a tilt adjustment feature that enables it to be adjusted vertically for maximum cooling angle.

FAN/BASE ATTACHMENT:

BEFORE ATTACHMENT: Remove fan and base from packaging. Notice fan has two sets of tabs on bottom and corresponding slots. Base is also contoured to facilitate tilt adjustment. Two rubber feet on underside of base help maintain stability while fan is in operation. Note location of rubber feet, as this will help in positioning fan correctly for attachment.

TO ASSEMBLE: Set fan base on a flat, stable surface where it cannot fall or be pulled on by the cord. Place fan in base so that rear of fan (with motor housing visible) faces rear of base (side where rubber feet are located). Line up tabs on fan with slots in base. Press firmly on top of fan until sharp clicks are heard, indicating that tabs on fan are firmly secured to slots in base (see Fig. 2). Test tilt adjustment by placing one hand on

carrying handle and manipulating fan back and forth with the other (see Fig. 3).

OPERATING INSTRUCTIONS

1. Plug fan into electrical outlet.
2. Turn fan on and select desired speed.
3. Adjust tilt to suit personal preference.

CARE AND CLEANING

This appliance requires little maintenance and contains no user serviceable parts. Do not try to fix it yourself. Refer it to qualified service personnel if servicing is needed.

This fan is permanently lubricated and will not require additional lubrication for the life of the fan.

TO CLEAN: Before cleaning, turn fan off and unplug from electrical outlet. Wipe off excess dust with a lint-free cloth. To ensure adequate air circulation to the motor, keep vents located at the rear of the motor housing free from dust accumulation. A vacuum cleaner hose can be used to clean these vents. Do not immerse fan in water or any other liquid. Do not allow any liquid to get into the fan or motor.

TO STORE: Make sure to clean the fan before storing. Always store fan in a dry place. Never store it while it is still plugged in. **Never wrap the cord tightly around the fan,** and do not put any stress on the cord where it enters the fan, as it could cause the cord to fray and break.

SUGERENCIAS PARA SEGURIDAD CON EL CORDON

1. Nunca hale o tire del cordón o del artefacto.
2. Para introducir el enchufe, sujételo firmemente y guíelo hacia el tomacorriente.
3. Para desconectar el artefacto, sujete el enchufe y retírelo del tomacorriente.
4. Antes de cada uso, inspeccione el cordón si tiene cortes y/o raspaduras. Si algo fuera encontrado, esto indica que el artefacto deberá ser revisado y el cordón deberá ser reemplazado. Por favor, devuélvalo a nuestro Departamento de Servicio o a un representante de servicio autorizado.
5. Nunca enrolle el cordón ajustadamente alrededor del artefacto, ya que esto podría causar una presión excesiva en el cordón donde éste entra al artefacto y causar desgaste y rotura.

NO HAGA FUNCIONAR EL ARTEFACTO SI EL CORDON MUESTRA CUALQUIER DAÑO, O SI EL ARTEFACTO FUNCIONA INTERMITENTEMENTE O DEJA DE FUNCIONAR COMPLETAMENTE.

COMO USAR

Este artefacto es para uso doméstico y puede ser enchufado en cualquier tomacorriente de corriente alterna (corriente ordinaria doméstica). No use ningún otro tomacorriente eléctrico.

IMPORTANTE:

Durante los primeros minutos de su uso inicial, puede haber un ligero olor. Esto es normal y desaparecerá rápidamente.

Este ventilador tiene tres velocidades y un ajuste para inclinación que le permite ser ajustado verticalmente en un ángulo para máximo enfriamiento.

PARA ADAPTAR BASE/VENTILADOR:

ANTES DE ADAPTARLO: Retire el ventilador y la base de la caja. El ventilador tiene dos juegos de lengüetas en la parte baja y las correspondientes aberturas. La base es también contorneada para facilitar el ajuste de inclinación. Dos pies de goma en la parte de abajo de la base le ayudan a mantener la estabilidad mientras el ventilador esté en funcionamiento. Note la ubicación de los pies de goma, ya que esto ayudará a ubicar correctamente el ventilador para ensamblarlo.

PARA ENSAMBLARLO: Coloque el ventilador en una superficie plana y estable donde no pueda caerse o ser halado por el cordón. Coloque el ventilador en la base de manera que la parte de atrás del ventilador (con la caja del motor visible) quede frente a la parte de atrás de la base (el lado donde están ubicadas las patas de goma). Alinee las lengüetas en el ventilador con las ranuras en la base. Presione firmemente en la parte de arriba del ventilador hasta que oiga un sonido, indicando que las lengüetas en el ventilador estén firmemente aseguradas en las ranuras de la base (Fig. 2). Examine el ajuste para la inclinación colocando una mano en el asa para llevar y manipulando el ventilador hacia atrás y hacia adelante con la otra (Fig. 3).

INSTRUCCIONES DE FUNCIONAMIENTO

1. Enchufe el ventilador en un tomacorriente eléctrico.
2. Encienda el ventilador y seleccione la velocidad deseada.
3. Ajuste la inclinación de su preferencia.

CUIDADO Y LIMPIEZA

Este artefacto requiere un mínimo de mantenimiento y no tiene piezas que puedan ser reparadas. No trate de repararlo usted mismo. Si necesita reparación remítalo a personas calificadas.

Este ventilador está permanentemente lubricado y no necesitará lubricación adicional.

PARA LIMPIAR: Antes de limpiarlo, apague el ventilador y desenchúfelo. Sacuda el exceso de polvo con un paño libre de pelusas.

Para asegurar una adecuada circulación de aire al motor, mantenga los orificios ubicados en la parte de atrás del motor libre de acumulación de polvo. Una aspiradora puede ser usada para limpiar estos orificios. No sumerja el ventilador en agua o cualquier otro líquido. No deje que ningún líquido entre en el ventilador o motor.

PARA GUARDAR: Asegúrese de limpiar el ventilador antes de guardarlo. Siempre guárdelo en un lugar seco. Nunca lo guarde mientras esté enchufado. **Nunca enrolle el cordón ajustadamente alrededor del ventilador** y no ponga presión sobre el cordón en la parte que entra en el ventilador ya que esto podría ocasionar que el cordón se desgaste y se rompa.

INSTRUCCIONES DE SEGURIDAD

Si el cordón estuviera dañado deberá ser reemplazado por el fabricante o su agente de servicio o por una persona calificada para evitar un peligro.

Cuando esté usando aparatos eléctricos, debe seguir siempre medidas básicas de seguridad, incluyendo las siguientes:

■ LEA Y CONSERVE ESTAS INSTRUCCIONES.

- Use el ventilador únicamente para los fines descritos en este manual de instrucción.
- Para protegerse contra descargas eléctricas, no sumerja la unidad, enchufe o cordón en agua o rocíe con cualquier líquido.
- Supervise cuidadosamente su manejo cuando este aparato esté siendo usado por, en o cerca de niños.
- Desenchúfelo cuando no esté en uso, cuando mueva el ventilador de un lado o otro, antes de poner o sacar partes o antes de limpiarlo.
- Nunca introduzca los dedos, lápices o cualquier otro objeto a través de la parrilla cuando el ventilador esté funcionando.
- Desconecte el ventilador antes de limpiarlo.
- Asegúrese de que el ventilador esté en una superficie sólida cuando esté funcionando para evitar el riesgo de que se caiga.
- No use el ventilador en la ventana. La lluvia podría causar un peligro eléctrico.
- No lo haga funcionar en presencia de explosivos y/o gases inflamables.

FULL THREE-YEAR WARRANTY

Applica warrants this product against any defects that are due to faulty material or workmanship for a three-year period after the original date of consumer purchase. This warranty does not include damage to the product resulting from accident or misuse. If the product should become defective within the warranty period, we will repair it or elect to replace it free of charge.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state or province to province. Answers to any questions regarding warranty or service locations may be obtained by calling Consumer Assistance and Information: 203-926-3230.

- No coloque el ventilador o cualquier otra parte cerca de llamas, utensilios de cocina u otros artefactos calientes.
- No haga funcionar ningún artefacto con el cordón o el enchufe dañado, después de mal funcionamiento del si se ha caído o dañado de cualquier manera.
- No deje que el cordón cuelgue sobre el filo de la mesa o mostrador o que toque superficies calientes.
- Para desconectarlo, empuñe el enchufe y retírelo del tomacorriente. No tire del cordón.
- Uselo siempre en superficies secas y planas.
- Este producto es solamente para uso doméstico y no para uso comercial o industrial.
- No use el ventilador cerca de cortinas, plantas, tratamientos para ventanas, etc.

ADVERTENCIA: Para reducir el riesgo de descargas eléctricas y lesiones a personas, no use este ventilador en una ventana.

CONSERVE ESTAS INSTRUCCIONES

ENCHUFE POLARIZADO

Este artefacto tiene un enchufe polarizado (una hoja es más ancha que la otra). Como medida de seguridad, este enchufe sólo debe usarse en un tomacorriente polarizado en un sólo sentido. Si no entrara en el tomacorriente, invierta el enchufe y trate nuevamente. Si aún así no entrara, busque la ayuda de un electricista calificado. No intente anular este dispositivo de seguridad.

TRES AÑOS COMPLETO DE GARANTIA

Applica garantiza este producto contra cualquier defecto originado por fallas en los materiales o en la mano de obra por un período de tres años a partir de la fecha original de compra. Esta garantía no incluye daños al producto ocasionados por accidentes o mal uso. Si el producto resulta con defectos dentro del período de garantía, lo repararemos o reemplazaremos de ser necesario, sin cargo alguno.

Esta garantía le otorga derechos legales específicos, y usted podría tener otros derechos que pueden variar de estado a estado o de provincia a provincia en su país. Si tiene alguna pregunta acerca de la garantía o de la localidad de las sucursales de servicio, dirígase al centro de información y asistencia para el consumidor al número: 203-926-3230.

IMPORTANT SAFEGUARDS

If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or similarly qualified person in order to avoid a hazard.

When using electrical appliances, basic safety precautions should always be followed, including the following:

■ READ AND SAVE THESE INSTRUCTIONS.

- Use fan only for intended use, as described in instruction manual.
- To protect against electrical shock, do not immerse unit, plug, or cord in water or spray with liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use, when moving fan from one location to another, before putting on or taking off parts and before cleaning.
- Never insert fingers, pencils or any other objects through the grille when fan is running.
- Disconnect fan before cleaning.
- Be sure fan is on a stable surface when operating to avoid chance of overturning.
- Do not use fan in a window. Rain may cause an electrical hazard.
- Do not operate in the presence of explosive and/or flammable fumes.
- Do not place fan or any parts near an open flame, cooking or other heating appliances.

- Do not operate any appliance with a damaged cord or plug, after the appliance malfunctions or has been dropped or damaged in any manner.
 - Do not let cord hang over edge of table or counter or touch hot surfaces.
 - To disconnect, grip plug and pull from wall outlet. Never yank on cord.
 - Always use on dry, level surface.
 - This product is intended for household use only and not for commercial or industrial use.
 - Do not use fan near curtains, plants, window treatments, etc.
- WARNING: To reduce the risk of electrical shock, and injury to persons, do not use in a window.**


SAVE THESE INSTRUCTIONS

POLARIZED PLUG

This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug fits in a polarized outlet only one way. If the plug does not fit into the outlet, reverse the plug and try again. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

SAVE THIS USE AND CARE BOOK
CONSERVE ESTE INSTRUCTIVO

10" SLIM LINE BOX FAN VENTILADOR DE 10" EN CAJA DE LINEA ESTILIZADA

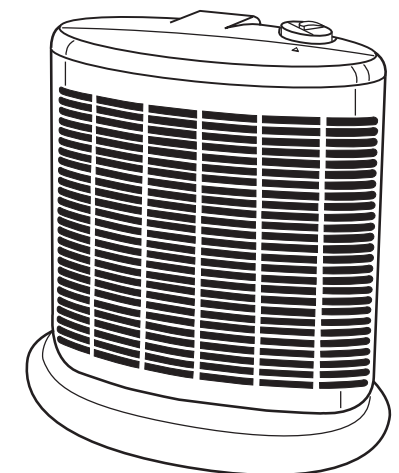

Printed in/Impreso en Hong Kong

R12000/9-22-87E/S

BF-1010

