

Evolve™ Grill
MINI-BURGER INSERT

Cook what you love, only healthier

Compatible with the Evolve Grill series, Kitchen Bistro, and Next Grilleration G3, G4 and G5 grills (model numbers GRP4EMB, GRP4EP, GRP4EWS, GRP90WGR, GRP93G, GRP94WR).


GETTING STARTED

- Remove all packing material and, if applicable, any stickers from the product; remove and save literature.
- For additional information go to www.georgeforemancooking.com.
- Wash mini-burger insert and cool-touch handle in hot soapy water, rinse and dry thoroughly.

Note: Although the insert is dishwasher-safe, we recommend hand washing to preserve its appearance. In the dishwasher, the metal may get a cloudy film; this film will not affect the performance.

ATTACHING THE PLATES


Important: Your grill should always be used with 2 plates securely attached. When using the mini-burger insert, attach the cross-hatch grill or Panini top plate, plus the bottom grill plate.

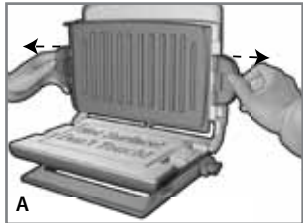

1. To attach the top plate, pull out on both release handles, set the plate flat against the inside frame and release the handles (A).



2. Repeat with the bottom grill plate (B).

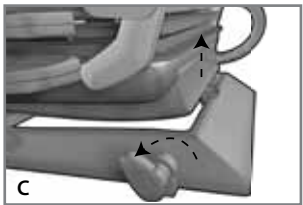

3. Move the adjustable slope switch on the back right side of the grill forward, so the grill is in the sloped position (C). This allows fat and grease to drain away as you cook.


Tip: Before placing the mini-burger insert, you may wish to use it to shape your mini-burger patties; this will provide

better looking patties once cooked. If using the insert to shape, take about 2 ounces of meat per patty, place in the insert and press to shape. Once shaped, remove the patties so you can set the insert on the grilling surface and preheat.




4. Attach the cool-touch handle to the mini-burger insert by sliding the flat end into the indented opening in the plate (D).

Important: Be sure the handle is assembled and fastened properly.

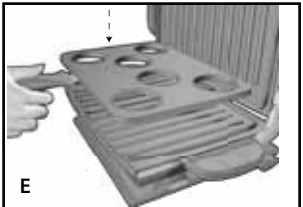

5. Set the mini-burger insert onto the bottom grill plate and then remove the handle (E).

Caution: Remove the cool-touch handle from the mini-burger plate when cooking.

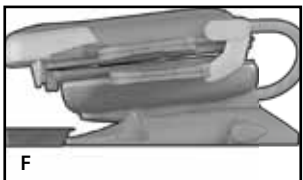

6. Place the drip tray in front of the grill (F).

USING YOUR MINI-BURGER INSERT

1. Plug in the grill and press the power button to turn on.
2. Set temperature at 425° F and allow grill to preheat for at least 5 minutes.

CUSTOMER CARE LINE:

USA/Canada 1-800-231-9786
Accessories/Parts (USA/Canada)
Accesorios/Partes (EE.UU./Canadá)
1-800-738-0245

For online customer service and to register your product, go to www.prodprotect.com/applica

3-YEAR LIMITED WARRANTY

Find healthy recipes at www.georgeforemancooking.com

3. Using a pot holder, carefully open the preheated grill.
4. Carefully place about 2 ounces of meat into each of the cutouts on the mini-burger insert.

Note: Do not overload the cooking plate.

5. Close the grill cover.

Important: Do not leave the appliance unattended during use.

6. Mini-burgers take about 4 minutes to cook. Set the countdown timer on the top of the grill and a signal bell will sound when cooking is complete.

7. Using a pot holder, carefully open the grill cover.

8. When finished cooking, use the cool-touch handle to remove the mini-burger insert from on top of the grill plate.

9. Set mini-burger insert on a wire rack to cool, then remove the mini-burgers using a plastic spatula or another non-metallic utensil.

Note: Always use heatproof plastic, silicone or wood utensils to avoid scratching the nonstick surface. Never use metal skewers, tongs, forks or knives.

10. Press the power button and unplug to turn the grill off.

Care and Cleaning

CLEANING THE MINI-BURGER INSERT

1. Before cleaning, unplug grill from wall outlet and allow to cool.

Caution: Do not remove the plates while the appliance is hot. Always allow them to cool to room temperature before removing or cleaning.

2. To remove the grill plates, pull out on the release handles on both sides of the plates and remove from the grill.
3. The mini-burger insert, cool-touch handle and plates can be washed in the dishwasher or by hand with hot, soapy water.

Note: Dishwasher detergent may cause oxidation on uncoated side of cooking plates. This is not harmful but may change the appearance of your plates.

4. Always dry plates thoroughly before reattaching.

5. To remove stubborn buildup, use a nylon or nonmetallic scrubbing pad to clean.

Important: Do not use metallic scrubbing pads, steel wool or any abrasive cleaners to clean any part of your grill; use only nylon or nonmetallic scrubbing pads.

NEED HELP?

For service, repair or any questions regarding your appliance, call the appropriate 800 number on cover of this book. Please DO NOT return the product to the place of purchase. Also, please DO NOT mail product back to manufacturer, nor bring it to a service center. You may also want to consult the website listed on the cover of this manual.

Three-Year Limited Warranty (Applies only in the United States and Canada)

What does it cover?

- Any defect in material or workmanship provided; however, Applica's liability will not exceed the purchase price of product.

For how long?

- Three years from the date of original purchase with proof of such purchase.

What will we do to help you?

- Provide you with a reasonably similar replacement product that is either new or factory refurbished.

How do you get service?

- Save your receipt as proof of date of sale.
- Check our on-line service site at www.prodprotect.com/applica,

or call our toll-free number, 1-800-231-9786, for general warranty service.

- If you need parts or accessories, please call 1-800-738-0245.

What does your warranty not cover?

- Damage from commercial use
- Damage from misuse, abuse or neglect
- Products that have been modified in any way
- Products used or serviced outside the country of purchase
- Glass parts and other accessory items that are packed with the unit
- Shipping and handling costs associated with the replacement of the unit
- Consequential or incidental damages (Please note, however, that some states do not allow the exclusion or limitation of consequential or incidental damages, so this limitation may not apply to you.)

How does state law relate to this warranty?

- This warranty gives you specific legal rights, and you may also have other rights that vary from state to state or province to province.

Compatible con la serie de parrillas Evolve Grill, Kitchen Bistro y Next Grillation G3, G4 y G5 (modelos GRP4EMB, GRP4EP, GRP4EWS, GRP90WGR, GRP93G y GRP94WR).



PARA COMENZAR

- Retire todo el material de empaque y cualquier etiqueta que tenga el producto; retire y guarde el material de lectura.
- Por favor, ir a www.prodprotect.com/applica para registrar su garantía; para información adicional, ir a www.georgeforemancooking.com.
- Lave el molde para mini hamburguesas con agua caliente jabonada y séquelo bien.



Nota: Aunque el molde son lavables en la máquina lavaplatos, le recomendamos fregarlas a mano para que conserve su apariencia. Al lavarlo en la máquina lavaplatos se le forma una capa turbia al metal que no afecta el rendimiento del electrodoméstico.

COLOCACIÓN DE LAS PLACAS

Importante: Este aparato debe utilizarse siempre con 2 placas firmemente aseguradas. Al usar el molde para mini hamburguesas, adjunte la placa superior rayada o la placa para Panini de la parrilla, más la placa inferior de la parrilla.

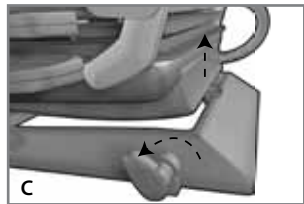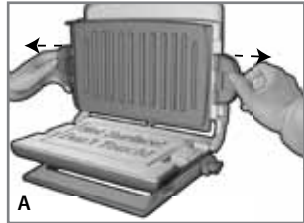

hamburguesas que luzcan mejor una vez que las cocine. Si usa el molde para darle forma a la carne, tome alrededor de 2 onzas de carne por hamburguesa, colóquelas en el molde y presione para darles forma. Una vez que tengan forma, retire las hamburguesas para que pueda colocar el molde en la superficie de la parrilla y que se precaliente.

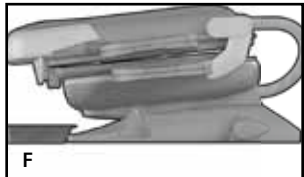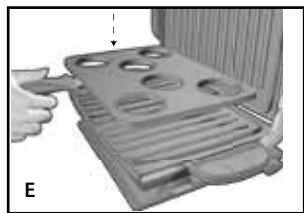

USO DEL MOLDE PARA MINI HAMBURGUESAS

1. Enchufe la parrilla y presione el botón de funcionamiento para encenderla.
2. Configure la temperatura a 425° F y permita que la parrilla se caliente durante al menos 5 minutos.
3. Usando un agarrador, abra con cuidado la parrilla precalentada.
4. Cuidadosamente coloque alrededor de 2 onzas de carne dentro de cada espacio del molde para mini hamburguesas.

Nota: No sobrecargue la placa de cocción.

5. Cierre la tapa.

Importante: No deje el electrodoméstico sin supervisión durante su uso.

6. Las mini hamburguesas se toman alrededor de 4 minutos para cocinarse. Configure el reloj automático en la parte de arriba de la parrilla y la señal auditiva le avisará cuando termine el proceso de cocción.

7. Usando un agarrador, abra con cuidado la tapa.
 8. Cuando termine de cocinar, use el asa fría al tacto para retirar el molde para mini hamburguesas de encima de la placa de la parrilla.
 9. Coloque el molde para mini hamburguesas en una rejilla donde estas se enfríen, antes de retirarlas con una espátula plástica u otro utensilio que no sea de metal.
- Nota:** Siempre utilice utensilios de plástico, silicona o madera resistentes al calor para evitar rayar la superficie antiadherente de las planchas para asar. Nunca use pinchos, pinzas, tenedores o cuchillos de metal.
10. Presione el botón de funcionamiento y desenchufe la parrilla para apagar.

Cuidado y limpieza

LIMPIEZA DEL MOLDE PARA MINI HAMBURGUESAS

1. Antes de limpiar, desenchufe la parrilla del tomacorriente de la pared y deje que se enfríe.

Precaución: No retire las placas mientras el electrodoméstico esté caliente. Siempre permita que se enfríen hasta alcanzar la temperatura ambiente antes de retirarlas o limpiarlas.

2. Para retirar las placas de la parrilla, hale las asas a cada lado hacia afuera y retírelas de la parrilla.
3. El molde y las placas se pueden lavar en la máquina lavaplatos o a mano con agua caliente jabonada.

Nota: El detergente de fregar platos puede oxidar la parte de las placas sin capa protectora. Esto no es dañino.

4. Siempre séquelas completamente antes de colocarlas en la parrilla nuevamente.
5. Para eliminar las acumulaciones difíciles, use una esponjilla de nailon o no metálica para limpiar las placas de la parrilla.

Importante: No use esponjillas metálicas, lana de acero ni limpiadores abrasivos para limpiar ninguna parte de su plancha; use únicamente esponjillas de nailon o no metálicas.

¿NECESITA AYUDA?

Para servicio, reparaciones o preguntas relacionadas al producto, por favor llame gratis al número “800” que aparece en la cubierta de este manual. No devuelva el producto al establecimiento de compra. No envíe el producto por correo al fabricante ni lo lleve a un centro de servicio. También puede consultar el sitio web que aparece en la cubierta de este manual.

Tres años de garantía limitada
(Aplica solamente en Estados Unidos o Canadá)

¿Qué cubre la garantía?

- La garantía cubre cualquier defecto de materiales o de mano de obra. Applica no se responsabiliza por ningún costo que exceda el valor de compra del producto.

¿Por cuánto tiempo es válida la garantía?

- Por tres años a partir de la fecha original de compra mientras que tenga una prueba de la compra.

¿Qué clase de asistencia recibe el consumidor?

- El consumidor recibe un producto de reemplazo nuevo o restaurado de fábrica, parecido al original.

¿Cómo se obtiene el servicio necesario?

- Conserve el recibo original como comprobante de la fecha de compra.
- Se puede visitar el sitio web de asistencia al consumidor www.prodprotect.com/applica, o se puede llamar gratis al número 1-800-231-9786, para obtener información relacionada al servicio de garantía.

- Si necesita piezas o accesorios, por favor llame gratis al 1-800-738-0245.

¿Qué aspectos no cubre esta garantía?

- Los daños al producto ocasionados por el uso comercial
- Los daños ocasionados por el mal uso, abuso o negligencia
- Los productos que han sido alterados de cualquier manera
- Los productos utilizados o reparados fuera del país original de compra
- Las piezas de vidrio y demás accesorios empacados con el aparato
- Los gastos de tramitación y embarque relacionados con el reemplazo del producto
- Los daños y perjuicios indirectos o incidentales (sin embargo, por favor observe que algunos estados no permiten la exclusión ni la limitación de los daños y perjuicios indirectos ni incidentales, de manera que esta restricción podría no aplicar a usted).

¿Qué relación tiene la ley estatal con esta garantía?

- Esta garantía le otorga derechos legales específicos y el consumidor podría tener otros derechos que varían de una región a otra.



© 2010 Applica Consumer Products, Inc.

Made in People’s Republic of China
Printed in People’s Republic of China

Fabricado en la República Popular de China
Impreso en la República Popular de China