
## CM6000 Café Select

## De-scaling With Auto Clean<sup>TM</sup>

Over time, calcium deposits or "scale" may build up in your brewer. Scale is non-toxic but if left unattended can hinder brewer performance. Regularly de-scaling your brewer helps to maintain quality coffee as well as the lifespan of the heating element, and other internal parts that come in contact with water throughout the brew process. To make the de-scaling process as effortless as possible, an Auto Clean<sup>TM</sup> system has been programmed into your Café Select<sup>TM</sup>.

To ensure a quality brew and long lifespan of your Café Select<sup>TM</sup>, the Auto Clean<sup>TM</sup> button will alert you when it's time to descale.

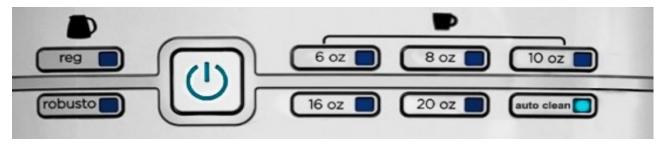

## **Descale Instructions**

- 1. Fill the water reservoir approximately half-way with white vinegar.
- 2. Fill the remaining half of the water reservoir with cool water.
- 3. Place a #4 paper cone filter into the carafe side brew basket, close the lid and place the empty carafe onto the carafe plate.
- 4. Place the single serve Pod adapter into the single serve brew basket cavity and lock the lid closed.
- 5. Place a mug or other receptacle that holds a minimum of 20 ounces of liquid onto the single serve mug base.
- 6. Press the Auto Clean<sup>TM</sup> button to start the Auto Clean<sup>TM</sup> system. Note: The Auto Clean<sup>TM</sup> light will flash during the cycle to indicate that the Auto Clean<sup>TM</sup> system is activated. The Robusto and 10 oz. lights also turn on and off during the cycle. The Robusto light indicates that the carafe side is being cleaned. The 10 oz light indicates that the single serving side is being cleaned.
- 7. Leave unit to Auto Clean<sup>TM</sup> for approximately 80 minutes.
- 8. When Auto Clean™ has finished, the Auto Clean™ light will turn off.
- 9. Discard the liquid in both the carafe and single serve mug or receptacle.
- 10. Using water only, run a minimum of two full brew cycles through the full carafe.
- 11. Using water only, run a minimum of two 10 ounce brews through the single serve unit.
- 12. Wash, rinse and dry each removable piece of your Café Select™ (see the Basic Cleaning section of this guide for specific instructions).